

UNIDEN PROGRAMMING CONTROL CODES FOR USE WITH UNIDEN SCANNERS

End User License Agreement **UNIDEN AMERICA CORPORATION**

NOTICE TO USER: THIS END USER LICENSE AGREEMENT ("EULA") IS A LEGAL AGREEMENT BETWEEN YOU AND UNIDEN. PLEASE READ THIS CAREFULLY BEFORE USING THE UNIDEN CODE. BY CLICKING THE "I AGREE TO THE TERMS OF THIS LICENSE AGREEMENT", OR BY USING ALL OR ANY PORTION OF THE UNIDEN CODE, YOU ARE CONFIRMING YOUR ACCEPTANCE OF THE UNIDEN CODE AND ALL THE TERMS AND CONDITIONS OF THIS AGREEMENT. IF YOU DO NOT AGREE, DO NOT USE THE UNIDEN CODE. CLICK THE "I DO NOT AGREE TO THE TERMS OF THIS LICENSE AGREEMENT" FOR THE INSTALLATION PROCESS TO TERMINATE.

1. DEFINITIONS

- (A) "Uniden Code" means Uniden proprietary programming codes and commands used to control Uniden's scanner products.
- (B) "Use" or "Using" means to access, install, download, copy or otherwise benefit from using the functionality of the Uniden Code.
- (C) "Computer" means an electronic device that accepts information in digital or similar form and manipulates it for a specific result based on a sequence of instructions.
- (D) "Uniden" means Uniden America Corporation, a Delaware corporation, located at 4700 Amon Carter Boulevard, Fort Worth, Texas 76155, and its licensors, if any.

2. UNIDEN CODE LICENSE GRANTS

- (A) You may utilize the Uniden Code on an "as is", at-will, royalty-free, personal, non-assignable, non-exclusive basis solely for the purpose of creating software or firmware products intended to extend the functionality of Uniden scanner products, or provide compatibility of Uniden scanner products with a PC or other control devices.
- (B) You agree that the Uniden Code will not be used to create a competing scanner product.

- (C) You agree not to use the Uniden Code functionality for purposes other than to control one or more of the Uniden scanner models to which the codes apply.
- (D) You acknowledge that the Uniden Code is provided “as-is” and that Uniden has no obligation to provide any additional support in the use of the Uniden Code beyond the disclosed documentation.
- (E) User acknowledges that, while reasonable efforts have been taken to ensure accuracy in the supplied documentation, said documents have been subjected to one or more translation stages that might have resulted in unclear, inaccurate, or incomplete information and that Uniden is under no obligation to correct or clarify supplied documentation of the Uniden Code.
- (F) You acknowledge that the Uniden Code is the sole property of Uniden.
- (G) You agree that the Uniden Code, documentation thereof and the related information provided by Uniden are confidential and proprietary information of Uniden (collectively “Uniden Confidential Information”).
- (H) You agree to mark any software containing all or part of the Uniden Code, and the written user materials accompanying units that incorporate Uniden Code with notices indicating, “This product contains Uniden proprietary and/or copyright control codes. Used with permission.”
- (I) You agree that this EULA does not need to be signed for it to take effect.
- (J) You agree to use the Uniden Code in its regular and proper manner.
- (K) You acknowledge that Uniden may update, modify or revise the Uniden Code at any time and shall not be obligated to provide such updates, modifications or revisions to you.
- (L) You acknowledge that the permission granted herein does not constitute endorsement by Uniden of any software or firmware products you may create in accordance with the purpose stated in section A herein; and you are solely responsible for the configuration of said software or firmware and/or any service matters relating to said software or firmware and/or any Uniden Code used with said software or firmware.
- (M) This license is personal to you and you may make copies of the Uniden Code only for your personal use.

- (N) You agree that Uniden may audit your use of the Uniden Code for compliance with these terms at any time.
- (O) You agree and represent that any products you create which incorporate the Uniden Code are in compliance with all applicable laws.
- (P) You shall defend, indemnify and hold harmless Uniden, its subsidiaries and affiliates, and all agents, employees, officers and directors of Uniden, its subsidiaries and affiliates, from all expenses, losses, costs, damages or liability (including reasonable attorneys' fees and court costs and expenses) arising out of or in connection with any claim or action in connection with the use of any products you create which incorporate the Uniden Code.

3. LICENSE RESTRICTIONS

- (A) Other than as set forth in Section 2 of this EULA, you may not make or distribute copies of the Uniden Code, or electronically transfer the Uniden Code from one computer to another or over a network.
- (B) You may not alter, merge, modify, adapt or translate the Uniden Code, or decompile, reverse engineer, disassemble, or otherwise reduce the Uniden Code to a human-perceivable form.
- (C) You may not sell, rent, lease, assign or sublicense the Uniden Code.
- (D) You may not modify the Uniden Code or create derivative works based upon the Uniden Code.
- (E) You may not export the Uniden Code into any country prohibited by the United States Export Administration Act and the regulations thereunder.
- (F) In the event that you fail to comply with this EULA, Uniden may terminate the license and you must destroy all copies of the Uniden Code (with all other rights of both parties and all other provisions of this EULA surviving any such termination).

4. OWNERSHIP

The foregoing license gives you limited license to use the Uniden Code. Uniden retains all right, title and interest, including all copyright and intellectual property rights, in and to, the Uniden Code or any derivative works, including but not limited to the structure and organization of the Uniden Code, and all copies thereof. All rights not specifically granted in this EULA, including Federal and

International Copyrights, are reserved by Uniden. Uniden reserves the right to terminate this license at any time.

5. WARRANTY DISCLAIMER

- (A) THE UNIDEN CODE IS PROVIDED TO YOU ON AN "AS-IS" BASIS. UNIDEN PROVIDES NO TECHNICAL SUPPORT OR WARRANTIES FOR THE UNIDEN CODE.
- (B) UNIDEN AND ITS SUPPLIERS DISCLAIM ALL WARRANTIES AND REPRESENTATIONS (EXPRESS OR IMPLIED WHETHER BY STATUTE, COMMON LAW, CUSTOM, USAGE OR OTHERWISE) INCLUDING THE WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. ALSO, THERE IS NO WARRANTY OF SATISFACTORY QUALITY, INTEGRATION, NON-INFRINGEMENT OF THIRD PARTY RIGHTS AND TITLE OR QUIET ENJOYMENT. UNIDEN DOES NOT WARRANT THAT THE UNIDEN CODE IS ERROR-FREE OR WILL OPERATE WITHOUT INTERRUPTION. NO RIGHTS OR REMEDIES REFERRED TO IN ARTICLE 2A OF THE UCC WILL BE CONFERRED ON YOU UNLESS EXPRESSLY GRANTED HEREIN.
- (C) IF APPLICABLE LAW REQUIRES ANY WARRANTIES WITH RESPECT TO THE UNIDEN CODE, ALL SUCH WARRANTIES ARE LIMITED IN DURATION TO THIRTY (30) DAYS FROM THE DATE OF DELIVERY.
- (D) NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY UNIDEN, ITS DEALERS, SUPPLIERS, DISTRIBUTORS, AGENTS OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF ANY WARRANTY PROVIDED HEREIN.

6. LIMITATION OF LIABILITY

- (A) NEITHER UNIDEN NOR ITS SUPPLIERS SHALL BE LIABLE TO YOU OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE, COVER OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR THE INABILITY TO USE EQUIPMENT OR ACCESS DATA, LOSS OF BUSINESS, LOSS OF PROFITS, BUSINESS INTERRUPTION OR THE LIKE), ARISING OUT OF THE USE OF, OR INABILITY TO USE, THE UNIDEN CODE AND BASED ON ANY THEORY OF LIABILITY INCLUDING BREACH OF CONTRACT, BREACH OF WARRANTY, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY OR OTHERWISE, EVEN IF UNIDEN OR ITS REPRESENTATIVES HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES AND EVEN IF A REMEDY SET

FORTH HEREIN IS FOUND TO HAVE FAILED OF ITS ESSENTIAL PURPOSE.

- (B) UNIDEN'S TOTAL LIABILITY TO YOU FOR ACTUAL DAMAGES FOR ANY CAUSE WHATSOEVER WILL BE LIMITED TO THE GREATER OF \$10 OR THE AMOUNT PAID BY YOU FOR THE UNIDEN CODE THAT CAUSED SUCH DAMAGE.
- (C) THE FOREGOING LIMITATIONS ON LIABILITY ARE INTENDED TO APPLY TO THE WARRANTIES AND DISCLAIMERS ABOVE AND ALL OTHER ASPECTS OF THIS EULA.

7. COMPLIANCE WITH LAWS

Uniden and its affiliates, which offer the Uniden Code to you, are headquartered in the United States. Uniden makes no representation that the Uniden Code is appropriate or legal for use inside or outside the United States. You are responsible for all compliance with your local laws, and use of the Uniden Code where illegal is expressly prohibited.

8. GOVERNING LAW AND VENUE

This EULA shall be interpreted, construed and governed by the laws of the State of Texas, USA, without reference to its laws relating to conflicts of law and not including the provisions of the 1980 United Nations Convention on Contracts for the International Sale of Goods. Venue for all disputes arising under this Agreement shall lie exclusively in the District Courts of the State of Texas in Tarrant County or the Federal District Courts of the Northern District of Texas (as permitted by law) and each party agrees not to contest the personal jurisdiction of these courts. Notwithstanding the foregoing, however, Uniden shall have the right to commence and prosecute any legal or equitable action or proceeding before any non-US court of competent jurisdiction to obtain injunctive or other relief in the event that, in the opinion of Uniden, such action is necessary or desirable.

9. GENERAL PROVISIONS.

This EULA contains the complete agreement between the parties with respect to the subject matter hereof, and supersedes all prior or contemporaneous agreements or understandings, whether oral or written. You agree that any varying or additional terms contained in any purchase order or other written notification or document issued by you in relation to the Uniden Code licensed hereunder shall be of no effect. The failure or delay of Uniden to exercise any of its rights under this EULA or upon any breach of this EULA shall not be deemed a waiver of those rights or of the breach.

If any provision of this EULA shall be held by a court of competent jurisdiction to be contrary to law, that provision will be enforced to the maximum extent permissible, and the remaining provisions of this EULA will remain in full force and effect.

All questions concerning this EULA shall be directed to: Uniden America Corporation, 4700 Amon Carter Boulevard, Fort Worth, Texas 76155.

UNIDEN and other trademarks contained in the Uniden Code are trademarks or registered trademarks of Uniden America Corporation in the United States and/or other countries. You may not remove or alter any trademark, trade names, product names, logo, copyright or other proprietary notices, legends, symbols or labels in the Uniden Code. This EULA does not authorize you to use the UNIDEN name or any of their respective trademarks.

Trademarks and registered trademarks:

All products or service names mentioned in the Uniden Code are trademarks or registered trademarks of Uniden America Corporation.

Copyright © 2003-2006

Uniden America Corporation

ALL RIGHTS RESERVED

7.11. REMOTE COMMAND

【 Remote Communication Format 】

BPS rate : 4800/9600/19200/38400/57600/115200 bps
Start/Stop bit : 1 bit, 1 bit
Data Length : 8 bit
Parity Check : None
Code : ASCII
Flow Control : None
Return Code : Carriage Return only

【 FORMAT OF THIS DOCUMENT 】

<COMMAND NAME>

Summary explanation of the function of the command

Controller → Radio
Command format
Radio → Controller
Response format

NOTE

1. Any command is required to wait a response from the scanner, then, next command will be acceptable.
2. All memory access commands are acceptable in only Program Mode.
Use PRG command to enter Program Mode, and EPG command to exit.
3. Error message isn't described in this document, but the scanner returns error message to the controller as follows.
 - 1) Command format error / Value error : ERR[¥r]
 - 2) The command is invalid at the time : NG[¥r]
 - 3) Framing error : FER[¥r]
 - 4) Overrun error : ORER[¥r]
4. [¥r] means "to hit the Enter key" or "to send the Return code".
5. Several commands or responses with long format are described like multi-line because of the page width but their formats are only single line, actually.
6. In set command, only "," parameters are not changed.
7. The set command is aborted if any format error is detected.
8. [INDEX] or [xxx_INDEX] is the index of internal memory chain.
Dynamic Memory Allocation Structure always uses it as a handle to access data and to trace forward/reverse or up/down index.
The range of the index is from 1 to maximum memory block (about 7600).
9. [FRQ], [BASEx] and [LIMIT_x] are frequency format.
It is showed by 8 digit number without decimal point.
The order of the digits is from 1 GHz digit to 100 Hz digit.
ex. 08510125 means 851.0125MHz
10. [TGID] shows TGID format. The formats depend on Trunked System Type.
See another Appendix to get further information.
11. [NAME] shows each custom name. If user set only space character, the name will return to default name.
12. [LATITUDE] shows North or South Latitude.
The data shows "DDMMSSsL" at DMS Format.
DD : Degree (00 - 90 : Double figure fixation)

MM : Minute (00 - 59 : Double figure fixation)
 SSss : Second (SS : 00 - 59 : Double figure fixation)
 (ss : 00 - 99 : Double figure fixation)
 L : Bearing (N : North / S : South)
 ex) "North Latitude 40°42'51.12" shows "40425112N".

13. [LONGITUDE] shows West or East Longitude.

The data shows "DDMMSSssL" at DMS Format.

DDD : Degree (000 - 180 : Triple figure fixation)
 MM : Minute (00 - 59 : Double figure fixation)
 SSss : Second (SS : 00 - 59 : Double figure fixation)
 (ss : 00 - 99 : Double figure fixation)
 L : Bearing (W : West / E : East)
 ex) "West Longitude 74°00'23.05" shows "074002305W".

Remote Command List

No.	Category	Command	Function	Program Mode Only
1	Remote Control	GID	Get Current TalkGroup ID Status	
2		KEY	Push KEY	
3		QSH	Go to quick search hold mode	
4		STS	Get Current Status	
5		GLG	Get Reception Status	
6	System Information	MDL	Get Model Info	
7		VER	Get Firmware Version	
8	Program Control Mode	PRG	Enter Program Mode	
9		EPG	Exit Program Mode	
10	System Settings	BKL	Get/Set Backlight	O
11		CLR	Clear All Memory	O
12		KBP	Get/Set Key Beep	O
13		OMS	Get/Set Opening Message	O
14		PRI	Get/Set Priority Mode	O
15		AGV	Get/Set Auto Gain Control	O
16		SCT	Get System Count	O
17	Scan Settings	SIH	Get System Index Head	O
18		SIT	Get System Index Tail	O
19		QSL	Get/Set System/Site Quick Lockout	O
20		QGL	Get/Set Group Quick Lockout	O
21		CSY	Create System	O
22		DSY	Delete System	O
23		SIN	Get/Set System Info	O
24		TRN	Get/Set Trunk Info	O
25		AST	Append Site	O
26		SIF	Get/Set Site Info	O
27		MBP	Get/Set Motorola Band Plan	O
28		TFQ	Get/Set Trunk Frequency Info	O
29		AGC	Append Channel Group	O
30		AGT	Append TalkGroup ID Group	O
31		DGR	Delete Group / Site	O
32		GIN	Get/Set Group Info	O
33		ACC	Append Channel / Trunk Frequency	O
34		ACT	Append TalkGroup ID	O
35		DCH	Delete Channel	O
36		CIN	Get/Set Channel Info	O
37		TIN	Get/Set TalkGroup ID Info	O
38		GLI	Get Lockout TalkGroup ID (for Rvw L/O ID)	O
39		SLI	Get Search L/O TalkGroup ID	O
40		ULI	Unlock TalkGroup ID (for Rvw L/O ID)	O
41		LOI	Lockout ID (TalkGroup ID)	O
42		REV	Get Rev Index	O
43		FWD	Get Fwd Index	O
44		RMB	Get Remains of Memory Block	O
45		MEM	Get Memory Used	O
46	Location Setting	LIH	Get Location Alert System Index Head	O

47		LIT	Get Location Alert System Index Tail	O
48		CLA	Create Location Alert System	O
49		DLA	Delete Location Alert System	O
50		LIN	Get/Set Location Alert System Info	O
51	Search / Close Call Settings	SCO	Get/Set Search/Close Call Settings	O
52		BBS	Get/Set Broadcast Screen Band Settings	O
53		SHK	Get / Set Search Key Settings	O
54		GLF	Get Global Lockout Freq	O
55		ULF	Unlock Global L/O	O
56		LOF	Lock Out Frequency	O
57		CLC	Get/Set Close Call Settings	O
58	Service Search Settings	SSP	Get/Set Service Search Settings	O
59	Custom Search Settings	CSG	Get/Set Custom Search Group	O
60		CSP	Get/Set Custom Search Settings	O
61	Weather Settings	WXS	Get/Set Weather Settings	O
62		SGP	Get/Set SAME Group Settings	O
63	Tone-Out Setting	TON	Get/Set Tone-Out Settings	O
64	LCD Contrast Settings	CNT	Get/Set LCD Contrast Settings	O
65	LCD Upside-down Settings	DUD	Get/ Set LCD Upside-down Settings	O
66	Scanner Option Settings	SCN	Get/Set Scanner Option Settings	O
67	Volume Level Settings	VOL	Get/Set Volume Level Settings	
68	Squelch Level Settings	SQL	Get/Set Squelch Level Settings	
69	GPS Settings	GDO	Get/Set GPS Format	O
70		GGA	Get GGA Data from GPS	
71		RMC	Get RMC Data from GPS	
72	Bear Tracker Settings	STT	Get/Set State Setting	O
73		BTL	Get/Set Bear Tracker Lockout Status	O
74		BTS	Get/Set Bear Tracker Option Settings	O
75	TEST	WIN	Get Window Voltage	

<COMMAND GID>

Get Current TGID Status

Controller → Radio

① GID[¥r]

Radio → Controller

① GID,[SITE_TYPE],[TGID],[ID_SRCH_MODE],[NAME1],[NAME2],[NAME3][¥r]

[SITE_TYPE] : Site Type

[TGID] : TGID

[ID_SRCH_MODE] : ID SCAN / ID SEARCH Mode

(0:ID SCAN Mode / 1:ID SEARCH Mode)

[NAME1] : SYSTEM / SITE NAME (Alpha Tag)

[NAME2] : GROUP NAME (Alpha Tag)

[NAME3] : TGID NAME (Alpha Tag)

FUNCTION

This command return TGID currently displayed on LCD.

If you get the TGID once, the scanner returns ,,,,,[¥r] until next reception.

NOTE :)

This command return ,,,,,[¥r], when TGID is not displayed.

<COMMAND KEY>

Push KEY

Controller → Radio

① KEY,[KEY_CODE],[KEY_MODE][¥r]

Radio → Controller

① KEY,OK[¥r]

[KEY_CODE] P : POL / DOT

W : HP / BT

G : GPS

M : MENU

F : VFO PUSH / FUNC

H : HOLD / RESUME

S : SCAN / SEARCH

L : L/O

1 : 1

2 : 2

3 : 3

4 : 4

5 : 5

6 : 6

7 : 7

8 : 8

9 : 9

0 : 0

.(dot) : . / no

E : E / yes

Q : SQL PUSH

V : VOL PUSH

> : VFO RIGHT * Set "P" to KEY_MODE.

< : VFO LEFT * Set "P" to KEY_MODE.

[KEY_MODE] P : Press

L : Long Press

H : Hold (Press and Hold until Release receive)

R : Release (Cancel Hold state)

Ex.1) Press MENU KEY

→ KEY,M,P[¥r]

← OK[¥r]

Ex.2) Press F + SCAN KEY

- Ex.3) Press and Hold L/O KEY

Go to quick search hold mode

① QSH,[FRQ],[STP],[MOD],[ATT],[DLY],[SKP],[CODE SRCH],[BSC],[REP],[RECORD][¥r]

① QSH,OK[¥r] or QSH,NG[¥r]

AUTO : AUTO	500 : 5k
625 : 6.25k	750 : 7.5k
833 : 8.33k	1000 : 10k
1250 : 12.5k	1500 : 15k
2000 : 20k	2500 : 25k
5000 : 50k	10000 : 100k

[BSC] : Broadcast Screen (16digit: #####.##)

[RECORD] : Tape-Out (0:OFF / 1:ON)

FUNCTION

Parameter, such as STP, changes the contents of Srch/CloCall option.

Get Current Status

① STS,[DSP_FORM],[L1_CHAR],[L1_MODE],[L2_CHAR],[L2_MODE],[L3_CHAR],[L3_MODE],[L4_CHAR],[L4_MODE],...,[L8_CHAR],[L8_MODE],[SQL],[MUT],[RSV],[WAT],[LED_1],[LED_2],[SIG_LVL],[BK_COLOR],[BK_DIMMER][¥r]

[L1_MODE]	: Line1 Display Mode 16char
-----------	-----------------------------

[L2_CHAR]	: Line2 Characters 16char (fixed length)
[L2_MODE]	: Line2 Display Mode 16char
[L3_CHAR]	: Line3 Characters 16char (fixed length)
[L3_MODE]	: Line3 Display Mode 16char
[L4_CHAR]	: Line4 Characters 16char (fixed length)
[L4_MODE]	: Line4 Display Mode 16char
:	:
[L8_CHAR]	: Line8 Characters 16char (fixed length)
[L8_MODE]	: Line8 Display Mode 16char
[SQL]	: Squelch Status (0:CLOSE / 1:OPEN)
[MUT]	: Mute Status (0:OFF / 1:ON)
[RSV]	: Reserve Parameter * This is always only "0".
[WAT]	: Weather Alert Status (0:No Alert / 1: Alert / \$\$\$: Alert SAME CODE)
[LED_1]	: CC LED (0:OFF / 1:ON)
[LED_2]	: Alert LED (0:OFF / 1:ON)
[SIG_LVL]	: Signal Level (0 – 5)
[BK_COLOR]	: Backlight Color (This is always "RED".)
[BK_DIMMER]	: Backlight Dimmer ((0:OFF / 1:Low / 2:Middle / 3:High)

NOTE :) Display Mode for Line1 – Line8
 (space) : NORMAL CHAR, *: REVERSE CHAR
 _ (Under bar) : Underline
 If all 16chars are normal, only "," is sent.

The number of [Lx_CHAR] and [Lx_MODE] depend on Display Form.

Ex. 1)

```

-- M E N U --
Program System
Program Location
Srch/CloCall Opt

```

Squelch Status : OPEN
 Mute Status : OFF
 Weather Alert Status : No Alert

```

→ STS[¥r]
← 1111,
   -- M E N U -- ,
   _____,
   Program System ,
   ***** ,
   Program Location,
   ,
   Srch/CloCall Opt,
   ,
   1,0,0,0,0,0,0,RED,0[¥r]

```

← [L1_CHAR]
 ← [L1_MODE]
 ← [L2_CHAR]
 ← [L2_MODE]
 ← [L3_CHAR]
 ← [L3_MODE]
 ← [L4_CHAR]
 ← [L4_MODE]

Returns current scanner status.

Ex. 2)

```

HOLD L/O
System 1
851.0125MHz
P NFM ATT
S1: 5
GRP 2 WX

```

Squelch Status : CLOSE
 Mute Status : ON
 Weather Alert Status : Alert

```

→ STS[¥r]
← 011000,
   HOLD L/O ,
   ,
   SYSTEM 1 ,
   ,
   851.0125MHz ,
   ,
   P NFM ATT ,
   ,
   S1: 5 ,
   ,

```

← [L1_CHAR]
 ← [L1_MODE]
 ← [L2_CHAR]
 ← [L2_MODE]
 ← [L3_CHAR]
 ← [L3_MODE]
 ← [L4_CHAR]
 ← [L4_MODE]
 ← [L5_CHAR]

, GRP 2 WX, ← [L5_MODE]
 ← [L6_CHAR]
 , ← [L6_MODE]
 0,1,0,0,0,0,1,RED,1[¥r]

Returns current scanner status.

<COMMAND GLG>

Get Reception Status

Controller → Radio

① GLG[¥r]

Radio → Controller

① GLG,[FRQ/TGID],[MOD],[ATT],[CTCSS/DCS],[NAME1],[NAME2],[NAME3],[SQL],[MUT][¥r]
 GLG,,,,,,,,[¥r]

[FRQ/TGID] : Frequency or TGID
 [MOD] : Modulation (AM/FM/NFM/WFM/FMB)
 [ATT] : Attenuation (0:OFF / 1:ON)
 [CTCSS/DCS] : CTCSS/DCS Status (0-231)
 *See *CTCSS/DCS CODE LIST* about the details of this code.
 [NAME1] : System, Site or Search Name
 [NAME2] : Group Name
 [NAME3] : Channel Name
 [SQL] : Squelch Status (0:CLOSE / 1:OPEN)
 [MUT] : Mute Status (0:OFF / 1:ON)

Get reception status.

The Scanner returns GLG,,,,,,,,[¥r] until it detects a frequency or a TGID.

<COMMAND MDL>

Get Model Info

Controller → Radio

① MDL[¥r]

Radio → Controller

① MDL,BCT15[¥r]

Returns Model Information.

<COMMAND VER>

Get Firmware Version

Controller → Radio

① VER[¥r]

Radio → Controller

① VER,Version 1.00.00[¥r]

Returns Firmware Version.

<COMMAND PRG>

Enter Program Mode

Controller → Radio

① PRG[¥r]

Radio → Controller

① PRG,OK[¥r]

② PRG,NG[¥r]

This command is invalid when the scanner is in Menu Mode, during Direct Entry operation, during Quick Save operation.

The scanner goes to Program Mode.

The scanner displays "Remote Mode" on first line and "Keypad Lock" on second line in Program Mode.

<COMMAND EPG>**Exit Program Mode**

Controller → Radio

① EPG[¥r]

Radio → Controller

① EPG,OK[¥r]

The scanner exits from Program Mode.
Then the scanner goes to Scan Hold Mode.

<COMMAND BKL>**Get/Set Backlight**

Controller → Radio

① BKL[¥r]

② BKL,[DIMMER],[COLOR][¥r]

Radio → Controller

① BKL,[DIMMER],[COLOR][¥r]

② BKL,OK[¥r]

[DIMMER] : Backlight Dimmer (OFF / LOW / MIDL / HIGH / +POL / -POL)
[COLOR] : Backlight Color (This is always "RED".)

This command is only acceptable in Programming Mode.

<COMMAND CLR>**Clear All Memory**

Controller → Radio

① CLR[¥r]

Radio → Controller

① CLR,OK[¥r]

All the memories are set for initial setting.
This command is only acceptable in Programming Mode.

Note :

Need a few seconds to execute.

Only PC Control (Baud Rate) does not become an initial-setting value.

<COMMAND KBP>**Get/Set Key Beep**

Controller → Radio

① KBP[¥r] : Get Key Beep Setting

② KBP,[LEVEL][¥r] : Set Key Beep Setting

Radio → Controller

① KBP,[LEVEL][¥r]

② KBP,OK[¥r]

[LEVEL] : Beep Level (0:Auto / 1-15 / 99:OFF)

Get/Set Key Beep Setting.
This command is only acceptable in Programming Mode.

<COMMAND OMS>**Get/Set Opening Message**

Controller → Radio

① OMS[¥r]

② OMS,[L1_CHAR],[L2_CHAR],[L3_CHAR],[L4_CHAR][¥r]

Radio → Controller

① OMS,[L1_CHAR],[L2_CHAR],[L3_CHAR],[L4_CHAR][¥r]

② OMS,OK[¥r]

[L1_CHAR] : Line1 Characters (max.16char)
[L2_CHAR] : Line2 Characters (max.16char)
[L3_CHAR] : Line3 Characters (max.16char)
[L4_CHAR] : Line4 Characters (max.16char)

If only space code is set in character area, the message returns default message.
This command is only acceptable in Programming Mode.

<COMMAND PRI>

Get/Set Priority Mode

Controller → Radio

- ① PRI[¥r] : Get Priority Mode Setting
- ② PRI,[¥r] : Set Priority Mode Setting

Radio → Controller

- ① PRI,[¥r]
- ② PRI,OK[¥r]

means Priority Setting (0:OFF / 1:ON / 2:PLUS ON)

Get/Set Priority Mode.
This command is only acceptable in Programming Mode.

<COMMAND AGV>

Get/Set Auto Gain Control

Controller → Radio

- ① AGV[¥r] : Get Auto Gain Control Setting
- ② AGV,[AGC_SETTING],[RSV][¥r] : Set Auto Gain Control Setting

Radio → Controller

- ① AGV,[AGC_SETTING],[RSV][¥r]
- ② AGV,OK[¥r]

[AGC_SETTING] : AGC Setting (0:OFF / 1:ON)
[RSV] : Reserve Parameter * This is always only “,”.

Get/Set AGC Setting.
This command is only acceptable in Programming Mode.

<COMMAND SCT>

Get System Count

Controller → Radio

- ① SCT[¥r]

Radio → Controller

- ① SCT,###[¥r] : ### (0 - 500)

Returns the number of stored System.
This command is only acceptable in Programming Mode.

<COMMAND SIH>

Get System Index Head

Controller → Radio

- ① SIH[¥r]

Radio → Controller

- ① SIH,[SYS_INDEX][¥r]

Returns the first index of stored system list.
This command is only acceptable in Programming Mode.

<COMMAND SIT>

Get System Index Tail

Controller → Radio

- ① SIT[¥r]

Radio → Controller

① SIT,[SYS_INDEX][¥r]

Returns the last index of stored system list.
This command is only acceptable in Programming Mode.

<COMMAND QSL>

Get/Set System/Site Quick Lockout

Controller → Radio

- ① QSL[¥r]
- ② QSL,[PAGE0],[PAGE1],[PAGE2],[PAGE3],[PAGE4],[PAGE5],[PAGE6],[PAGE7],[PAGE8],[PAGE9][¥r]

Radio → Controller

- ① QSL,[PAGE0],[PAGE1],[PAGE2],[PAGE3],[PAGE4],[PAGE5],[PAGE6],[PAGE7],[PAGE8],[PAGE9][¥r]
- ② QSL,OK[¥r]

[PAGE0] – [PAGE9] : ##### (each # is 0 - 2)
 0 : Not assigned (Displayed as “-” on the scanner.)
 1 : On (Displayed as each number on the scanner.)
 2 : Off (Displayed as “*” on the scanner.)
 The Order of Quick Key is as same as LCD Icon.

[PAGE0]	: Quick Key 1 - 9, 0
[PAGE1]	: Quick Key11 - 19,10
[PAGE2]	: Quick Key21 - 29,20
[PAGE3]	: Quick Key31 - 39,30
[PAGE4]	: Quick Key41 - 49,40
[PAGE5]	: Quick Key51 - 59,50
[PAGE6]	: Quick Key61 - 69,60
[PAGE7]	: Quick Key71 - 79,70
[PAGE8]	: Quick Key81 - 89,80
[PAGE9]	: Quick Key91 - 99,90

This command is only acceptable in Programming Mode.
It cannot turn on/off the Quick Key that has no System / Site.

<COMMAND QGL>

Get/Set Group Quick Lockout

Controller → Radio

- ① QGL,[SYS_INDEX][¥r]
- ② QGL,[SYS_INDEX],#####[¥r]

Radio → Controller

- ① QGL,#####[¥r]
- ② QGL,OK[¥r]

(each # is 0 - 2) : Group Quick Key status of [SYS_INDEX].
 0 : Not assigned (Displayed as “-” on the scanner.)
 1 : On (Displayed as each number on the scanner.)
 2 : Off (Displayed as “*” on the scanner.)

The Order of Quick Key is as same as LCD Icon (1 – 9, 0).
This command is only acceptable in Programming Mode.
It cannot turn on/off the Quick Key that has no Group.

<COMMAND CSY>

Create System

Controller → Radio

- ① CSY,[SYS_TYPE][¥r]

Radio → Controller

- ① CSY,[SYS_INDEX][¥r]

[SYS_TYPE] : System Type
 CNV : CONVENTIONAL
 MOT1 : MOTOROLA TYPE1
 MOT2 : MOTOROLA TYPE2

EDC : EDACS Narrow / Wide
 EDS : EDACS SCAT
 LTR : LTR

[SYS_INDEX]: The Index of Created System

Creates a system and return created system index.
 The index is a handle to get/set system information.
 Returns -1 if the scanner failed to create because of no resource.
 This command is only acceptable in Programming Mode.

<COMMAND DSY>

Delete System

Controller → Radio

① DSY,[SYS_INDEX][¥r]

Radio → Controller

① DSY,OK[¥r]

[SYS_INDEX]: System Index

This command deletes a System.
 This command is only acceptable in Programming Mode.

<COMMAND SIN>

Get/Set System Info

Controller → Radio

① SIN,[INDEX][¥r]

② SIN,[INDEX],[NAME],[QUICK_KEY],[HLD],[LOUT],[DLY],[SKP],[RSV],[RSV],[RSV],[RSV],[START_KEY],[RECORD],[LATITUDE],[LONGITUDE],[RANGE],[GPS_ENABLE],[STATE][¥r]

Radio → Controller

① SIN,[SYS_TYPE],[NAME],[QUICK_KEY],[HLD],[LOUT],[DLY],[SKP],[RSV],[RSV],[RSV],[RSV],[REV_INDEX],[FWD_INDEX],[CHN_GRP_HEAD],[CHN_GRP_TAIL],[SEQ_NO],[START_KEY],[RECORD],[LATITUDE],[LONGITUDE],[RANGE],[GPS_ENABLE],[STATE][¥r]

② SIN,OK[¥r]

[INDEX]	: System Index
[SYS_TYPE]	: System Type
[NAME]	: Name (max.16char)
[QUICK_KEY]	: Quick Key (0-99/(dot) means none)
[HLD]	: System Hold Time (0-255)
[LOUT]	: Lockout (0:Unlocked / 1:Lockout)
[DLY]	: Delay Time (0:OFF / from 1 to 5)
[SKP]	: Data Skip (0:OFF / 1:ON)
[REV_INDEX]	: Reverse System Index of the Scan Setting
[FWD_INDEX]	: Forward System Index of the Scan Setting
[CHN_GRP_HEAD]	: Channel Group Index Head of the conventional system or Site Index Head of the Trunked System
[CHN_GRP_TAIL]	: Channel Group Index Tail of the conventional system or Site Index Tail of the Trunked System
[SEQ_NO]	: System Sequence Number (1 - 500)
[START_KEY]	: Startup Configuration Key (0-9/(dot) means none)
[RECORD]	: Tape out (0:OFF / 1:Marked Channel / 2:All Channel)
[LATITUDE]	: North or South Latitude
[LONGITUDE]	: West or East Longitude
[RANGE]	: Range (1 = 0.01mile)
[GPS_ENABLE]	: GPS Location detection (0:OFF/1:ON)
[STATE]	: State (00:OFF/AL/AK/.../CAN_YU) *See <i>STATE LIST</i> about the details of this setting.
[RSV]	: Reserve Parameter * This is always only “,”.

Get/Set System Information.

The scanner returns only “,” to punctuate for parameters which are not appropriate the system type.

In set command, the scanner neglects the parameters that are not appropriate the system

type.
 In set command, only "," parameters are not changed.
 The set command is aborted if any format error is detected.
 This command is only acceptable in Programming Mode.

<COMMAND TRN>

Get/Set Trunk Info

Controller → Radio

- ① TRN,[INDEX][¥r]
- ② TRN,[INDEX],[ID_SEARCH],[S_BIT],[END_CODE],[AFS],[I-CALL],[RSV],[EMG],[EMGL],[FMAP],[CTM_FMAP],[RSV],[RSV],[RSV],[RSV],[RSV],[RSV],[RSV],[RSV],[RSV],[RSV][¥r]

Radio → Controller

- ① TRN,[ID_SEARCH],[S_BIT],[END_CODE],[AFS],[I-CALL],[RSV],[EMG],[EMGL],[FMAP],[CTM_FMAP],[RSV],[RSV],[RSV],[RSV],[RSV],[RSV],[RSV],[RSV],[RSV],[RSV],[RSV],[TGID_GRP_HEAD],[TGID_GRP_TAIL],[ID_LOUT_GRP_HEAD],[ID_LOUT_GRP_TAIL][¥r]
- ② TRN,OK[¥r]

[INDEX]	: System Index
[ID_SEARCH]	: ID Search/Scan (0:ID Scan mode / 1: Search Mode)
[S_BIT]	: Motorola Status Bit (0:Ignore, 1:Yes)
[END_CODE]	: Motorola End Code (0:Ignore, 1:Yes)
[AFS]	: EDACS Format (0:Decimal / 1:AFS)
[I-CALL]	: I-CALL (0:OFF / 1:ON)
[EMG]	: Emergency Alert (0:Ignore / 1-9:Alert)
[EMGL]	: Emergency Alert Level (0:OFF / 1 - 15)
[FMAP]	: Fleet Map (0-16, 0-15:Preset, 16:Custom)
[CTM_FMAP]	: Custom Fleet Map Setting (##### : # is 0-E)
	# means Size Code of each BLOCK (from 0 to 7)
	0 : Size Code 0 5 : Size Code 5 A : Size Code 10
	1 : Size Code 1 6 : Size Code 6 B : Size Code 11
	2 : Size Code 2 7 : Size Code 7 C : Size Code 12
	3 : Size Code 3 8 : Size Code 8 D : Size Code 13
	4 : Size Code 4 9 : Size Code 9 E : Size Code 14
[TGID_GRP_HEAD]	: TGID Index Head of the System
[TGID_GRP_TAIL]	: TGID Index Tail of the System
[ID_LOUT_GRP_HEAD]	: L/O TGID Group Index Head of the System
[ID_LOUT_GRP_TAIL]	: L/O TGID Group Index Tail of the System
[RSV]	: Reserve Parameter * This is always only ",".

Get/Sets Trunked System Information.
 The scanner returns only "," to punctuate for parameters which are not appropriate the system type.
 In set command, the scanner neglects the parameters that are not appropriate the system.
 In set command, only "," parameters are not changed.
 The set command is aborted if any format error is detected.
 This command is only acceptable in Programming Mode.

<COMMAND AST>

Append Site

Controller → Radio

- ① AST,[SYS_INDEX],[SITE_TYPE][¥r]

Radio → Controller

- ① AST,[SITE_INDEX][¥r]

[SYS_INDEX]	: System Index
[SITE_TYPE]	: Site Type
	(for MOTOROLA TYPE 2 SYSTEM)
	M82S : Motorola 800MHz Standard
	M82P : Motorola 800MHz Splinter
	M92 : Motorola 900MHz Band
	MV2 : Motorola VHF Band
	MU2 : Motorola UHF Band
	(for MOTOROLA TYPE 1 SYSTEM)

M81S : Motorola 800MHz Standard
M81P : Motorola 800MHz Splinter
(for EDACS SYSTEM)
EDN : EDACS NARROW
EDW : EDACS WIDE

[SITE_INDEX] : Appended Site Index

Append Site to the system.

Returns "-1" if the scanner failed to create because of no resource.

This command is only acceptable in Programming Mode.

<COMMAND SIF>

Get/Set Site Info

Controller → Radio

- ① SIF,[INDEX][¥r]
- ② SIF,[INDEX],[NAME],[QUICK_KEY],[HLD],[LOUT],[MOD],[ATT],[C-CH],[RSV],[RSV],
[START_KEY],[LATITUDE],[LONGITUDE],[RANGE],[GPS_ENABLE],[STATE][¥r]

Radio → Controller

- ① SIF,[SITE_TYPE],[NAME],[QUICK_KEY],[HLD],[LOUT],[MOD],[ATT],[C-CH],[RSV],
[RSV],[REV_INDEX],[FWD_INDEX],[SYS_INDEX],[CHN_HEAD],[CHN_TAIL],
[SEQ_NO],[START_KEY],[LATITUDE],[LONGITUDE],[RANGE],[GPS_ENABLE],[STATE][¥r]
- ② SIF,OK[¥r]

[INDEX]	: Site Index	
[SITE_TYPE]	: Site Type	
[NAME]	: Name	(max.16char)
[QUICK_KEY]	: Quick Key	(0-99/(dot) means none)
[HLD]	: Site Hold Time	(0-255)
[LOUT]	: Lockout	(0:Unlocked / 1:Lockout)
[MOD]	: Modulation	(AUTO/FM/NFM)
[ATT]	: Attenuation	(0:OFF/1:ON)
[C-CH]	: Control Channel Only	(0:OFF / 1:ON)
[REV_INDEX]	: Reverse Site Index of the Scan Setting	
[FWD_INDEX]	: Forward Site Index of the Scan Setting	
[SYS_INDEX]	: System Index	
[CHN_HEAD]	: Channel Index Head of the Group List	
[CHN_TAIL]	: Channel Index Tail of the Group List	
[SEQ_NO]	: Site Sequence Number	(1-256)
[START_KEY]	: Startup Configuration	(0-9/(dot) means none)
[LATITUDE]	: North or South Latitude	
[LONGITUDE]	: West or East Longitude	
[RANGE]	: Range	(1= 0.01mile)
[GPS_ENABLE]	: GPS Location detection	(0:OFF/1:ON)
[STATE]	: State	(00:OFF/AL/AK/.../CAN_YU)
		*See <i>STATE LIST</i> about the details of this setting.
[RSV]	: Reserve Parameter	* This is always only " , ".

Get/Set Site Information.

The scanner returns only " ," to punctuate for parameters which are not appropriate the site type.

In set command, the scanner neglects the parameters that are not appropriate the system type.

In set command, only " ," parameters are not changed.

The set command is aborted if any format error is detected.

This command is only acceptable in Programming Mode.

<COMMAND MBP>

Get/Set Motorola Band Plan

Controller → Radio

- ① MBP,[INDEX][¥r]
- ② MBP,[INDEX],[BASE1],[STEP1],[OFFSET1],[BASE2],[STEP2],[OFFSET2],[BASE3],
[STEP3],[OFFSET3][¥r]

Radio → Controller

- ① MBP,[BASE1],[STEP1],[OFFSET1],[BASE2],[STEP2],[OFFSET2],[BASE3],[STEP3],

- ② [OFFSET3][¥r]
MBP,OK[¥r]
- | | |
|-----------|--------------------|
| [INDEX] | : Site Index |
| [BASE1] | : Base Frequency 1 |
| [STEP1] | : Step 1 |
| [OFFSET1] | : Offset 1 |
| [BASE2] | : Base Frequency 2 |
| [STEP2] | : Step 2 |
| [OFFSET2] | : Offset 2 |
| [BASE3] | : Base Frequency 3 |
| [STEP3] | : Step 3 |
| [OFFSET3] | : Offset 3 |

Get/Sets Band Plan Setting for MOT VHF/UHF site.

In set command, only "," parameters are not changed.
The set command is aborted if any format error is detected.
This command is only acceptable in Programming Mode.

<COMMAND TFQ>

Get/Set Trunk Frequency Info

Controller → Radio

- ① TFQ,[CHN_INDEX][¥r]
② TFQ,[CHN_INDEX],[FRQ],[LCN],[LOUT],[RECORD][¥r]

Radio → Controller

- ① TFQ,[FRQ],[LCN],[LOUT],[REV_INDEX],[FWD_INDEX],[SYS_INDEX],[GRP_INDEX],[RECORD][¥r]
② TFQ,OK[¥r]

[CHN_INDEX]	: Trunk Frequency Index
[FRQ]	: Trunk Frequency
[LCN]	: LCN
[LOUT]	: Lockout (0:Unlocked / 1:Lockout)
[REV_INDEX]	: Reverse Frequency Index of the Site
[FWD_INDEX]	: Forward Frequency Index of the Site
[SYS_INDEX]	: System Index of the Frequency
[GRP_INDEX]	: Index of the Site
[RECORD]	: Tape out (0:OFF / 1:ON)

In set command, only "," parameters are not changed.
The set command is aborted if any format error is detected.
This command is only acceptable in Programming Mode.
For Motorola or EDACS SCAT System, [LCN] is ignored.

<COMMAND AGC>

Append Channel Group

Controller → Radio

- ① AGC,[SYS_INDEX][¥r]

Radio → Controller

- ① AGC,[GRP_INDEX][¥r]

[SYS_INDEX]	: System Index
[GRP_INDEX]	: appended Channel Group Index

Append Channel Group to the system.
Returns "-1" if the scanner failed to create because of no resource.
This command is only acceptable in Programming Mode.

<COMMAND AGT>

Append TGID Group

Controller → Radio

- ① AGT,[SYS_INDEX][¥r]

Radio → Controller

① AGT,[GRP_INDEX][¥r]

[SYS_INDEX] : System Index
[GRP_INDEX] : appended TGID Group Index

Append TGID Group to the system.
Returns "-1" if the scanner failed to create because of no resource.
This command is only acceptable in Programming Mode.

<COMMAND DGR>

Delete Group / Site

Controller → Radio

① DGR,[INDEX][¥r]

Radio → Controller

① DGR,OK[¥r]

[INDEX] : Group / Site Index

This command deletes a Channel Group, TGID Group or Site.
This command is only acceptable in Programming Mode.

<COMMAND GIN>

Get/Set Group Info

Controller → Radio

① GIN,[GRP_INDEX][¥r]

② GIN,[GRP_INDEX],[NAME],[QUICK_KEY],[LOUT][¥r]

Radio → Controller

① GIN,[GRP_TYPE],[NAME],[QUICK_KEY],[LOUT],[REV_INDEX],[FWD_INDEX],[SYS_INDEX],[CHN_HEAD],[CHN_TAIL],[SEQ_NO][¥r]

② GIN,OK[¥r]

For Group Information

[GRP_INDEX] : Group Index
[GRP_TYPE] : Group Type (C: Channel Group / T: TGID Group)
[NAME] : Name (max.16char)
[QUICK_KEY] : Quick Key (1-9,0: means 10, .(dot): means none)
[LOUT] : Lockout (0:Unlocked / 1:Lockout)
[REV_INDEX] : Reverse Group Index of the System
[FWD_INDEX] : Forward Group Index of the System
[SYS_INDEX] : System Index
[CHN_HEAD] : Channel Index Head of the Group List
[CHN_TAIL] : Channel Index Tail of the Group List
[SEQ_NO] : Group Sequence Number of the System

Get/Set Group Information.
In set command, only "," parameters are not changed.
The set command is aborted if any format error is detected.
This command is only acceptable in Programming Mode.

<COMMAND ACC>

Append Channel / Trunk Frequency

Controller → Radio

① ACC,[GRP_INDEX][¥r]

Radio → Controller

① ACC,[CHN_INDEX][¥r]

[GRP_INDEX] : Channel Group Index
[CHN_INDEX] : Appended Channel Index

- or -

[GRP_INDEX] : Site Index
[CHN_INDEX] : Appended Trunk Frequency Index

Append Channel to the group. Or, append Trunk Frequency to the Site.
Returns "-1" if the scanner failed to create because of no resource.

This command is only acceptable in Programming Mode.

<COMMAND ACT>

Append TGID

Controller → Radio

① ACT,[GRP_INDEX][¥r]

Radio → Controller

① ACT,[TGID_INDEX][¥r]

[GRP_INDEX] : TGID Group Index
[TGID_INDEX] : appended TGID Index

Append TGID to the group.

Returns "-1" if the scanner failed to create because of no resource.

This command is only acceptable in Programming Mode.

<COMMAND DCH>

Delete Channel

Controller → Radio

① DCH,[INDEX][¥r]

Radio → Controller

① DCH,OK[¥r]

[INDEX] : Channel Index, TGID Index or Frequency Index of Trunked System

This command deletes a Channel and TGID.

This command is also valid for deleting a Trunk Frequency.

This command is only acceptable in Programming Mode.

<COMMAND CIN>

Get/Set Channel Info

Controller → Radio

① CIN,[INDEX][¥r]

② CIN,[INDEX],[NAME],[FRQ],[MOD],[CTCSS/DCS],[TLOCK],[LOUT],[PRI],[ATT],[ALT],[ALTL],[RECORD],[RSV][¥r]

Radio → Controller

① CIN,[NAME],[FRQ],[MOD],[CTCSS/DCS],[TLOCK],[LOUT],[PRI],[ATT],[ALT],[ALTL],[REV_INDEX],[FWD_INDEX],[SYS_INDEX],[GRP_INDEX],[RECORD],[RSV][¥r]

② CIN,OK[¥r]

[INDEX] : Channel Index
[NAME] : Name (max.16char)
[FRQ] : Channel Frequency
[MOD] : Modulation (AUTO/AM/FM/NFM/WFM/FMB)
[ATT] : Attenuation (0:OFF / 1:ON)
[CTCSS/DCS] : CTCSS/DCS Status (0-231)
*See CTCSS/DCS CODE LIST about the details of this code.
[TLOCK] : CTCSS/DCS Tone Lockout (0:OFF / 1:ON)
[LOUT] : Lockout (0:Unlocked / 1:Lockout)
[PRI] : Priority (0:OFF / 1:ON)
[ALT] : Alert Tone (0:OFF / 1-9:Tone No)
[ALTL] : Alert Tone Level (0:AUTO/ 1-15)
[REV_INDEX] : Reverse Channel Index of the Channel Group
[FWD_INDEX] : Forward Channel Index of the Channel Group
[SYS_INDEX] : System Index of the Channel
[GRP_INDEX] : Group Index of the Channel
[RECORD] : Tape out (0:OFF / 1:ON)
[RSV] : Reserve Parameter * This is always only “,”.

Get/Set Channel Information.

In set command, only “,” parameters are not changed.

The set command is aborted if any format error is detected.

This command is only acceptable in Programming Mode.

<COMMAND TIN>**Get/Set TGID Info**

Controller → Radio

- ① TIN,[INDEX][¥r]
- ② TIN,[INDEX],[NAME],[TGID],[LOUT],[RSV],[ALT],[ALTL],[RECORD],[RSV][¥r]

Radio → Controller

- ① TIN,[NAME],[TGID],[LOUT],[RSV],[ALT],[ALTL],[REV_INDEX],[FWD_INDEX],[SYS_INDEX],[GRP_INDEX],[RECORD],[RSV][¥r]
- ② TIN,OK[¥r]

[INDEX]	: TGID Index	
[NAME]	: Name (max.16char)	
[TGID]	: TGID	
[LOUT]	: Lockout	(0:Unlocked / 1:Lockout)
[ALT]	: Alert Tone	(0:OFF / 1-9:Tone No)
[ALTL]	: Alert Tone Level	(0:AUTO/ 1-15)
[REV_INDEX]	: Reverse TGID Index of the Group	
[FWD_INDEX]	: Forward TGID Index of the Group	
[SYS_INDEX]	: System Index of the TGID	
[GRP_INDEX]	: Group Index of the TGID	
[RECORD]	: Tape out	(0:OFF / 1:ON)
[RSV]	: Reserve Parameter	* This is always only “,”.

Get/Set TGID Information.

In set command, only “,” parameters are not changed.

The set command is aborted if any format error is detected.

This command is only acceptable in Programming Mode.

<COMMAND GLI>**Get Lockout TGID (for Rvw L/O ID)**

Controller → Radio

- ① GLI,[SYS_INDEX][¥r]

Radio → Controller

- ① GLI,[TGID][¥r]
GLI,-1[¥r] : No more lockout TGID

This command is used to get L/O TGID list of a system.

You should call this command again and again to get all L/O TGID until the scanner returns “-1”.

“-1” means that no more L/O TGID exists.

This command is only acceptable in Programming Mode.

<COMMAND SLI>**Get Search L/O TGID**

Controller → Radio

- ① SLI,[SYS_INDEX][¥r]

Radio → Controller

- ① SLI,[TGID][¥r]
SLI,-1[¥r] : No more lockout TGID

This command is used to get Search L/O TGID list of the system.

Search L/O TGID is the L/O TGID which doesn't belong to any group in the system as a TGID.

Compared with GLI command, this command doesn't return any L/O TGID which is belong to one of group in the system.

You should call this command again and again to get all L/O TGID until the scanner returns “-1”.

“-1” means that no more L/O TGID exists.

This command is only acceptable in Programming Mode.

<COMMAND ULI>**Unlock TGID (for Rvw L/O ID)**

Controller → Radio
① ULI,[SYS_INDEX],[TGID][¥r]
Radio → Controller
① ULI,OK[¥r]

This command unlocks a L/O TGID in a system.
The TGID is deleted from L/O list.
This command is only acceptable in Programming Mode.

<COMMAND LOI>
Lockout ID (TGID)

Controller → Radio
① LOI,[SYS_INDEX],[TGID][¥r]
Radio → Controller
① LOI,OK[¥r]

This command locks out a TGID for the system.
The TGID is added to L/O list.
This command is only acceptable in Programming Mode.

<COMMAND REV>
Get Rev Index

Controller → Radio
① REV,[INDEX][¥r]
Radio → Controller
① REV,[INDEX][¥r]

[INDEX] : Index of system, site, group, channel, TGID or Location Alert System.

Returns reverse(backward) index of the index in the memory chain.
Returns -1 if no more index exists.
This command is only acceptable in Programming Mode.

<COMMAND FWD>
Get Fwd Index

Controller → Radio
① FWD,[INDEX][¥r]
Radio → Controller
① FWD,[INDEX][¥r]

[INDEX] : Index of system, site, group, channel, TGID or Location Alert System.

Returns forward index of the index in the memory chain.
Returns -1 if no more index exists.
This command is only acceptable in Programming Mode.

<COMMAND RMB>
Get Remains of Memory Block

Controller → Radio
① RMB[¥r]
Radio → Controller
① RMB,####[¥r]

Returns the number of idle(free) memory block.
: #### (not zero-padding)
This command is only acceptable in Programming Mode.

<COMMAND MEM>
Get Memory Used

Controller → Radio
① MEM[¥r]
Radio → Controller

① MEM,[MEMORY_USED],[SYS],[SITE],[CHN],[LOC][¥r]

[MEMORY_USED] : The percent of memory that is used (0 – 100)
 [SYS] : The number of systems that is created (0 – 500)
 [SITE] : The number of sites that is created (0 – 1000)
 [CHN] : The number of channels that is created (0 – 2500)
 [LOC] : The number of location systems that is created (0 – 1000)
 This command is only acceptable in Programming Mode.

<COMMAND LIH>
 Get Location Alert System Index Head

Controller → Radio
 ① LIH,[LAS_TYPE][¥r]
 Radio → Controller
 ① LIH,[INDEX][¥r]

[LAS_TYPE] : Location Alert Type
 (POI:POI / DROAD: Dangerous Road / DXING : Dangerous Xing)

Returns the first index of stored location alert system list.
 This command is only acceptable in Programming Mode.

<COMMAND LIT>
 Get Location Alert System Index Tail

Controller → Radio
 ① LIT,[LAS_TYPE][¥r]
 Radio → Controller
 ① LIT,[INDEX][¥r]

[LAS_TYPE] : Location Alert Type
 (POI:POI / DROAD: Dangerous Road / DXING : Dangerous Xing)

Returns the last index of stored location alert system list.
 This command is only acceptable in Programming Mode.

<COMMAND CLA>
 Create Location Alert System

Controller → Radio
 ① CLA,[LAS_TYPE][¥r]
 Radio → Controller
 ① CLA,[INDEX][¥r]

[LAS_TYPE] : Location Alert Type
 (POI: POI / DROAD: Dangerous Road / DXING: Dangerous Xing)
 [INDEX] : Location Alert System Index

Creates a system and return created location alert system index.
 The index is a handle to get/set location alert system information.
 Returns "-1" if the scanner failed to create because of no resource.
 This command is only acceptable in Programming Mode.

<COMMAND DLA>
 Delete Location Alert System

Controller → Radio
 ① DLA,[INDEX][¥r]
 Radio → Controller
 ① DLA,OK[¥r]

[INDEX] : Location Alert System Index

This command deletes a location alert system.
 This command is only acceptable in Programming Mode.

<COMMAND LIN>

Get/Set Location Alert System Info

Controller → Radio

- ① LIN,[INDEX][¥r]
- ② LIN,[INDEX],[LAS_TYPE],[NAME],[LOUT],[ALT],[ALTL],[LATITUDE],[LONGITUDE],[RANGE],[SPEED],[DIR][¥r]

Radio → Controller

- ① LIN,[LAS_TYPE],[NAME],[LOUT],[ALT],[ALTL],[REV_INDEX],[FWD_INDEX],[SEQ_NO],[LATITUDE],[LONGITUDE],[RANGE],[SPEED],[DIR][¥r]
- ② LIN,OK[¥r]

[INDEX]	: Location Alert System Index
[LAS_TYPE]	: Location Alert Type (POI: POI / DROAD: Dangerous Road / DXING: Dangerous Xing)
[NAME]	: Name (max.16char)
[LOUT]	: Lockout (0:Unlocked / 1:Lockout)
[ALT]	: Alert Tone (0:OFF/1 - 4:Tone No.)
[ALTL]	: Alert Tone Level (0:AUTO/1-15)
[REV_INDEX]	: Reverse System Index of Location Alert System
[FWD_INDEX]	: Forward System Index of Location Alert System
[SEQ_NO]	: Location Alert System Sequence Number
[LATITUDE]	: North or South Latitude
[LONGITUDE]	: West or East Longitude
[RANGE]	: Range (1-200 : 1 means 0.01mile)
[SPEED]	: Speed Limit (0-200 : 1 means 1mile/hour)
[DIR]	: Heading (0-358/360 : 2' step, 360=All range)

Get/Set Location Alert System Information.

In set command, the scanner neglects the parameters that are not appropriate the system type.

In set command, only "," parameters are not changed.

The set command is aborted if any format error is detected.

This command is only acceptable in Programming Mode.

<COMMAND SCO>

Get/Set Search/Close Call Settings

Controller → Radio

- ① SCO[¥r]
- ② SCO,[STP],[MOD],[ATT],[DLY],[SKP],[CODE_SRCH],[BSC],[REP],[RSV],[RSV],[MAX_STORE],[RECORD][¥r]

Radio → Controller

- ① SCO,[STP],[MOD],[ATT],[DLY],[SKP],[CODE_SRCH],[BSC],[REP],[RSV],[RSV],[MAX_STORE],[RECORD][¥r]
- ② SCO,OK[¥r]

[STP]	: Search Step
	AUTO : AUTO 833 : 8.33k 2000 : 20k
	500 : 5k 1000 : 10k 2500 : 25k
	625 : 6.25k 1250 : 12.5k 5000 : 50k
	750 : 7.5 k 1500 : 15k 10000 : 100k
[MOD]	: Modulation (AUTO / AM / FM / NFM / WFM/FMB)
[ATT]	: Attenuation (0:OFF / 1:ON)
[DLY]	: Delay Time (0:OFF / 1 - 5)
[SKP]	: Data Skip (0:OFF / 1:ON)
[CODE_SRCH]	: CTCSS/DCS Search (0:OFF / 1:ON)
[BSC]	: Broadcast Screen
	(16digit: #####.##)
	(each # is 0 or 1)
0 means OFF	Band10
1 means ON	:
	+---- Band 2
	+---- Band 1
	+---- Reserve
	+---- NOAA WX
	+---- VHF TV

		+----- UHF TV
		+----- FM
		+----- Pager
[REP]	: Repeater Find	(0:OFF / 1:ON)
[MAX_STORE]	: Max Auto Store	(1-256)
[RECORD]	: Tape out	(0:OFF / 1:ON)
[RSV]	: Reserve Parameter	* This is always only “,”.

Get/Set Search/Close Call Settings.
 In set command, only “,” parameters are not changed.
 The set command is aborted if any format error is detected.
 This command is only acceptable in Programming Mode.

<COMMAND BBS>

Get/Set Broadcast Screen Band Settings

Controller → Radio

- ① BBS,[INDEX][¥r]
- ② BBS,[INDEX],[LIMIT_L],[LIMIT_H][¥r]

Radio → Controller

- ① BBS,[LIMIT_L],[LIMIT_H][¥r]
- ② BBS,OK[¥r]

[INDEX]	: Index	(1-9,0 means 10)
[LIMIT_L]	: Lower Limit Frequency	(00000000 –99999999)
[LIMIT_H]	: Upper Limit Frequency	(00000000 –99999999)

Get/Set Broadcast Screen Band Settings.
 This command is Only acceptable in Programming Mode.

<COMMAND SHK>

Get/Set Search Key Settings

Controller → Radio

- ① SHK[¥r]
- ② SHK,[SRCH_KEY_1],[SRCH_KEY_2],[SRCH_KEY_3],[RSV],[RSV],[RSV][¥r]

Radio → Controller

- ① SHK,[SRCH_KEY_1],[SRCH_KEY_2],[SRCH_KEY_3],[RSV],[RSV],[RSV][¥r]
- ② SHK,OK[¥r]

[SRCH_KEY_1] - [SRCH_KEY_3] : Search Range			
.(dot)	: Not assign	Special	: Special range
PublicSafety	: Public Safety range	Military	: Military Air range
News	: News range	CUSTOM_1	: Custom 1 range
HAM	: HAM Radio range	CUSTOM_2	: Custom 2 range
Marine	: Marine range	CUSTOM_3	: Custom 3 range
Railroad	: Railroad range	CUSTOM_4	: Custom 4 range
Air	: Air range	CUSTOM_5	: Custom 5 range
CB	: CB Radio range	CUSTOM_6	: Custom 6 range
FRS/GMRS	: FRS/GMRS range	CUSTOM_7	: Custom 7 range
Racing	: Racing range	CUSTOM_8	: Custom 8 range
TV	: TV Broadcast range	CUSTOM_9	: Custom 9 range
FM	: FM Broadcast range	CUSTOM_10	: Custom 10 range
[RSV]	: Reserve Parameter	* This is always only “,”.	

Get/Set Search Key Settings.
 This command is Only acceptable in Programming Mode.

<COMMAND GLF>

Get Global Lockout Freq

Controller → Radio

- ① GLF[¥r]

Radio → Controller

- ① GLF,[FRQ][¥r]
- GLF,-1[¥r]

[FRQ] : Lockout Frequency (250000-13000000)

This command is used to get Global L/O frequency list.
You should call this command again and again to get all-global L/O frequency until the scanner returns "-1".
"-1" means that no more L/O frequency exists.
This command is only acceptable in Programming Mode.

<COMMAND ULF>

Unlock Global L/O

Controller → Radio

① ULF,[FRQ][¥r]

Radio → Controller

① ULF,OK[¥r]

[FRQ] : Lockout Frequency (250000-13000000)

This command unlocks a L/O frequency.
The frequency is deleted from L/O list.
This command is only acceptable in Programming Mode.

<COMMAND LOF >

Lock Out Frequency

Controller → Radio

① LOF,[FRQ][¥r]

Radio → Controller

① LOF,OK[¥r]

[FRQ] : Frequency (250000-13000000)

This command locks out a frequency.
The frequency is added to L/O list.
This command is only acceptable in Programming Mode.

<COMMAND CLC>

Get/Set Close Call Settings

Controller → Radio

① CLC[¥r]

② CLC,[CC_MODE],[CC_OVERRIDE],[RSV],[ALTB],[ALTL],[ALTP],[CC_BAND],[LOUT],[HLD],[QUICK_KEY][¥r]

Radio → Controller

① CLC,[CC_MODE],[CC_OVERRIDE],[RSV],[ALTB],[ALTL],[ALTP],[CC_BAND],[LOUT],[HLD],[QUICK_KEY][¥r]

② CLC,OK[¥r]

[CC_MODE] : Mode (0:OFF / 1:CC PRI / 2:CC DND)

[CC_OVERRIDE] : Override (1:ON / 0:OFF)

[ALTB] : Alert Beep (0:OFF / 1-9:Tone No)

[ALTL] : Alert Tone Level (0:AUTO/ 1-15)

[ALTP] : Close Call Pause

3 : 3 sec 5 : 5 sec

10 : 10 sec 15 : 15 sec

30 : 30 sec 45 : 45 sec

60 : 60 sec INF : Infinite

[CC_BAND] : Close Call Band (7digit #####)

(each # is 0 or 1) ||||| +- 800MHz+

0 means OFF ||||| +- UHF

1 means ON ||||| +- VHF HIGH2

||| +- VHF HIGH1

|| +- AIR BAND

| +- VHF LOW2

+----- VHF LOW1

[LOUT] : Lockout for CC Hits with Scan (0:Unlocked / 1:Lockout)

[HLD] : System Hold Time for CC Hits with Scan (0-255)

[QUICK_KEY] : Quick Key for CC Hits with Scan(0 – 99 / .(dot))
 *“(dot)” means that nothing is assigned.
 [RSV] : Reserve Parameter * This is always only “,”.

Get/Set Close Call Settings.
 In set command, only “,” parameters are not changed.
 The set command is aborted if any format error is detected.
 This command is only acceptable in Programming Mode.

<COMMAND SSP>

Get/Set Service Search Settings

Controller → Radio

- ① SSP,[SRCH_INDEX][¥r]
- ② SSP,[SRCH_INDEX],[DLY],[ATT],[HLD],[LOUT],[QUICK_KEY],[START_KEY],[RECORD][¥r]

Radio → Controller

- ① SSP,[SRCH_INDEX],[DLY],[ATT],[HLD],[LOUT],[QUICK_KEY],[START_KEY],[RECORD][¥r]
- ② SSP,OK[¥r]

[SRCH_INDEX] : Service Search Range

1 : Public Safety	6 : Air	11 : FM Broadcast
2 : News	7 : CB Radio	12 : Special
3 : HAM Radio	8 : FRS/GMRS	15 : Military Air
4 : Marine	9 : Racing	
5 : Railroad	10 : TV Broadcast	

[DLY] : Delay Time (0:OFF / 1 - 5)
 [ATT] : Attenuation (0:OFF/1:ON)
 [HLD] : System Hold Time for Search with Scan (0-255)
 [LOUT] : Lockout for Search with Scan (0:Unlocked / 1:Lockout)
 [QUICK_KEY] : Quick Key (0 – 99 / .(dot))
 [START_KEY] : Startup Configuration Key (0 – 9 / .(dot))
 [RECORD] : Tape out (0:OFF / 1:ON)

The set command is aborted if any format error is detected.
 This command is only acceptable in Programming Mode.

<COMMAND CSG>

Get/Set Custom Search Group

Controller → Radio

- ① CSG[¥r]
- ② CSG,#####[¥r] : Status of Each Search Range

Radio → Controller

- ① CSG,#####[¥r]
- ② CSG,OK[¥r]

(each # is 0 or 1) : 0 : valid / 1 : invalid

The Order of Range is as same as LCD Icon (1 – 10).
 Get/Set current status of the custom search range.
 This command is only acceptable in Programming Mode.
 *It can not set all Custom Search Ranges to "0".

<COMMAND CSP>

Get/Set Custom Search Settings

Controller → Radio

- ① CSP,[SRCH_INDEX][¥r]
- ② CSP,[SRCH_INDEX],[NAME],[LIMIT_L],[LIMIT_H],[STP],[MOD],[ATT],[DLY],[SKP],[HLD],[LOUT],[C-CH],[RSV],[RSV],[QUICK_KEY],[START_KEY],[RECORD][¥r]

Radio → Controller

- ① CSP,[NAME],[LIMIT_L],[LIMIT_H],[STP],[MOD],[ATT],[DLY],[SKP],[HLD],[LOUT],[C-CH],[RSV],[RSV],[QUICK_KEY],[START_KEY],[RECORD][¥r]
- ② CSP,OK[¥r]

[SRCH_INDEX] : Index (1-9,0 means 10)
 [NAME] : Name (max.16char)

[LIMIT_L]	: Lower Limit Frequency	(250000-13000000)
[LIMIT_H]	: Upper Limit Frequency	(250000-13000000)
[STP]	: Search Step	
	AUTO : AUTO	833 : 8.33k 2000 : 20k
	500 : 5k	1000 : 10k 2500 : 25k
	625 : 6.25k	1250 : 12.5k 5000 : 50k
	750 : 7.5 k	1500 : 15k 10000 : 100k
[MOD]	: Modulation	(AUTO / AM / FM / NFM / WFM / FMB)
[ATT]	: Attenuation	(0:OFF / 1:ON)
[DLY]	: Delay Time	(0:OFF / 1 - 5)
[SKP]	: Data Skip	(0:OFF / 1:ON)
[HLD]	: System Hold Time	(0-255)
[LOUT]	: Lockout	(0:Unlocked / 1:Lockout)
[C-CH]	: Control Channel Only	(0:OFF / 1:ON)
[QUICK_KEY]	: Quick Key	(0 - 99 / .(dot))
[START_KEY]	: Startup Configuration Key	(0 - 9/ .(dot))
[RECORD]	: Tape out	(0:OFF / 1:ON)
[RSV]	: Reserve Parameter * This is always only “,”.	

Get/Set Custom Search Settings.
 In set command, only “,” parameters are not changed.
 The set command is aborted if any format error is detected.
 This command is only acceptable in Programming Mode.

<COMMAND WXS>
 Get/Set Weather Settings

Controller → Radio

- ① WXS[¥r]
- ② WXS,[DLY],[ATT],[ALT_PRI],[RECORD][¥r]

Radio → Controller

- ① WXS,[DLY],[ATT],[ALT_PRI],[RECORD][¥r]
- ② WXS,OK[¥r]

[DLY]	: Delay Time	(0:OFF / 1 - 5)
[ATT]	: Attenuation	(0:OFF / 1:ON)
[ALT_PRI]	: Weather Alert Priority	(0:OFF / 1:ON)
[RECORD]	: Tape out	(0:OFF / 1:ON)

Get/Set Weather Priority Settings.
 This command is only acceptable in Programming Mode.

<COMMAND SGP>
 Get/Set SAME Group Settings

Controller → Radio

- ① SGP,[SAME_INDEX][¥r]
- ② SGP,[SAME_INDEX],[NAME],[FIPS1],[FIPS2],[FIPS3],[FIPS4],[FIPS5],[FIPS6],[FIPS7],[FIPS8][¥r]

Radio → Controller

- ① SGP,[NAME],[FIPS1],[FIPS2],[FIPS3],[FIPS4],[FIPS5],[FIPS6],[FIPS7],[FIPS8][¥r]
- ② SGP,OK[¥r]

[SAME_INDEX]	: SAME Index	(1 - 5)
[NAME]	: SAME Group Name (max.16char)	
[FIPS1-8]	: FIPS Code (6digit:000000-999999, or ----- means none)	

Get/Set SAME Group Settings.
 In set command, only “,” parameters are not changed.
 The set command is aborted if any format error is detected.
 This command is only acceptable in Programming Mode.

<COMMAND TON>
 Get/Set Tone-Out Settings

Controller → Radio

- ① TON[INDEX][¥r]

- ② TON,[INDEX],[NAME],[FRQ],[MOD],[ATT],[DLY],[ALT],[ALTL],[TONE_A],[RSV],[TONE_B],[RSV],[RSV],[RECORD][¥r]
- Radio → Controller
- ① TON,[INDEX],[NAME],[FRQ],[MOD],[ATT],[DLY],[ALT],[ALTL],[TONE_A],[RSV],[TONE_B],[RSV],[RSV],[RECORD][¥r]
- ② TON,OK[¥r]

[INDEX]	: Index	(1-9,0 means 10)
[NAME]	: Name	(max.16char)
[FRQ]	: Channel Frequency	
[MOD]	: Modulation	(AUTO / FM / NFM)
[ATT]	: Attenuation	(0:OFF / 1:ON)
[DLY]	: Delay Time	(0:OFF / 1-5 / INF : Infinite)
[ALT]	: Alert Tone	(0:OFF/1-9:Tone No.)
[ALTL]	: Alert Tone Level	(0:AUTO/1-15)
[TONE_A]	: Tone A Frequency	
	ex.) 10000 means 1000.0Hz	
	00000 means 0.0Hz	
[RSV]	: Reserve Parameter * This is always only “,”.	
[TONE_B]	: Tone B Frequency	
[RECORD]	: Tape out	(0:OFF / 1:ON)

Get/Set Tone-Out Settings.
This command is only acceptable in Programming Mode.

<COMMAND CNT>

Get/Set LCD Contrast Settings

Controller → Radio

- ① CNT[¥r]

Radio → Controller

- ① CNT,[CONTRAST][¥r]

[CONTRAST]	: LCD Contrast	(1 - 15)
------------	----------------	----------

Get/Set LCD Contrast Settings.
This command is only acceptable in Programming Mode.

<COMMAND DUD>

Get/Set LCD Upside-down Settings

Controller → Radio

- ① DUD[¥r]

Radio → Controller

- ① DUD,[UPSIDEDW][¥r]

[UPSIDEDW]	: LCD Upside-down	(0:Off / 1:On)
------------	-------------------	----------------

Get/Set LCD Upside-down Settings.
This command is only acceptable in Programming Mode.

<COMMAND SCN>

Get/Set Scanner Scanner Option Settings

Controller → Radio

- ① SCN,[DISP_MODE],[ACT_CHAN],[RSV],[RSV],[RSV],[RSV],[RSV],[RSV],[RSV],[RSV],[RSV],[RSV],[RSV],[RSV],[RSV],[RSV],[RSV],[RSV][¥r]

Radio → Controller

- ① SCN,[DISP_MODE],[ACT_CHAN],[RSV],[RSV],[RSV],[RSV],[RSV],[RSV],[RSV],[RSV],[RSV],[RSV],[RSV],[RSV],[RSV],[RSV],[RSV],[RSV][¥r]

[DISP_MODE]	: DISPPALY MODE	(1=MODE1 / 2=MODE2)
[ACT_CHAN]	: ACTIVE CHAN DISP MODE	(1=ON / 0=OFF)
[RSV]	: Reserve Parameter	* This is always only “,”.

Get/Set Scanner Scanner Option Settings
This command is only acceptable in Programming Mode.

<COMMAND VOL> Get/Set Volume Level Settings		
Controller → Radio		
①	VOL[¥r]	
②	VOL,[LEVEL][¥r]	
Radio → Controller		
①	VOL,[LEVEL][¥r]	
②	VOL,OK[¥r]	
	[LEVEL]	: Volume Level (0 - 29)
<COMMAND SQL> Get/Set Squelch Level Settings		
Controller → Radio		
①	SQL[¥r]	
②	SQL,[LEVEL][¥r]	
Radio → Controller		
①	SQL,[LEVEL][¥r]	
②	SQL,OK[¥r]	
	[LEVEL]	: Squelch Level (0:OPEN / 1-18 / 19:CLOSE)
<COMMAND GDO> Get/Set GPS Disp Option		
Controller → Radio		
①	GDO[¥r]	
②	GDO,[DISP_MODE],[UNIT],[TIME_FORMAT],[TIME_ZONE],[POS_FORMAT][¥r]	
Radio → Controller		
①	GDO,[DISP_MODE],[UNIT],[TIME_FORMAT],[TIME_ZONE],[POS_FORMAT][¥r]	
②	GDO,OK[¥r]	
	[DISP_MODE]	: Display GPS Mode (0:ETA / 1:Clock / 2:Elevation / 3:Speed / 4:Location)
	[UNIT]	: Distance Unit (0: mile / 1: km)
	[TIME_FORMAT]	: Time Format (0: 12 H / 1: 24H)
	[TIME_ZONE]	: Time Zone (-14.0/-13.5/.../-0.5/0.0/0.5/.../13.5/14.0) ex) "-14.0" means "- 14.0 H".
	[POS_FORMAT]	: Position Format (DMS / DEG)
This command is only acceptable in Programming Mode.		
<COMMAND GGA> Get GGA Data from GPS		
Controller → Radio		
①	GGA[¥r]	
Radio → Controller		
①	GGA,[GGA_DATA][¥r]	
	[GGA_DATA]	: The new GGA Data which the scanner received. (\$GPGGA – checksum)
*If the scanner can not receive GGA data, it returns only “,” to controller.		
<COMMAND RMC> Get RMC Data from GPS		
Controller → Radio		
①	RMC[¥r]	
Radio → Controller		
①	RMC,[RMC_DATA][¥r]	
	[RMC_DATA]	: The new RMC data which the scanner received. (\$GPRMC – checksum)

*If the scanner can not receive RMC data, it returns only “,” to controller.

<COMMAND STT>
Get / Set State Setting

Controller → Radio

- ① STT[¥r]
- ② STT,[STATE][¥r]

Radio → Controller

- ① STT,[STATE][¥r]
- ② STT,OK[¥r]

[STATE] : State (AL/AK/.../CAN_YU)

*See *STATE LIST* about the details of this setting. But there is not "00" (Off) setting.

This command is only acceptable in Programming Mode.

<COMMAND BTL>
Get / Set Bear Tracker Lockout Status

Controller → Radio

- ① BTL[¥r]
- ② BTL,[POL_STATUS],[DOT_STATUS],[HP_STATUS],[BT_STATUS][¥r]

Radio → Controller

- ① BTL,[POL_STATUS],[DOT_STATUS],[HP_STATUS],[BT_STATUS][¥r]
- ② BTL,OK[¥r]

[POL_STATUS] : Lockout Status of POL (0:Unlocked / 1:Lockout)

[DOT_STATUS] : Lockout Status of DOT (0:Unlocked / 1:Lockout)

[HP_STATUS] : Lockout Status of HP (0:Unlocked / 1:Lockout)

[BT_STATUS] : Lockout Status of BT (0:Unlocked / 1:Lockout)

This command is only acceptable in Programming Mode.

<COMMAND BTS>
Get / Set Bear Tracker Option Settings

Controller → Radio

- ① BTS[¥r]
- ② BTS,[ALTB],[ALTL],[RECORD],[DLY],[ATT],[HLD],[P-CHS][¥r]

Radio → Controller

- ① BTS,[ALTB],[ALTL],[RECORD],[DLY],[ATT],[HLD],[P-CHS][¥r]
- ② BTS,OK[¥r]

[ALTB] : Alert Beep (0:OFF / 1-9:Tone No)

[ALTL] : Alert Tone Level (0:AUTO/ 1-15)

[RECORD] : Tape out (0:OFF / 1:ON)

[DLY] : Delay Time (0:OFF / 1 - 5)

[ATT] : Attenuation (0:OFF / 1:ON)

[HLD] : System Hold Time (0-255)

[P-CHS] : Number of Pri ch at one interruption (1-255)

This command is only acceptable in Programming Mode.

<COMMAND WIN>
*Get Window Voltage

Controller → Radio

- ① WIN[¥r]

Radio → Controller

- ① WIN,###,[FRQ][¥r] : ### : A/D Value (0-255)

Returns current window voltage and its frequency.

The order of the frequency digits is from 1 GHz digit to 100 Hz digit.

This command is for test mode.

CTCSS/DCS CODE LIST

NONE / SEARCH

MODE	CODE	MODE	CODE
NONE / All	0	SEARCH	127

CTCSS

MODE	CODE	CTCSS 114.8Hz	80	CTCSS 179.9Hz	97
CTCSS 67.0Hz	64	CTCSS 118.8Hz	81	CTCSS 183.5Hz	98
CTCSS 69.3Hz	65	CTCSS 123.0Hz	82	CTCSS 186.2Hz	99
CTCSS 71.9Hz	66	CTCSS 127.3Hz	83	CTCSS 189.9Hz	100
CTCSS 74.4Hz	67	CTCSS 131.8Hz	84	CTCSS 192.8Hz	101
CTCSS 77.0Hz	68	CTCSS 136.5Hz	85	CTCSS 196.6Hz	102
CTCSS 79.7Hz	69	CTCSS 141.3Hz	86	CTCSS 199.5Hz	103
CTCSS 82.5Hz	70	CTCSS 146.2Hz	87	CTCSS 203.5Hz	104
CTCSS 85.4Hz	71	CTCSS 151.4Hz	88	CTCSS 206.5Hz	105
CTCSS 88.5Hz	72	CTCSS 156.7Hz	89	CTCSS 210.7Hz	106
CTCSS 91.5Hz	73	CTCSS 159.8Hz	90	CTCSS 218.1Hz	107
CTCSS 94.8Hz	74	CTCSS 162.2Hz	91	CTCSS 225.7Hz	108
CTCSS 97.4Hz	75	CTCSS 165.5Hz	92	CTCSS 229.1Hz	109
CTCSS 100.0Hz	76	CTCSS 167.9Hz	93	CTCSS 233.6Hz	110
CTCSS 103.5Hz	77	CTCSS 171.3Hz	94	CTCSS 241.8Hz	111
CTCSS 107.2Hz	78	CTCSS 173.8Hz	95	CTCSS 250.3Hz	112
CTCSS 110.9Hz	79	CTCSS 177.3Hz	96	CTCSS 254.1Hz	113

DCS

MODE	CODE	DCS 212	162	DCS 432	197
DCS 023	128	DCS 223	163	DCS 445	198
DCS 025	129	DCS 225	164	DCS 446	199
DCS 026	130	DCS 226	165	DCS 452	200
DCS 031	131	DCS 243	166	DCS 454	201
DCS 032	132	DCS 244	167	DCS 455	202
DCS 036	133	DCS 245	168	DCS 462	203
DCS 043	134	DCS 246	169	DCS 464	204
DCS 047	135	DCS 251	170	DCS 465	205
DCS 051	136	DCS 252	171	DCS 466	206
DCS 053	137	DCS 255	172	DCS 503	207
DCS 054	138	DCS 261	173	DCS 506	208
DCS 065	139	DCS 263	174	DCS 516	209
DCS 071	140	DCS 265	175	DCS 523	210
DCS 072	141	DCS 266	176	DCS 526	211
DCS 073	142	DCS 271	177	DCS 532	212
DCS 074	143	DCS 274	178	DCS 546	213
DCS 114	144	DCS 306	179	DCS 565	214
DCS 115	145	DCS 311	180	DCS 606	215
DCS 116	146	DCS 315	181	DCS 612	216
DCS 122	147	DCS 325	182	DCS 624	217
DCS 125	148	DCS 331	183	DCS 627	218
DCS 131	149	DCS 332	184	DCS 631	219
DCS 132	150	DCS 343	185	DCS 632	220
DCS 134	151	DCS 346	186	DCS 654	221
DCS 143	152	DCS 351	187	DCS 662	222
DCS 145	153	DCS 356	188	DCS 664	223
DCS 152	154	DCS 364	189	DCS 703	224
DCS 155	155	DCS 365	190	DCS 712	225
DCS 156	156	DCS 371	191	DCS 723	226
DCS 162	157	DCS 411	192	DCS 731	227
DCS 165	158	DCS 412	193	DCS 732	228
DCS 172	159	DCS 413	194	DCS 734	229
DCS 174	160	DCS 423	195	DCS 743	230
DCS 205	161	DCS 431	196	DCS 754	231

STATE LIST

- AMERICA -

STATE	LCD display	Value
Off	Off	00
Alabama	Alabama	AL
Alaska	Alaska	AK
Arizona	Arizona	AZ
Arkansas	Arkansas	AR
California	California	CA
Colorado	Colorado	CO
Connecticut	Connecticut	CT
Delaware	Delaware	DE
District of Columbia	Dist.of Columbia	DC
Florida	Florida	FL
Georgia	Georgia	GA
Guam	Guam	GU
Hawaii	Hawaii	HI
Idaho	Idaho	ID
Illinois	Illinois	IL
Indiana	Indiana	IN
Iowa	Iowa	IA
Kansas	Kansas	KS
Kentucky	Kentucky	KY
Louisiana	Louisiana	LA
Maine	Maine	ME
Maryland	Maryland	MD
Massachusetts	Massachusetts	MA
Michigan	Michigan	MI
Minnesota	Minnesota	MN
Mississippi	Mississippi	MS
Missouri	Missouri	MO

Montana	Montana	MT
Nebraska	Nebraska	NE
Nevada	Nevada	NV
New Hampshire	New Hampshire	NH
New Jersey	New Jersey	NJ
New Mexico	New Mexico	NM
New York	New York	NY
North Carolina	North Carolina	NC
North Dakota	North Dakota	ND
Ohio	Ohio	OH
Oklahoma	Oklahoma	OK
Oregon	Oregon	OR
Pennsylvania	Pennsylvania	PA
Puerto Rico	Puerto Rico	PR
Rhode Island	Rhode Island	RI
South Carolina	South Carolina	SC
South Dakota	South Dakota	SD
Tennessee	Tennessee	TN
Texas	Texas	TX
Utah	Utah	UT
Vermont	Vermont	VT
Virgin Islands	Virgin Islands	VI
Virginia	Virginia	VA
Washington	Washington	WA
West Virginia	West Virginia	WV
Wisconsin	Wisconsin	WI
Wyoming	Wyoming	WY

- CANADA -

STATE	LCD display	Value
Alberta	Alberta	CAN_AB
British Columbia	British Columbia	CAN_BC
Manitoba	Manitoba	CAN_MB
New Brunswick	New Brunswick	CAN_NB
Newfoundland and Labrador	Newfoundland/Labrd	CAN_NF
Nova Scotia	Nova Scotia	CAN_NS
Nunavut	Nunavut	CAN_NU
Northwest Territories	NW Territories	CAN_NW
Ontario	Ontario	CAN_ON
Prince Edward Island	Prince Edward Is	CAN_PE
Quebec	Quebec	CAN_QC
Saskatchewan	Saskatchewan	CAN_SK
Yukon	Yukon	CAN_YU

7.12. FONT DATA

Character pattern of 8 x 16 dot

This character pattern is Large Font.

*In this document, characters of these areas are described as normal characters.

*The user cannot enter characters in a dotted line.

Chr	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T
FONT																				
CODE	0x41	0x42	0x43	0x44	0x45	0x46	0x47	0x48	0x49	0x4A	0x4B	0x4C	0x4D	0x4E	0x4F	0x50	0x51	0x52	0x53	0x54

Chr	U	V	W	X	Y	Z	a	b	c	d	e	f	g	h	i	j	k	l	m	n
FONT																				
CODE	0x55	0x56	0x57	0x58	0x59	0x5A	0x61	0x62	0x63	0x64	0x65	0x66	0x67	0x68	0x69	0x6A	0x6B	0x6C	0x6D	0x6E

Chr	o	p	q	r	s	t	u	v	w	x	y	z	1	2	3	4	5	6	7	8
FONT																				
CODE	0x6F	0x70	0x71	0x72	0x73	0x74	0x75	0x76	0x77	0x78	0x79	0x7A	0x31	0x32	0x33	0x34	0x35	0x36	0x37	0x38

Chr	9	0	!	@	#	\$	%	&	*	(	)	-	/	<	>	.	?	(Space)
FONT																		
CODE	0x39	0x30	0x21	0x40	0x23	0x24	0x25	0x26	0x2A	0x28	0x29	0x2D	0x2F	0x3C	0x3E	0x2E	0x3F	0x20

Chr	+	,	:	=	"	-	↑	↓	(full-dot)
FONT									
CODE	0x2B	0x2C	0x3A	0x3D	0x22	0x5F	0x81	0x82	0x80

Character pattern of 8 x 8 dot

This character pattern is Small Font.

Chr	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S
FONT	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S
CODE	0x41	0x42	0x43	0x44	0x45	0x46	0x47	0x48	0x49	0x4A	0x4B	0x4C	0x4D	0x4E	0x4F	0x50	0x51	0x52	0x53

Chr	T	U	V	W	X	Y	Z	z	1	2	3	4	5	6	7	8	9	0	%
FONT	T	U	V	W	X	Y	Z	z	1	2	3	4	5	6	7	8	9	0	%
CODE	0x54	0x55	0x56	0x57	0x58	0x59	0x5A	0x7A	0x31	0x32	0x33	0x34	0x35	0x36	0x37	0x38	0x39	0x30	0x25

Chr	*	-	.	(Space)	:	=	(full-dot)	Function	Pri ch	HOLD	Data Skip
FONT	*	-	.		:	=	▒	▒	▒	HOLD	DSKP
CODE	0x2A	0x2D	0x2E	0x20	0x3A	0x3D	0x80	0x8B	0x8C	0x8D-0x90	0x91-0x94

Chr	L/O	AM	FM	NFM	WFM	FMB	PRI	ATT
FONT	L/O	AM	FM	NFM	WFM	FMB	PRI	ATT
CODE	0x95-0x97	0x98-0x9A	0x9B,0x9C,0x9A	0x9D,0x9E,0x9C,0x9A	0x9F,0xA0,0x9C,0x9A	0x9B,0x9C,0xB9,0xBA	0xA1,0xA2	0xA3-0xA5

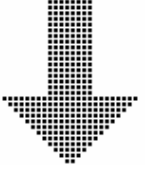
Chr	Signal Level 1	Signal Level 2	Signal Level 3	Signal Level 4	Signal Level 5	Active Indicator1	Active Indicator2	Active Indicator3	Active Indicator4	o
FONT	▒	▒▒	▒▒▒	▒▒▒▒	▒▒▒▒▒	▒	▒▒	▒▒▒	▒▒▒▒	o
CODE	0xA6,0x20	0xA7,0x20	0xA8,0xA9	0xAA,0xAB	0xAC,0xAD	0xAE	0xAF	0xB0	0xB4	0xCC

Chr	Close Call Pri	Close Call DND	Mute	+		
FONT	▒	▒	▒	▒		
CODE	0x87,0x88	0x89,0x8A	0xB5,0xB6	0xB7,0xB8	0xBB,0xBC	0x2B

Character pattern of GPS Mode

This character pattern is used in GPS Mode.

*() shows the number of dots for the characters.

Chr	$\uparrow$ (32*32)	$\nearrow$ (32*32)	$\rightarrow$ (32*32)	$\searrow$ (32*32)	$\downarrow$ (32*32)
FONT					
COD E	0x98 - 0x9B, 0xA0 - 0xA3	0x88 - 0x8B, 0x90 - 0x93	0xAC - 0xAF, 0xB4 - 0xB7	0x84 - 0x87, 0x8C - 0x8F	0xE8 - 0xEB, 0xF0 - 0xF3

Chr	$\swarrow$ (32*32)	$\leftarrow$ (32*32)	$\nwarrow$ (32*32)
FONT			
COD E	0xD8 - 0xDB, 0xE0 - 0xE3	0xC8 - 0xCB, 0xD0 - 0xD3	0xB8 - 0xBB, 0xC0 - 0xC3

Chr	$\uparrow$ (16*16)	$\nearrow$ (16*16)	$\rightarrow$ (16*16)	$\searrow$ (16*16)	$\downarrow$ (16*16)	$\swarrow$ (16*16)	$\leftarrow$ (16*16)	$\nwarrow$ (16*16)	o (8*16)	Function (8*16)
FONT										
COD E	0xBC,0xBD	0x9C,0x9D	0xC4,0xC5	0x94,0x95	0xBE,0xBF	0x96,0x97	0xC6,0xC7	0x9E,0x9F	0xCC	0xD4

Chr	North (16*16)	West (16*16)	South (16*16)	East (16*16)	L/O (24*16)	' (8*16)
FONT						
COD E	0xA6,0xA7	0xA8,0xA9	0xAA,0xAB	0xA4,0xA5	0xDD - 0xDF	0x27