
YAESU

Yaesu System 600

Service Manual

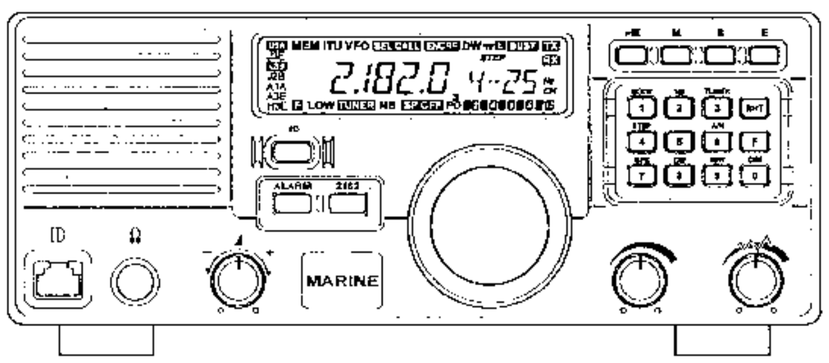

YAESU MUSEN CO., LTD.
4-8-8 Nakameguro, Meguro-Ku, Tokyo 153-8644, Japan
YAESU U.S.A.
17210 Edwards Rd., Cerritos, CA 90703, U.S.A.
YAESU EUROPE B.V.
P.O. Box 75525 1118 ZN, Schiphol, The Netherlands
YAESU UK LTD.
Unit 12, Sun Valley Business Park, Winnall Close
Winchester, Hampshire, SO23 0LB, U.K.
YAESU GERMANY GmbH
Am Kronberger Hang 2, D-65824 Schwalbach, Germany
YAESU HK LTD.
11th Floor Tsim Sha Tsui Centre, 66 Mody Rd.,
Tsim Sha Tsui East, Kowloon, Hong Kong

Contents


Introduction 1-1
Specifications 1-2
Chip Component Information 1-3
Circuit Board Access 2-1
Exploded View & Miscellaneous Parts 2-3
Alignment 2-5
Circuit Description 3-1
Block Diagram 3-7
Interconnection Diagram 3-8

Board Units (Circuit Diagram, Parts Layout, Parts List) 4
Main Unit 4A-1
Local Unit 4B-1
DDS-1 Unit 4C-1
DDS-2 Unit 4D-1
OSC Unit 4E-1
Display Unit 4F-1
LPF Unit 4G-1
100W PA Unit 4H-1
SW-A Unit 4I-1
SW-B Unit 4J-1
MIC Unit 4K-1
VR-A Unit 4L-1
VR-B Unit 4M-1
VR-C Unit 4N-1
ENC Unit 4O-1
PGM Unit 4P-1

Optional Board Unit (Circuit Diagram, Parts Layout, Parts List) 5
TCXO-4 High-Stability Master Oscillator 5A-1
FVP-24 Encryption Unit 5B-1

Cut out the label at the right, and place it behind the clear plastic window in the spine of the manual.

Yaesu System 600
Service Manual

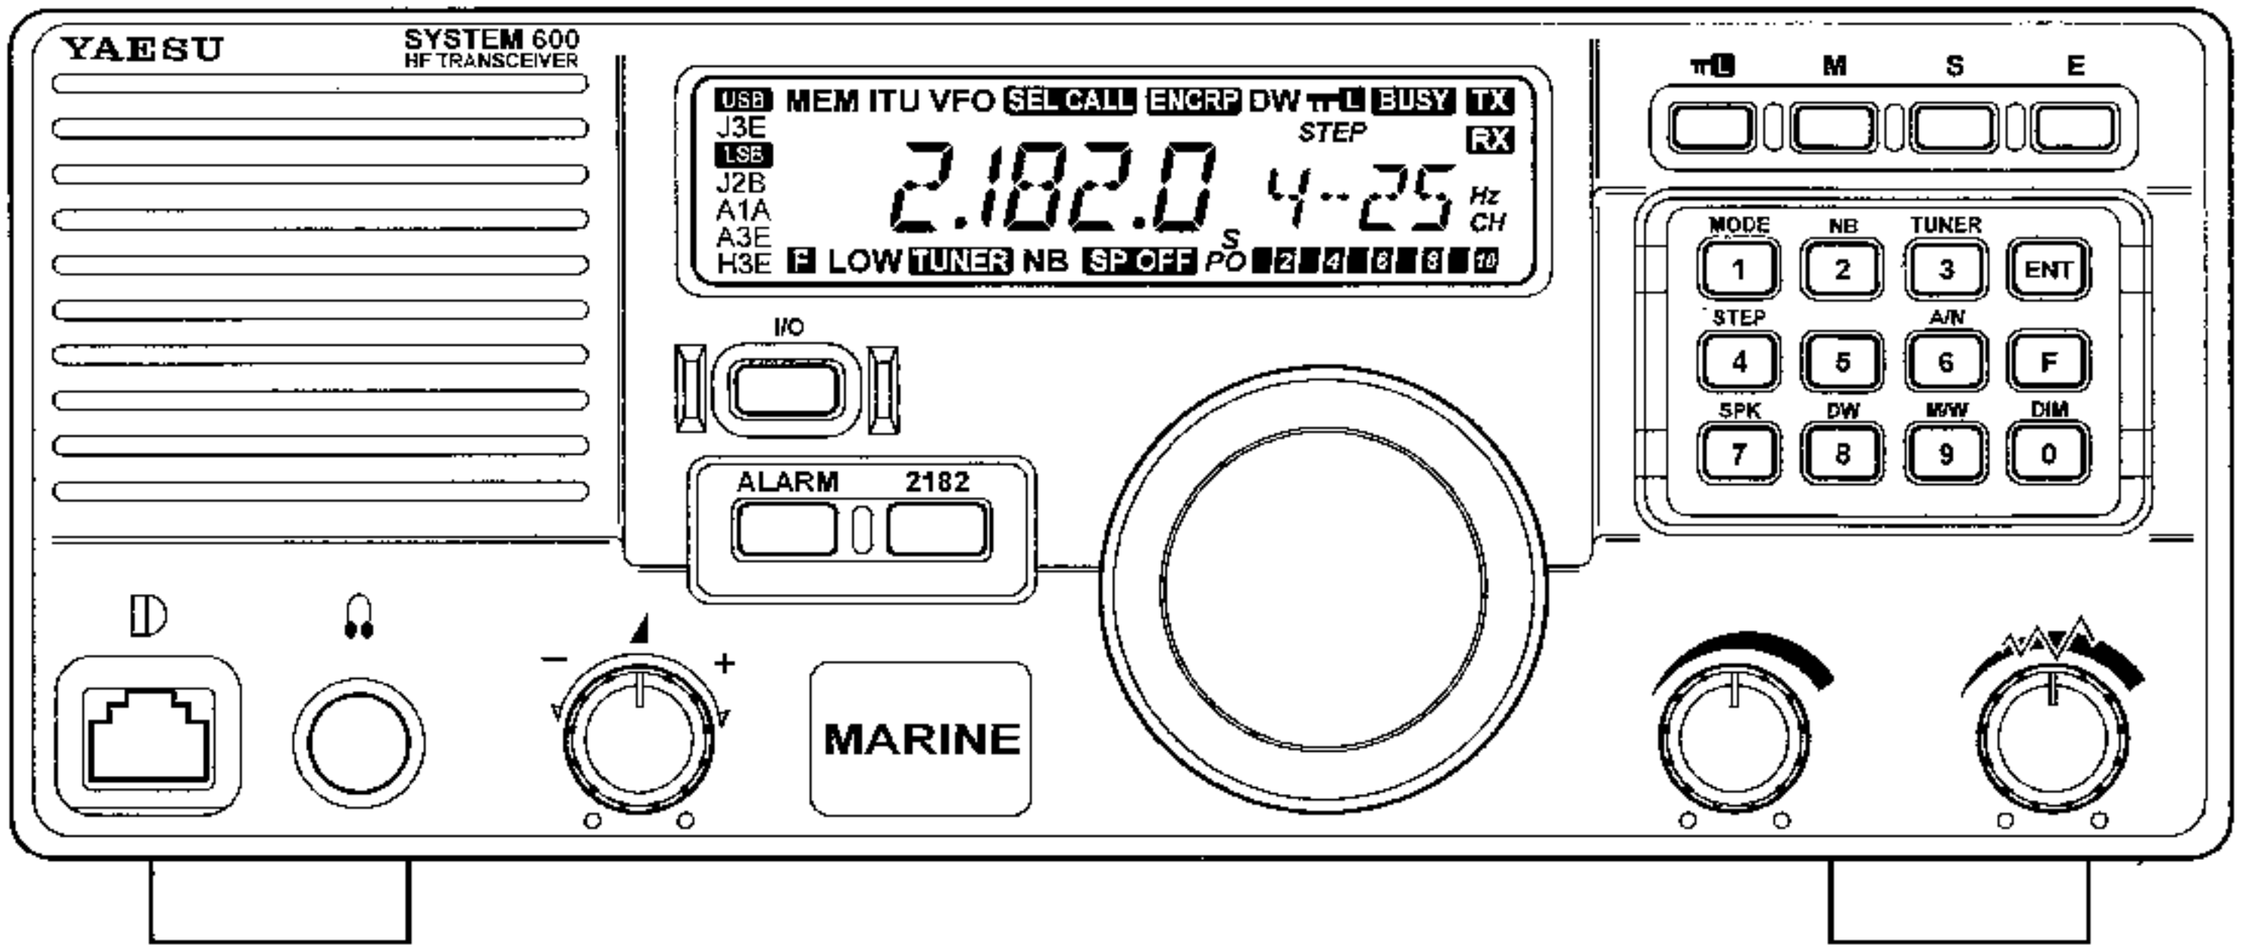

The manual provides the technical information necessary for servicing the Yaesu System 600 100 Watt HF communications transceiver.

Servicing this equipment requires expertise in handling surface-mount chip components. Attempts by non-qualified persons to service this equipment may result in permanent damage not covered by the warranty, and may be illegal in some countries.

Two PCB layout diagrams provided for each double-sided board in this transceiver. Each side of the board is referred to by the type of the majority of components installed on that side ("leaded" or "chip-only"). In most cases one side has only chip components, and the other has either a mixture of both chip and leaded components (trimmers, coils, electrolytic capacitors, ICs, etc.), or leaded components only.

While we believe the information in this manual to be correct, Yaesu Musen assumes no liability for damage that may occur as a result of typographical or other errors that may be present. Your cooperation in pointing out any inconsistencies in the technical information would be appreciated.

Specifications

General

Receiver Frequency Range: 50 kHz ~ 29.99999 MHz

Transmitter Frequency Range:

1.8 ~ 29.99999 MHz (Selected memory channels, depending on ITU Marine channels or general coverage configuration)

Emission Types:

A1A (CW)
J2B (USB, LSB)
J3E (USB, LSB)
H3E (2182 Mode only, Marine version only)
A3E (AM)

Frequency Synthesizer Step Resolution:

10 Hz, 100 Hz, 1 kHz

Frequency Stability:

±10 ppm from 0 °C ~ +40 °C (Standard Version)
±2 ppm from 0 °C ~ +50 °C (w/TCXO-4 Option)

Operating Temperature Range: -10°C ~ +50°C

Antenna Impedance:

50 Ω nominal (2:1 Maximum Permitted SWR)

Supply Voltage: 13.5 V DC ±10%, negative ground

Power Consumption:

1.2 A (Receive, no signal)
20 A (Transmit, 100 watts output)

Dimensions (WHD): 244 x 104 x 286 mm

Weight (Approx.): 4.5 kg (9.9 lbs.)

Transmitter

Power Output:

100 watts (J2B, J3E, A1A)
25 watts AM Carrier (A3E, H3E)

Modulation Types:

SSB: Balanced modulator, filtered carrier
AM: Low-level (early stage)

Spurious Radiation: 40 dB below peak output

SSB Carrier Suppression:

> 40 dB below peak output

Undesired Sideband Suppression:

At least 50 dB below peak output @ 1.5 kHz modulation input

SSB Audio Response:

Not more than -6 dB from 400 Hz ~ 2600 Hz

Occupied Bandwidth:

A1A: < 0.5 kHz
J2B: < 3.0 kHz
J3E: < 3.0kHz
H3E: < 3.0 kHz
A3E: < 6.0kHz

3rd-Order IMD:

-25 dB or better @ 100W PEP (14 MHz)

Microphone Impedance: 500 ~ 600 Ω

Receiver

Circuit Type: Double-conversion Superheterodyne

Intermediate Frequencies:

1st: 47.055 MHz, 2nd: 8.215 MHz

Sensitivity (for 10 dB S/N):

0.5 ~ 1.8 MHz: J2B/J3E/A1A 2 μV, A3E 8 μV
1.8 ~ 29.999 MHz: J2B/J3E/A1A 0.25 μV, A3E 1μV

Squelch Sensitivity:

Better than 2 μV (1.8 ~ 29.999 MHz)

IF Rejection: Better than 60 dB (1.8 ~ 29.999 MHz)

Image Rejection: Better than 70 dB (1.8 ~ 29.999 MHz)

Selectivity:

J2B/J3E/A3E-Narrow/H3E-Narrow/A1A-Wide
2.2 kHz (-6 dB), 5.0 kHz (-60 dB)
A1A-Narrow 500 Hz (-6 dB), 1.2 kHz (-60 dB)
A3E 6.0 kHz (-6 dB), 12.0 kHz (-60 dB)

Clarifier Range: ±300 Hz

Audio Output:

At least 1.5 watts into 4 Ω (@ 10% THD or less)

Conducted Radiation: Less than -55 dBm

Spurious Responses:


Below 1 mV equivalent signal level. (Except discrete spurious responses at 5.2428 MHz , 8.2150 MHz, 10.4857 MHz, and 19.6610MHz)

Specifications may be subject to change without notice.

Chip Component Information

The diagrams below indicate some of the distinguishing features of common chip components .


Capacitors

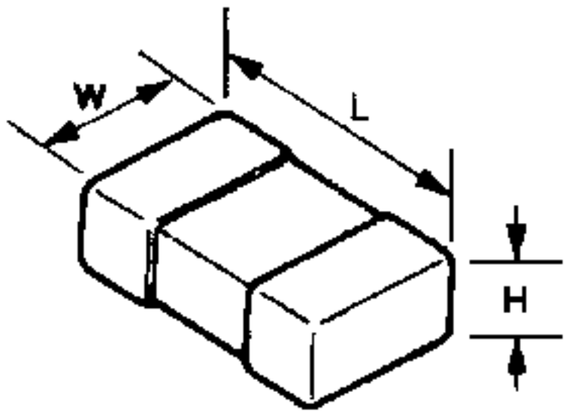

(Unit: mm)

Type	L	W	H
2125	2.0	1.25	0.35 ~ 0.5
1608	1.6	0.8	0.65 ~ 0.95
1005	1.0	0.5	0.45 ~ 0.55


Tantalum Capacitors

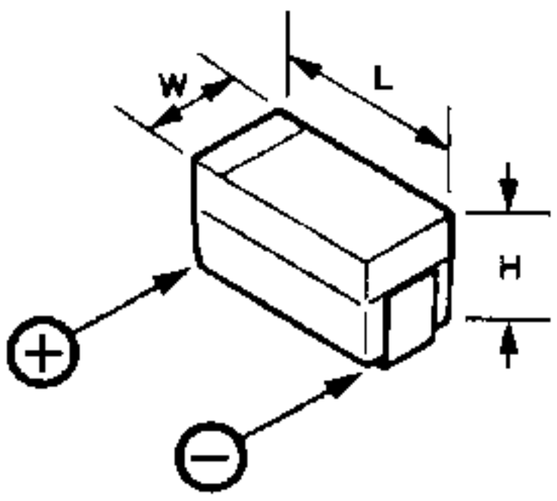

(Unit: mm)

Type	L	W	H
I'	2.0	1.25	1.2
A	3.2	1.6	1.6
B	3.4	2.8	1.9
C	5.8	3.2	2.3

Resistors

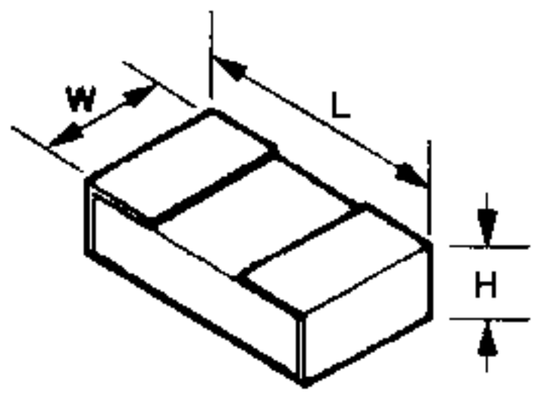


Indicated Letters

1 2 3 4 5 6 7 8 9 0 .

(Unit: mm)

Type	L	W	H
1/10	2.0	1.25	0.5
1/16	1.6	0.8	0.45
1/16S	1.0	0.5	0.35

Marking* 100, 222, 473...

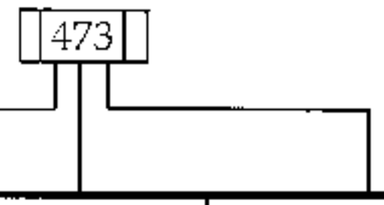

Ten unit	One unit	Multiplier code
0	0	10^0
1	1	10^1
2	2	10^2
3	3	10^3
4	4	10^4
5	5	10^5
6	6	10^6
7	7	10^7
8	8	10^8
9	9	10^9

Examples: 100=10Ω
222=2.2kΩ
473=47kΩ

Chip Component Information

Replacing Chip Components

Chip components are installed at the factory by a series of robots. The first one places a small spot of adhesive resin at the location where each part is to be installed, and later robots handle and place parts using vacuum suction.

For single sided boards, solder paste is applied and the board is then baked to harden the resin and flow the solder. For double sided boards, no solder paste is applied, but the board is baked (or exposed to ultra-violet light) to cure the resin before dip soldering.

In our laboratories and service shops, small quantities of chip components are mounted manually by applying a spot of resin, placing with tweezers, and then soldering by very small dual streams of hot air (without physical contact during soldering). We remove parts by first removing solder using a vacuum suction iron, which applies a light steady vacuum at the iron tip, and then breaking the adhesive with tweezers.


The special vacuum/desoldering equipment is recommended if you expect to do a lot of chip replacements. Otherwise, it is usually possible to remove and replace chip components with only a tapered, temperature-controlled soldering iron, a set of tweezers and braided copper solder wick. Soldering iron temperature should be below 280°C (536°F).

Precautions for Chip Replacement

- ○ Do not disconnect a chip forcefully, or the foil pattern may peel off the board.
- ○ Never re-use a chip component. Dispose of all removed chip components immediately to avoid mixing with new parts.
- ○ Limit soldering time to 3 seconds or less to avoid damaging the component and board.

Removing Chip Components


❒ Remove the solder at each joint, one joint at a time, using solder wick whetted with nonacidic fluxes as shown below. Avoid applying pressure, and do not attempt to remove tinning from the chip's electrode.

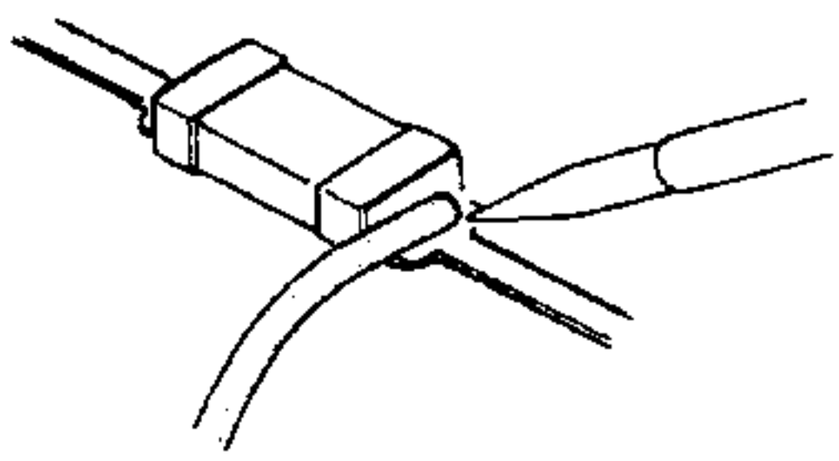

❒ Grasp the chip on both sides with tweezers, and gently twist the tweezers back and forth (to break the adhesive bond) while alternately heating each electrode. Be careful to avoid peeling the foil traces from the board.

Dispose of the chip when removed.


❒ After removing the chip, use the copper braid and soldering iron to wick away any excess solder and smooth the land for installation of the replacement part.

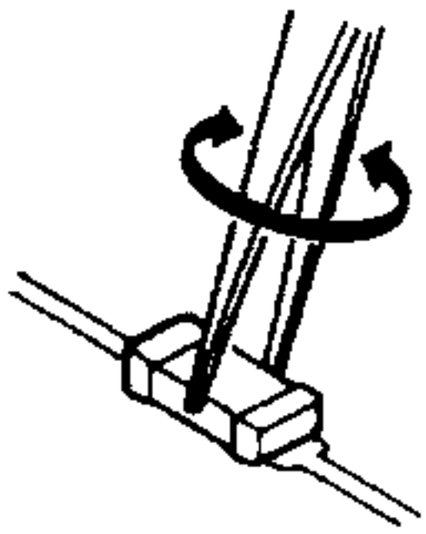


Installing a Replacement Chip

As the value of some chip components is not indicated on the body of the chip, be careful to get the right part for replacement.

❒ Apply a small amount of solder to the land on one side where the chip is to be installed. Avoid too much solder, which may cause bridging (shorting to other parts).

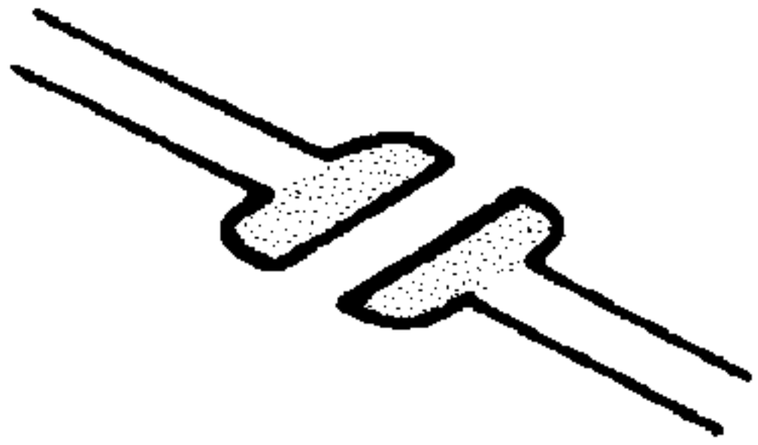

❒ Hold the chip with tweezers in the desired position, and apply the soldering iron with a motion line as indicated by the arrow in the diagram below. Do not apply heat for more than 3 seconds.

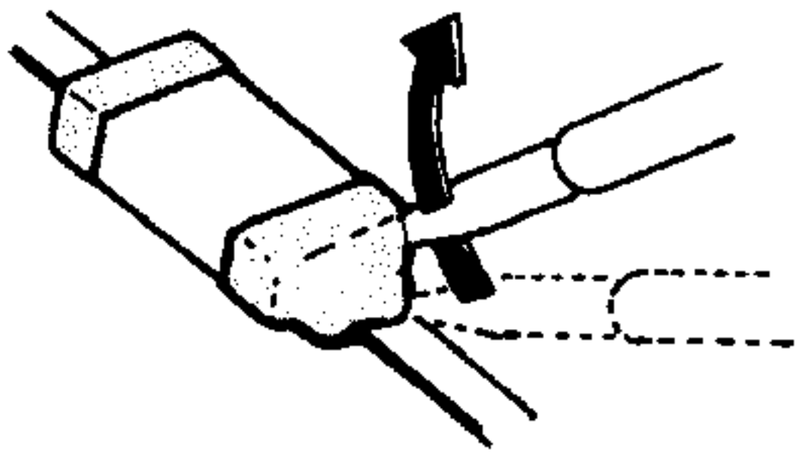

❒ Remove the tweezers and solder the elec trode on the other side in the manner just described.


Circuit Board Access

Unit Access


Turn the transceiver off and disconnect all cables.


Remove the 5 screws affixing the top cover.

You may now remove the top cover to expose the component side of the Main Unit.

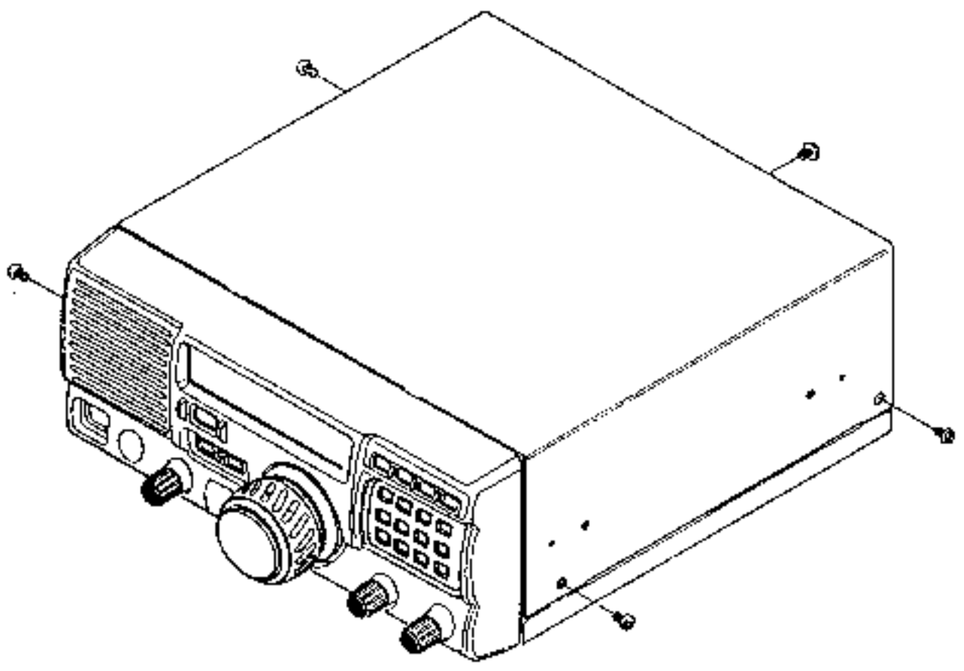


Place the set upside-down on the work surface, then remove the 6 screws affixing the bottom cover. Remove the cover to expose the components side of the Local Unit.

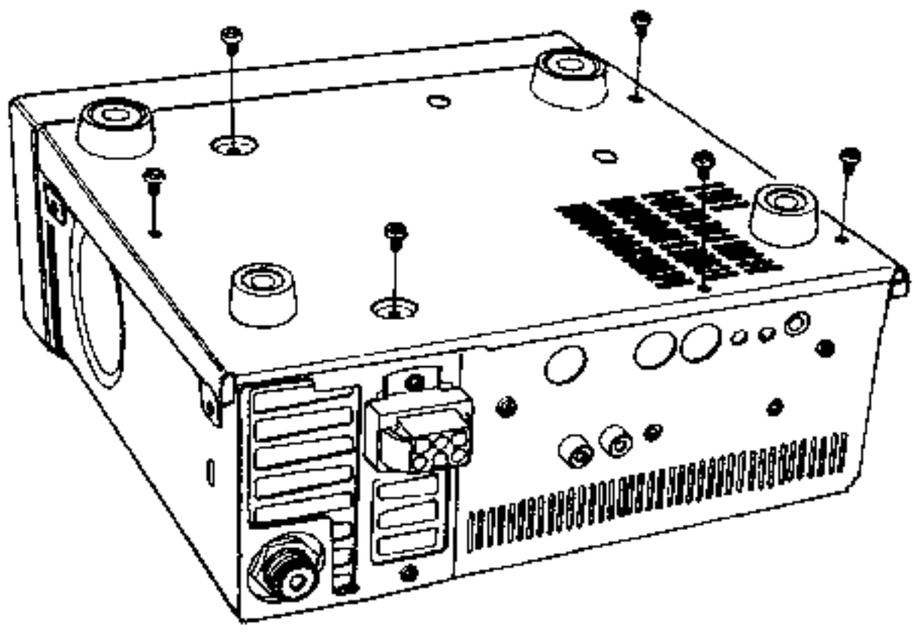


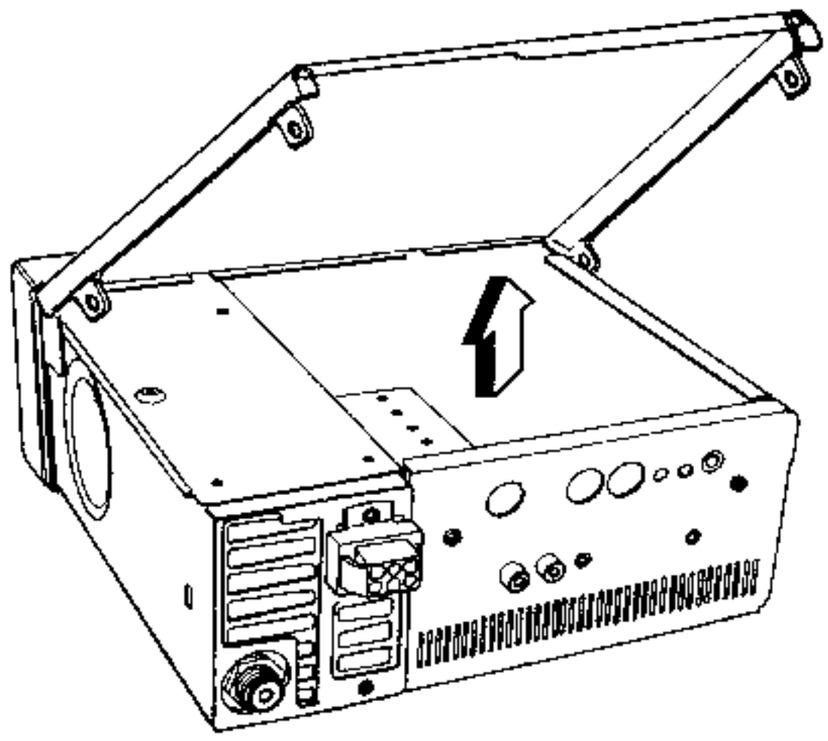


To remove the PA Unit (with the set upside-down), remove the 2 screws affixing the PA Unit to the transceiver chassis.

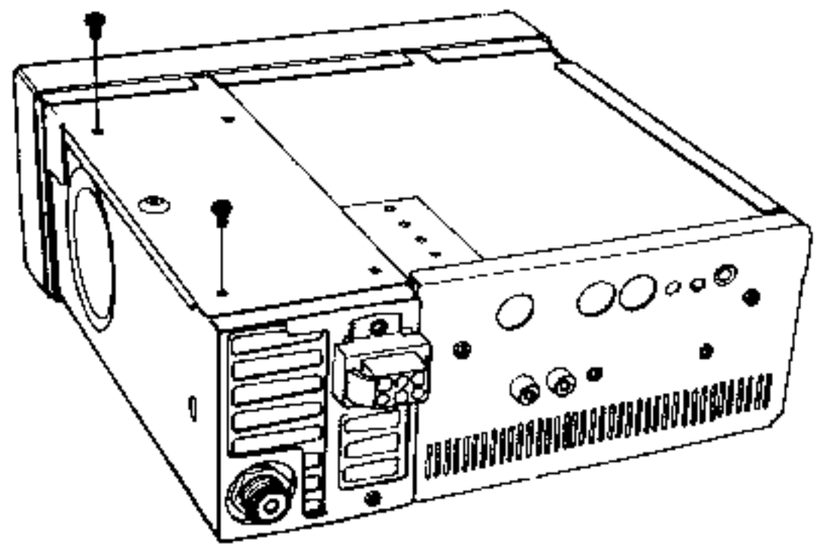

Next remove the connecting wire and coaxial cables leading from the Main and Local Units, then remove the PA Unit from the chassis.

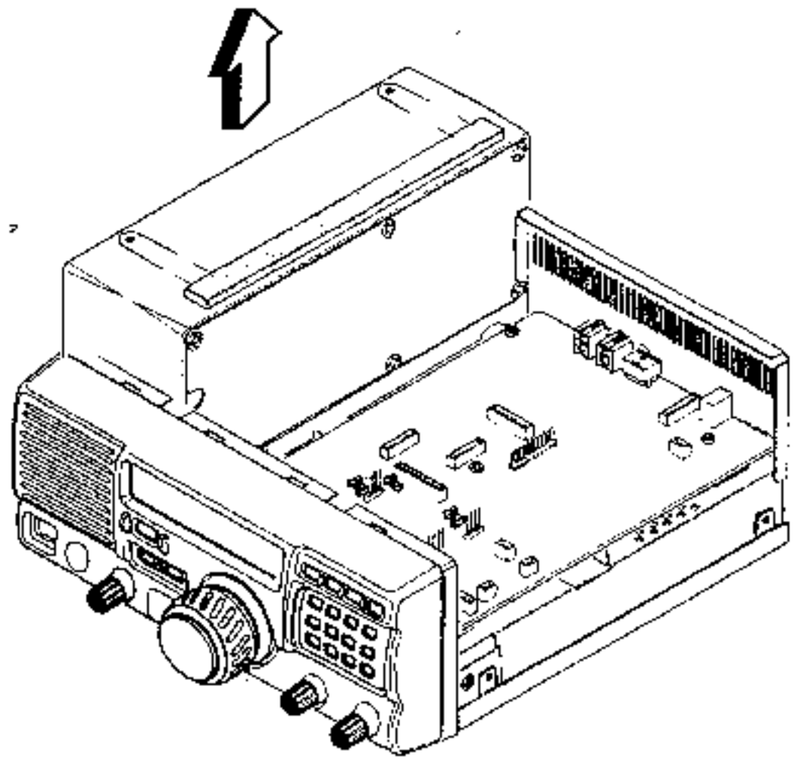

Exploded View & Miscellaneous Parts

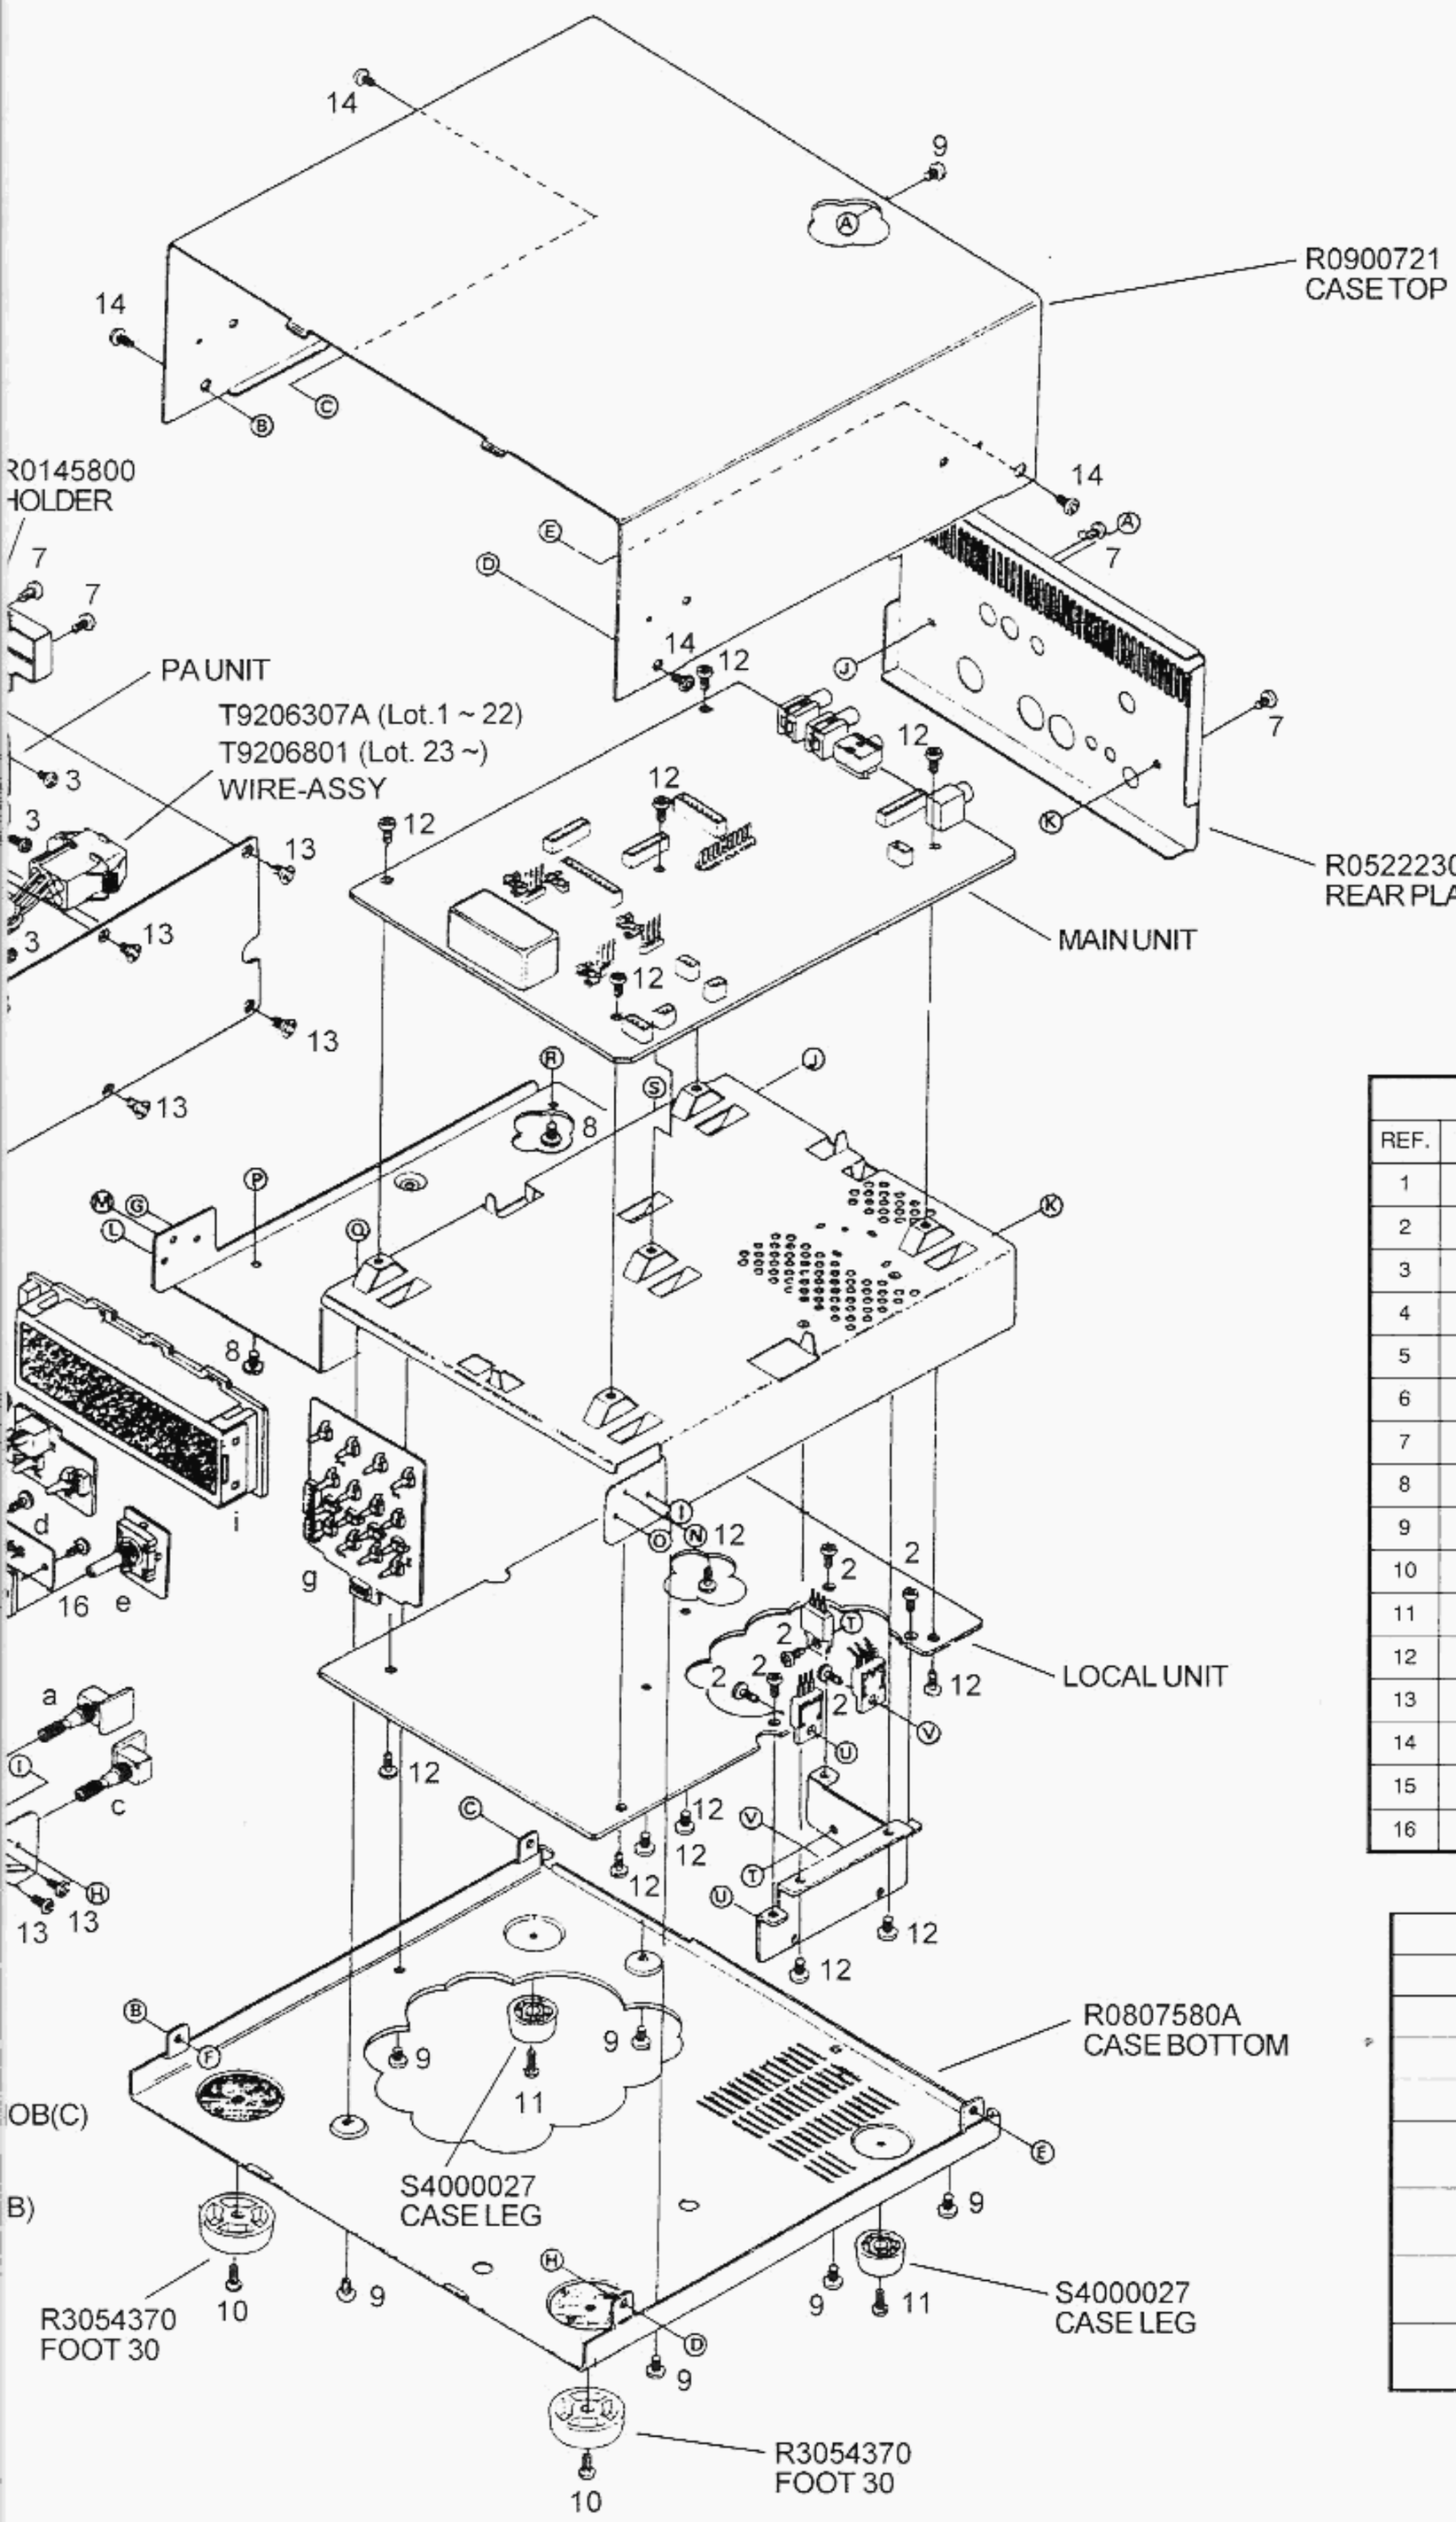


Screw List			
REF.	YAESU P/N	Description	Qty.
1	U02306001	SEMS SCREW SM3X6	2
2	U24206001	TAPTITE SCREW M2.6X6	6
3	U03308001	SEMS SCREW ASM3X8	16
4	U04310002	SEMS SCREW HSM3X10NI	1
5	U73004002	TOOTHED LOCK WASHER IW4NI	1
6	U20304001	BINDING HEAD SCREW M3X4	2
7	U20305002	BINDING HEAD SCREW	4
8	U20306001	BINDING HEAD SCREW	2
9	U20306007	BINDING HEAD SCREW	7
10	U20406007	BINDING HEAD SCREW	2
11	U20408007	BINDING HEAD SCREW	2
12	U24306001	TAPTITE SCREW M3X6	14
13	U30306001	FLAT HEAD SCREW M3X6	14
14	U31306007	OVAL HEAD SCREW M3X6B	4
15	U9900010	TAPTITE SCREW HM3X6B	3
16	U23210001	TAPTITE SCREW M2.6X10	2

Basic Accessories	
Description	YAESU P/N
20-Amp Fuse	Q0000009
DC Cable	T9018320
3.5mm Plug (Stereo)	P0091046
Key Cover Jig (Release Plate)	R0154420
Keypad Cover (SUB Panel A)	R3522420
2182/ALARM Cover (SUB Panel B)	R3522430
"ITU-Disable" Plug (Connector)	P1090737

Non-designated parts are available
only as part of designated assembly.

REF.	UNIT
a	VR-A UNIT
b	VR-B UNIT
c	VR-C UNIT
d	PGM UNIT
e	ENC UNIT
f	MIC UNIT
g	SW-A UNIT
h	SW-B UNIT
i	DISPLAY UNIT

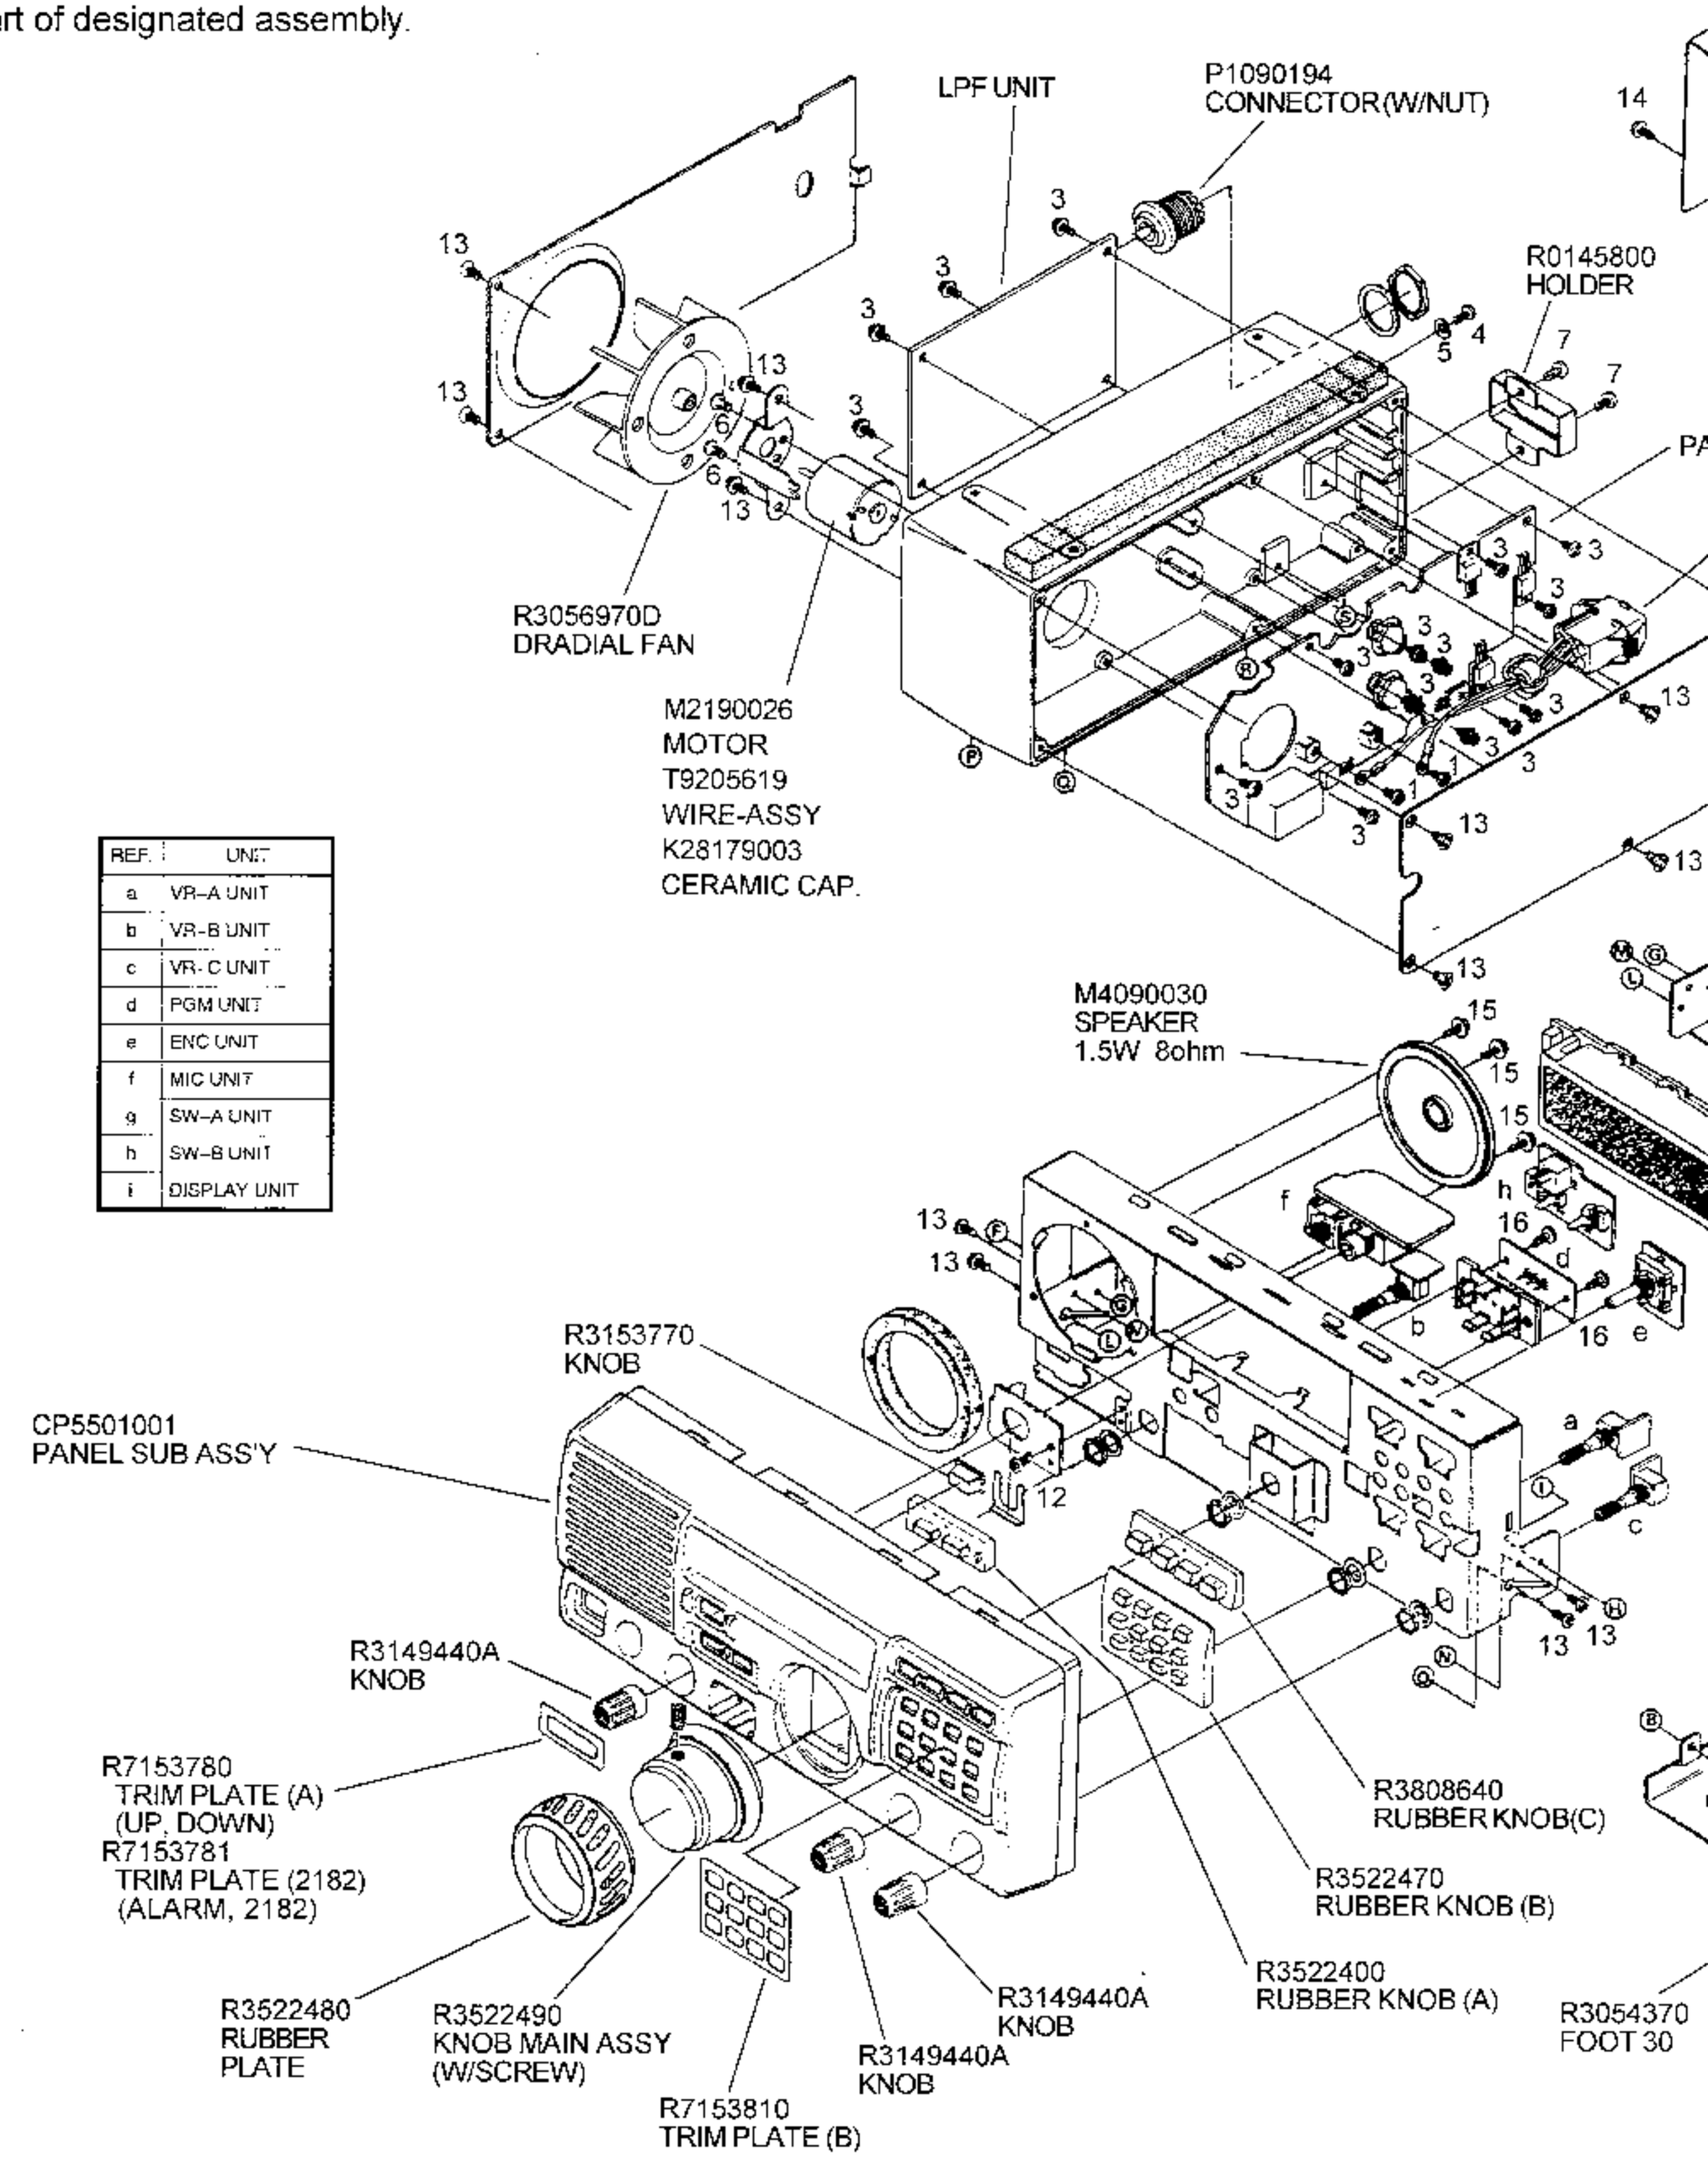

Alignment

Introduction and Precautions

The Yaesu System 600 is carefully designed to allow the knowledgeable operator to make nearly all adjustments required for various station conditions, modes and operator preferences simply from the controls on the front and rear panels, without opening the case of the transceiver. These adjustments, plus certain internal settings, are described in the Yaesu System 600 Operating Manual.

The following procedures cover the sometimes critical and tedious adjustments that are not normally required once the transceiver has left the factory. However, if damage occurs and some parts are subsequently replaced, realignment may be required. If a sudden problem occurs during normal operation, it is likely due to component failure; realignment should not be done until after the faulty component has been replaced.

We recommend that servicing be performed only by authorized Yaesu service technicians, experienced with the circuitry and fully equipped for repair and alignment. So if a fault is suspected, you should contact the selling dealer for instructions regarding repair. Authorized Yaesu service technicians have the latest modification information, and realign all circuits and make complete performance checks to ensure compliance with factory specifications after replacing faulty components.

Those who do undertake any of the following alignments are cautioned to proceed at their own risk. Problems caused by unauthorized attempts at realignment are not covered by the warranty policy. Also, Yaesu reserves the right to change circuits and alignment procedures in the interest of improved performance, without notifying owners.

Under no circumstances should any alignment be attempted unless the normal function and operation of the transceiver are clearly understood, the cause of the malfunction has been clearly pinpointed and any faulty components replaced, and the need for realignment determined to be absolutely necessary.

The following test equipment (and thorough familiarity with its correct use) is necessary for complete realignment. Correction of problems caused by misalignment resulting from use of improper test equipment is not covered under the warranty policy. While most steps do not require all of the equipment listed, the interactions of some adjustments may require that more complex adjustments be performed afterwards. Do not attempt to perform only a single step unless it is clearly isolated electrically from all other steps. Rather, have all test equipment ready before beginning, and follow all of the steps in a section in the order they are presented.

Required Test Equipment

- ○ Digital DC Voltmeter (high-Z, >1 M ohm/V)
- ○ DC Ammeter
- ○ AC Voltmeter
- ○ RF Voltmeter
- ○ RF Standard Signal Generator w/calibrated output and dB scale, 0 dBμ = 0.5μV
- ○ AF Signal Generator with calibrated output
- ○ AF Voltmeter
- ○ Frequency Counter
- ○ 50-ohm Dummy Load (150 - 250 watts)
- ○ 16.6-ohm Dummy Load (150 watts)
- ○ In-Line Wattmeter (150 - 250 watts, 50-ohm)
- ○ RF Attenuator (150 watts, 40-dB) or Coupler

Alignment

Alignment Preparation & Precautions

A 50-ohm dummy load and in-line wattmeter must be connected to the antenna jack in all procedures that call for transmission, except where specified otherwise. Correct alignment is not possible with an antenna.

Except where specified otherwise, the transceiver should be tuned to 14.200 MHz,

USB mode, and these controls set as indicated:

○ SQL & VOL fully ccw (minimum)

○ CLARIFIER to 12 o'clock

After completing one step, read the following step to determine whether the same test equipment will be required. If not, remove the test equipment (except the dummy load and wattmeter, if connected) before proceeding.

Correct alignment requires that the ambient temperature be the same as that of the transceiver and test equipment, and that this temperature be held constant between 20

and 30 ºC (68 - 86 ºF). If the transceiver is brought into the shop from hot or cold air it

should be allowed some time for thermal equalization with the environment before alignment.

Alignments must only be made with oscillator shields and circuit boards firmly affixed in place. Only one extender board should be installed at a time for access to the board being aligned. Also, the test equipment must be thoroughly warmed up before beginning.

Alignment values assume a DC supply voltage of 13.5V DC.

Note: Signal levels in dB referred to in alignment are based on 0 dBµ = 0.5 µV.

Local Unit

Refer to the Local Unit Alignment Diagram on page 2-11. To prevent PLL unlock from interfering with the Local Unit alignment process, connect TP2004 to ground. Remember to disconnect TP2004 when finished with the alignment!

Reference Oscillator

❒ Connect the frequency counter to JP2001, and the voltmeter to TP2005.

❒ If the counter frequency differs by more than 3 Hz from 5.242880 MHz, adjust the TCXO-4 trimmer (if the TCXO is installed) or TC2701.

❒ Confirm a level of at least 900 mVrms on the RF voltmeter.

DDS 1 Check

❒ Tune the transceiver to 7.045.1 MHz, and select LSB mode.

❒ Connect the voltmeter to Q2036, pin 2, and confirm that the RF voltmeter indicates at least 110 mVrms.

DDS 2 Check

❒ Tune the transceiver to 7.045.1 MHz, and select LSB mode.

❒ Connect the RF voltmeter to Q2044, pin 2, and confirm an indication of at least 65 mVrms.

PLL BPF

❒ Connect the RF voltmeter to TP2001.

❒ Tune the transceiver to 7.005.6 MHz, and select LSB mode.

❒ Adjust T2001, T2002 and T2003 alternately several times for peak indicated RF voltage (at least 190 mVrms).

Carrier Level Adjust & Frequency Check

❒ Connect RF voltmeter to TP2015.

❒ Alternately adjust T2004 and T2005 several times for peak indicated RF voltage (at least 320 mVrms).

❒ Replace the voltmeter with a frequency counter.

❒ Select the indicated mode and frequency, according to the following table. Press the PTT-button to transmit.

Frequency	Mode
8.213.50 MHz	J3E (LSB)
8.216.50 MHz	J3E (USB)
8.215.80 MHz	A1A
8.215.80 MHz	A3E
8.213.00 MHz	J2B (LSB)
8.217.00 MHz	J2B (USB)

❒ Confirm that the carrier frequency is within ± 20 Hz of the displayed counter frequency.

PLL Main Loop VCO

❒ Connect the DC voltmeter to TP2013, then adjust and check the VCO voltage according to Table 1 as shown below.

Table 1. VCO Voltage Alignment

Tune to:	Adjust:	for indicated voltage of:
30.000.0 MHz	L2027	7.9 to 8.1 V
21.500.0 MHz	confirm	2.0 to 3.0 V
21.499.9 MHz	L2019	7.9 to 8.1 V
14.500.0 MHz	confirm	2.0 to 3.0 V
14.499.9 MHz	L2017	7.9 to 8.1 V
7.500.0 MHz	confirm	2.0 to 3.0 V
7.499.9 MHz	L2011	7.9 to 8.1 V
0.100.0 MHz	confirm	2.0 to 3.0 V

❒ Tune the transceiver to 30.000.0 MHz, USB mode, connect the voltmeter to L2005, and confirm a level of more than 60 mVrms.

1st L.O. Output Level Check

❒ Connect the RF voltmeter to TP2014.

❒ Tune the transceiver to 30.000.0 MHz, and select USB mode. Confirm a level of at least 600 mVrms.

Receiver Circuits

Refer to the Main Unit Alignment Diagram on page 2-12 for location of components.

IF Interstage Transformers (1)

(coarse alignment - Rx Carrier Balance)

❒ Connect the RF signal generator to the ANT jack, and an AF voltmeter with speaker to the EXT-SPKR jack.

❒ Set VR1003 & IF SHIFT to the 12 o'clock position, then set VR1004 and VR1007 fully clockwise. Inject a +100 dB signal at 14.200.0 MHz, then adjust transformers, T1001 to T1008 and T1010 to T1012 in succession several times for peak indication on the voltmeter.

❒ Reduce the SG output level for an S-meter indication of 3 to 5-meter, then adjust VR1006 for peak AF output or max. 3-meter indication.

IF Interstage Alignment

❒ Inject a +0 dBμ Signal at 14.200.0 MHz. Connect the AF voltmeter across an 4-ohm load to the EXT-SPKR jack on the rear panel.

❒ Preset VR1004 fully clockwise, and adjust transformers T1001 to T1008 and T1010 to T1012 in succession several times for peak AF output or S-meter indication (adjust the SG

level as necessary to keep the meter approximately mid-scale).

1st Mixer Balance

❒ Preset VR1003 fully clockwise, then, in LSB mode, tune to the internal heterodyne around 15.310 MHz, and adjust VR1003 alternately several times for a null in AF output.

IF Gain

❒ Inject a +8 dBμ signal at 14.200.0 MHz to the antenna jack and adjust VR1004 for an S-l meter deflection.

Squelch Threshold

❒ In the USB mode, with no signal at the antenna jack, set the SQL control to the l0 o'clock position, and adjust VR1005 so that the squelch just closes.

NB

❒ Inject a +20 dBμ signal at 14.200.0 MHz, then connect a voltmeter to TP1001. Press the NB key, then adjust T1022 and T1023 alternately several times for a minimum indication on the DC voltmeter.

Cellcall Tone Decord

❒ In the USB mode, with no signal at the antenna jack, connect a Frequency Counter to the VR1022 center pin.

❒ Adjust VR1022 on the Main Unit for 1850 Hz ± 10 Hz.

Transmitter

Connect the 50-ohm dummy load to the antenna jack for all procedures. Refer to the Main Unit Alignment Diagram on page 2-12 for location of components.

PA Unit Idling Current

❒ Connect a DC Ammeter to TP5001(-) and TP5002(+), and select USB mode.

❒ Key the transceiver and adjust VR5001 for 400 mA ± 50 mA.

Transmitter IF Interstage Transformers (2)

❒ Connect an in-line wattmeter and 50-ohm RF dummy load to the ANT jack.

❒ Tune to 14.200.0 MHz, and select the USB mode. Key the transceiver and adjust transformers, T1016 to T1021 several times for peak indication on the wattmeter (approx. 100 W).

CM Coupler Balance

❒ With the 50-ohm dummy load connected to the antenna jack, tune the transceiver to 14.200.0 MHz, and select the USB mode. Connect the DC voltmeter between pins 2 (-) and 3 (+) of J1022, key the transmitter and adjust TC4001 on the LPF Unit for minimum indication on the DC voltmeter.

RF Power Output Adjust

❒ With the in-line wattmeter and dummy load still connected, set the VR1010 fully counter clockwise .

❒ Select A1A mode and tune to 14.200.0 MHz. Key the transmitter and adjust VR1010 for 100 W ±5 W as indicated on the in-line wattmeter.

50W RF Power Output Adjust

❒ Set switch S1001 to the 50 W position, then set the RF PWR control fully clockwise .

❒ Select A1A mode and tune to 14.200.0 MHz.

Key the transmitter and adjust VR1016 for 50 W ±2.5 W as indicated on the in-line wattmeter.

Ext. Antenna Tuner RF Power Adjust

- ❒ Turn the transceiver off, then jumper TP1002 to chassis ground.
- ❒ Set switch S1001 to the "100 W" position, tune to 14.200.0 MHz, A1A mode.
- ❒ Turn the transceiver on, key the transmitter and adjust VR1011 for 10 W.

TX IF Gain

- ❒ Connect an AF signal generator and voltmeter to the MIC jack, and inject a 0.5 mV signal at 1kHz, and tune to 14.200.0 MHz, USB mode.
- ❒ Key the transmitter and adjust VR1007 for 50 W (increase AF SG level to 1 mVrms, if necessary, to permit deflection).

PO Meter Calibration


- ❒ With the in-line wattmeter and dummy load connected to the antenna jack, tune to 14.200.0 MHz, USB mode.
- ❒ Then adjust VR1019 so the PO meter also indicates 10 position.



S-Meter Reverse PO Indication

Reverse ALC (SWR Turndown)

- ❒ Connect the in-line wattmeter and a 16.6-ohm dummy load (or three 50-ohm loads in parallel) to the antenna jack.
- ❒ With the transceiver set to the A1A mode on 14.200.0 MHz, key the transmitter and adjust VR1017 for 40 W on the wattmeter.

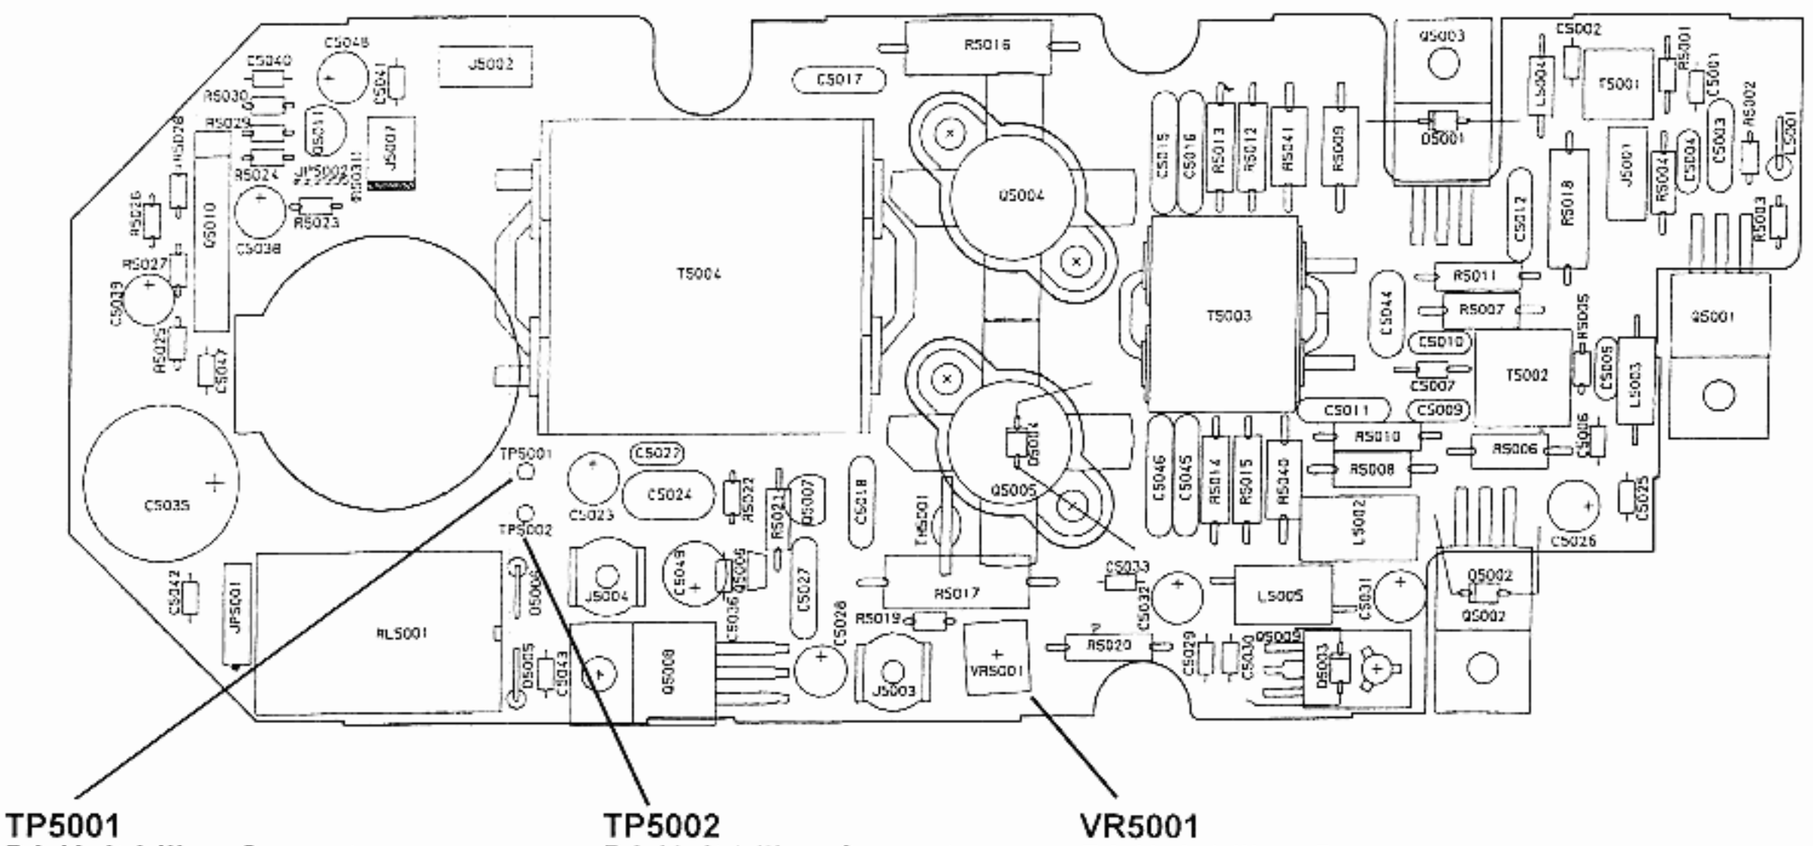

PA Unit Alignment Diagram

Alignment

J3E Modulator Balance

❒ With the transceiver tuned to 14.200.0 MHz, USB mode, connect a 50-ohm dummy load to the antenna jack, and RF voltmeter to J1005.

❒ Key the transmitter, and adjust VR1008 for minimum indication on the RF voltmeter.

A3E Output Adjust

❒ Tune the transceiver to 14.200.0 MHz, AM mode, and connect the wattmeter and 50- ohm dummy load to the antenna jack.

❒ Next, key the transmitter and (with no modulation) adjust VR1020 for 25 W on the wattmeter.

Side-Tone & Beep Level

❒ Connect a AF voltmeter across a 4-ohm resistor or speaker connected to the EXT-SPKR jack.

❒ Adjust VR2001 on the Local Unit for 150 mV ±20 mV.

Alarm Tone Level

❒ Connect a AF voltmeter across a 4-olm resistor or speaker connected to the EXT-SPKR jack.

❒ Press the ALARM key, then Adjust VR2002 on the Local Unit for loud pitch and low pitch for an average of 150 mV ±20 mV.

Transmitter Carrier Point

Temporarily jumper TP2003 to TP2006.

Connect an AF signal generator to the MIC jack, and set for 2 mV injection at 1.5 kHz.

USB Carrier Point

❒ Set the transceiver to 6.000.0 MHz, USB mode.

❒ Press the FUNC key and 2/NB key to set the USB carrier point-setting mode. "CA ADJ" will be displayed.

❒ Then perform the following:

(a) Key the transmitter and inject 2 mV at 1.5 kHz from the AF generator to the MIC jack, and then adjust the injection level to just above the point where the ALC meter indication no longer rises.

(b) Adjust the AF generator gain control for 80 W on the wattmeter.

(c) Tune the AF generator to 300 Hz, and adjust the transceiver frequency so that 20 watts output is obtained.


LSB Carrier Point

❒ Again press the 1/MODE key to set the LSB carrier point-setting mode.

❒ Repeat steps (a) to (c) to adjust the LSB carrier point.


Press the 2/NB key to save the settings and return the display to normal.

Turn the transceiver off and *remove the jumper from TP2003 to TP2006!*

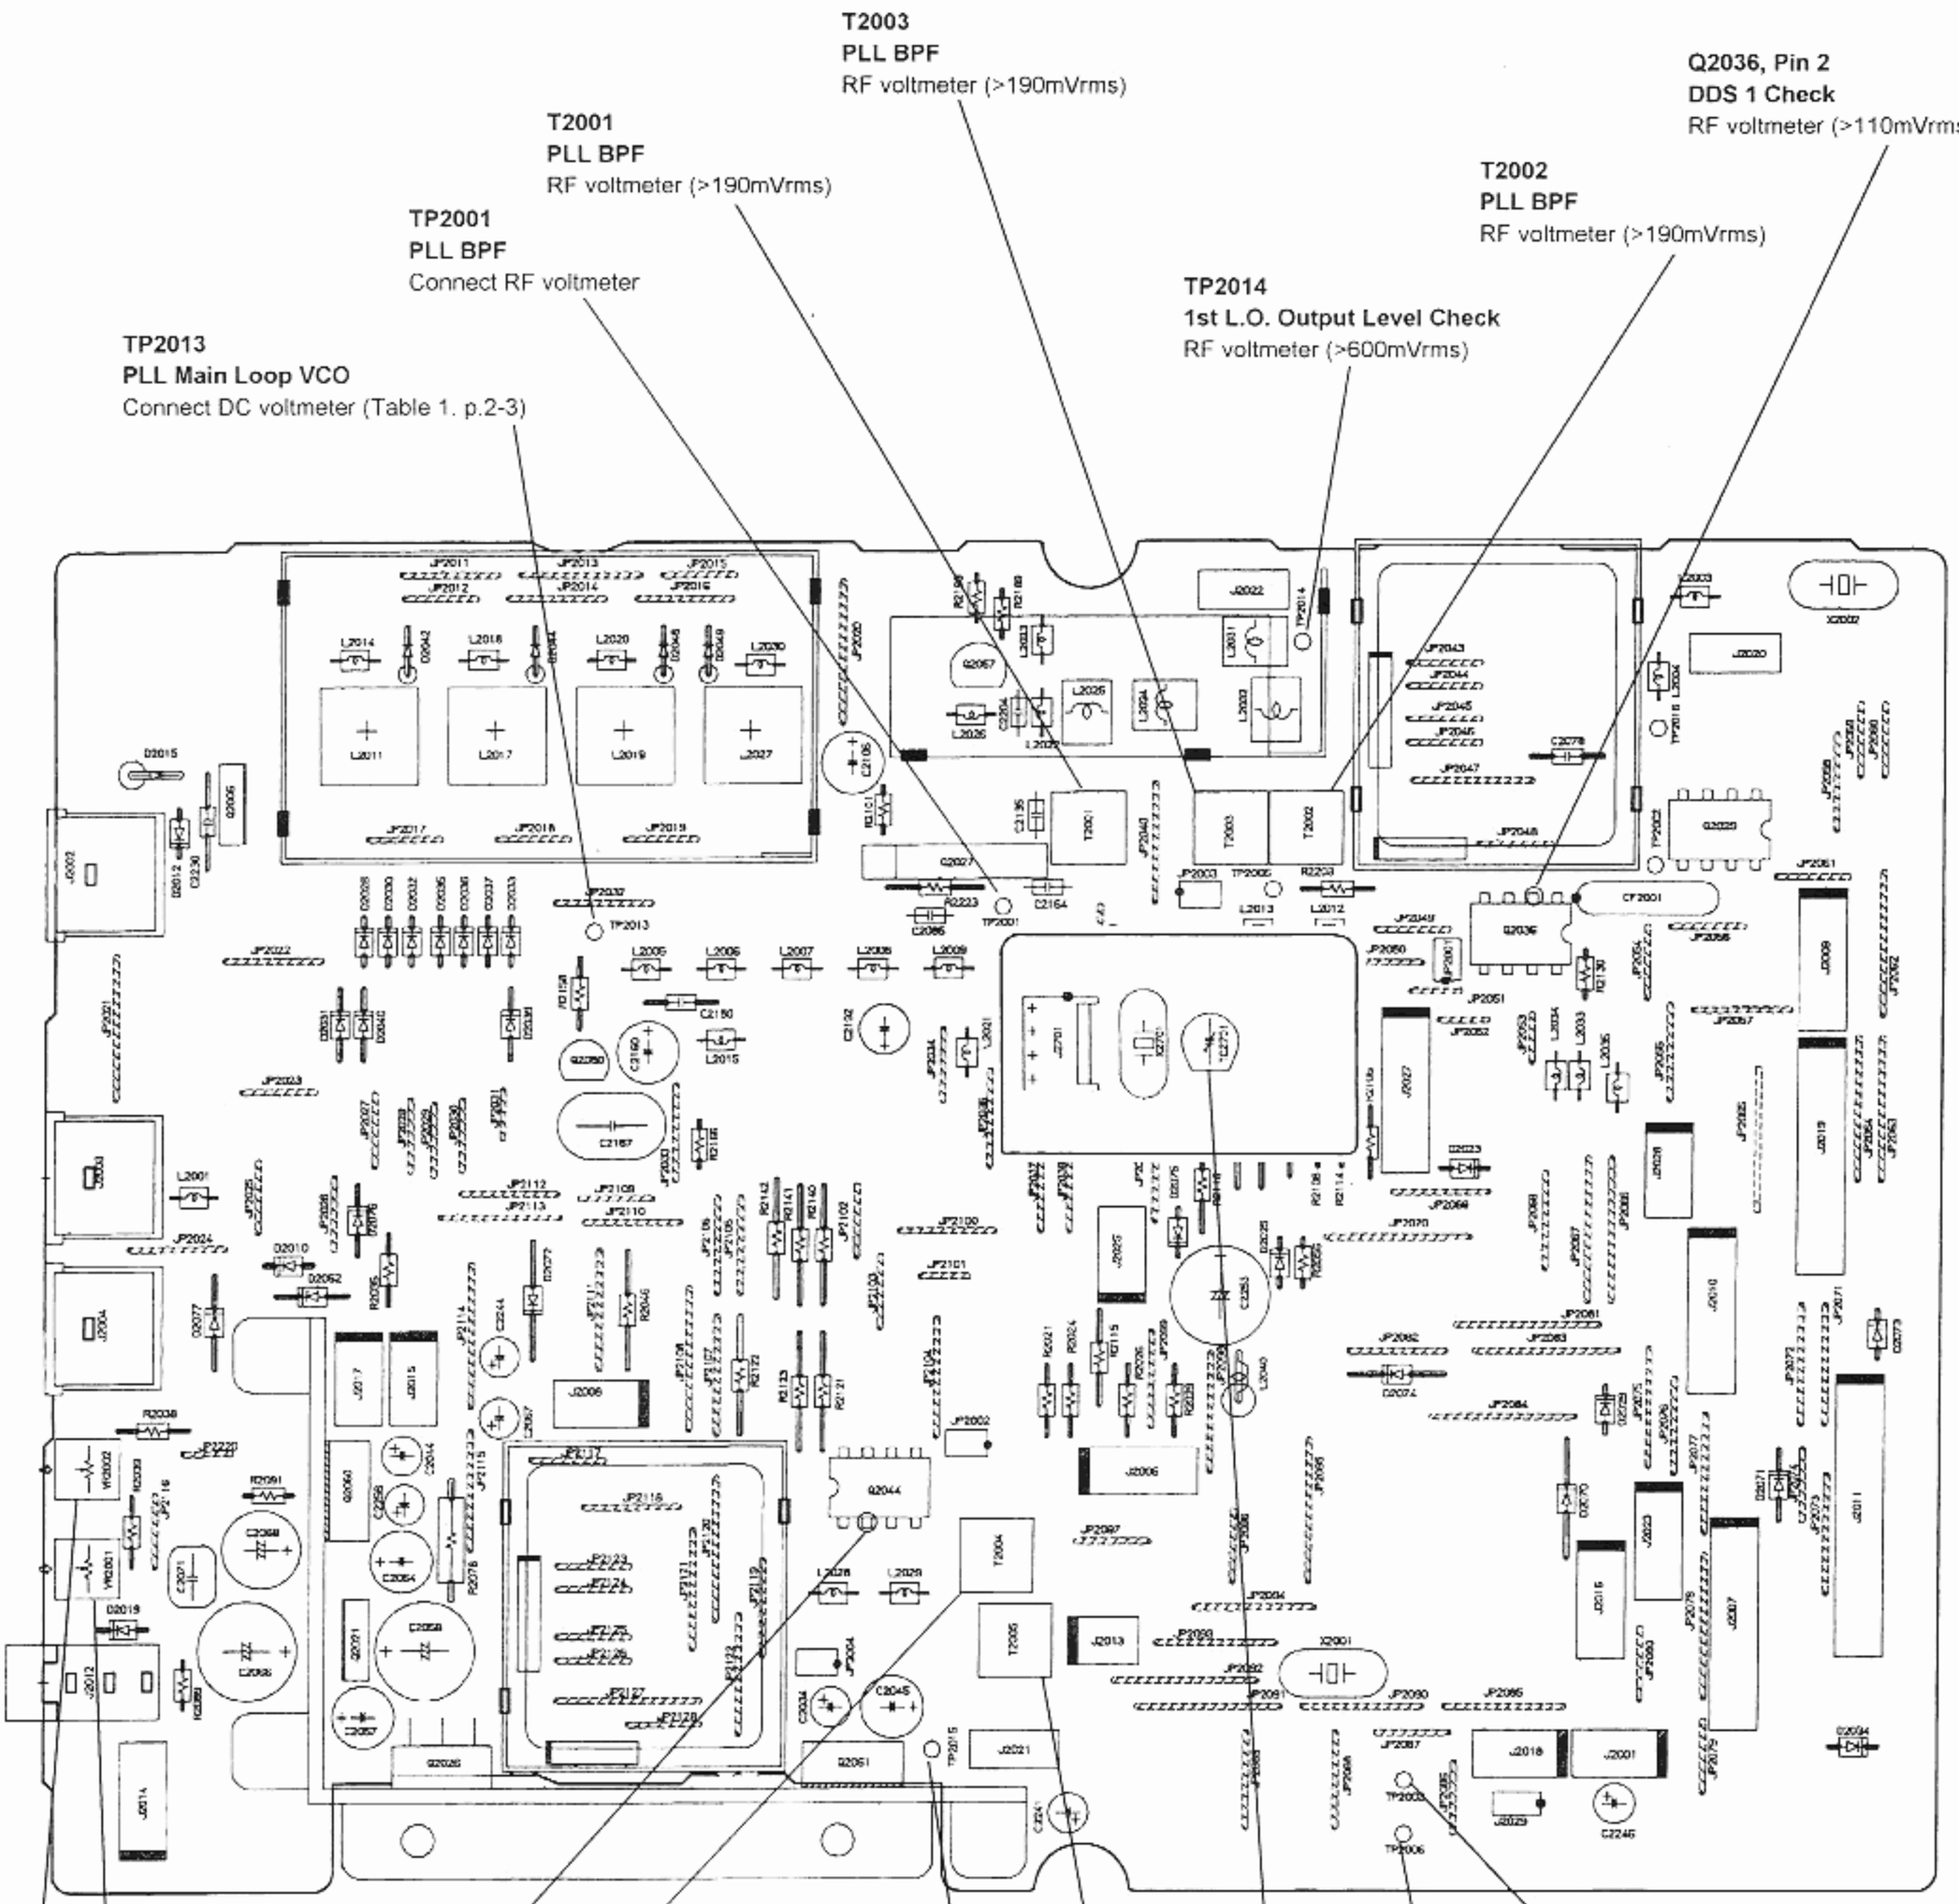

Local Unit Alignment Diagram

Alignment

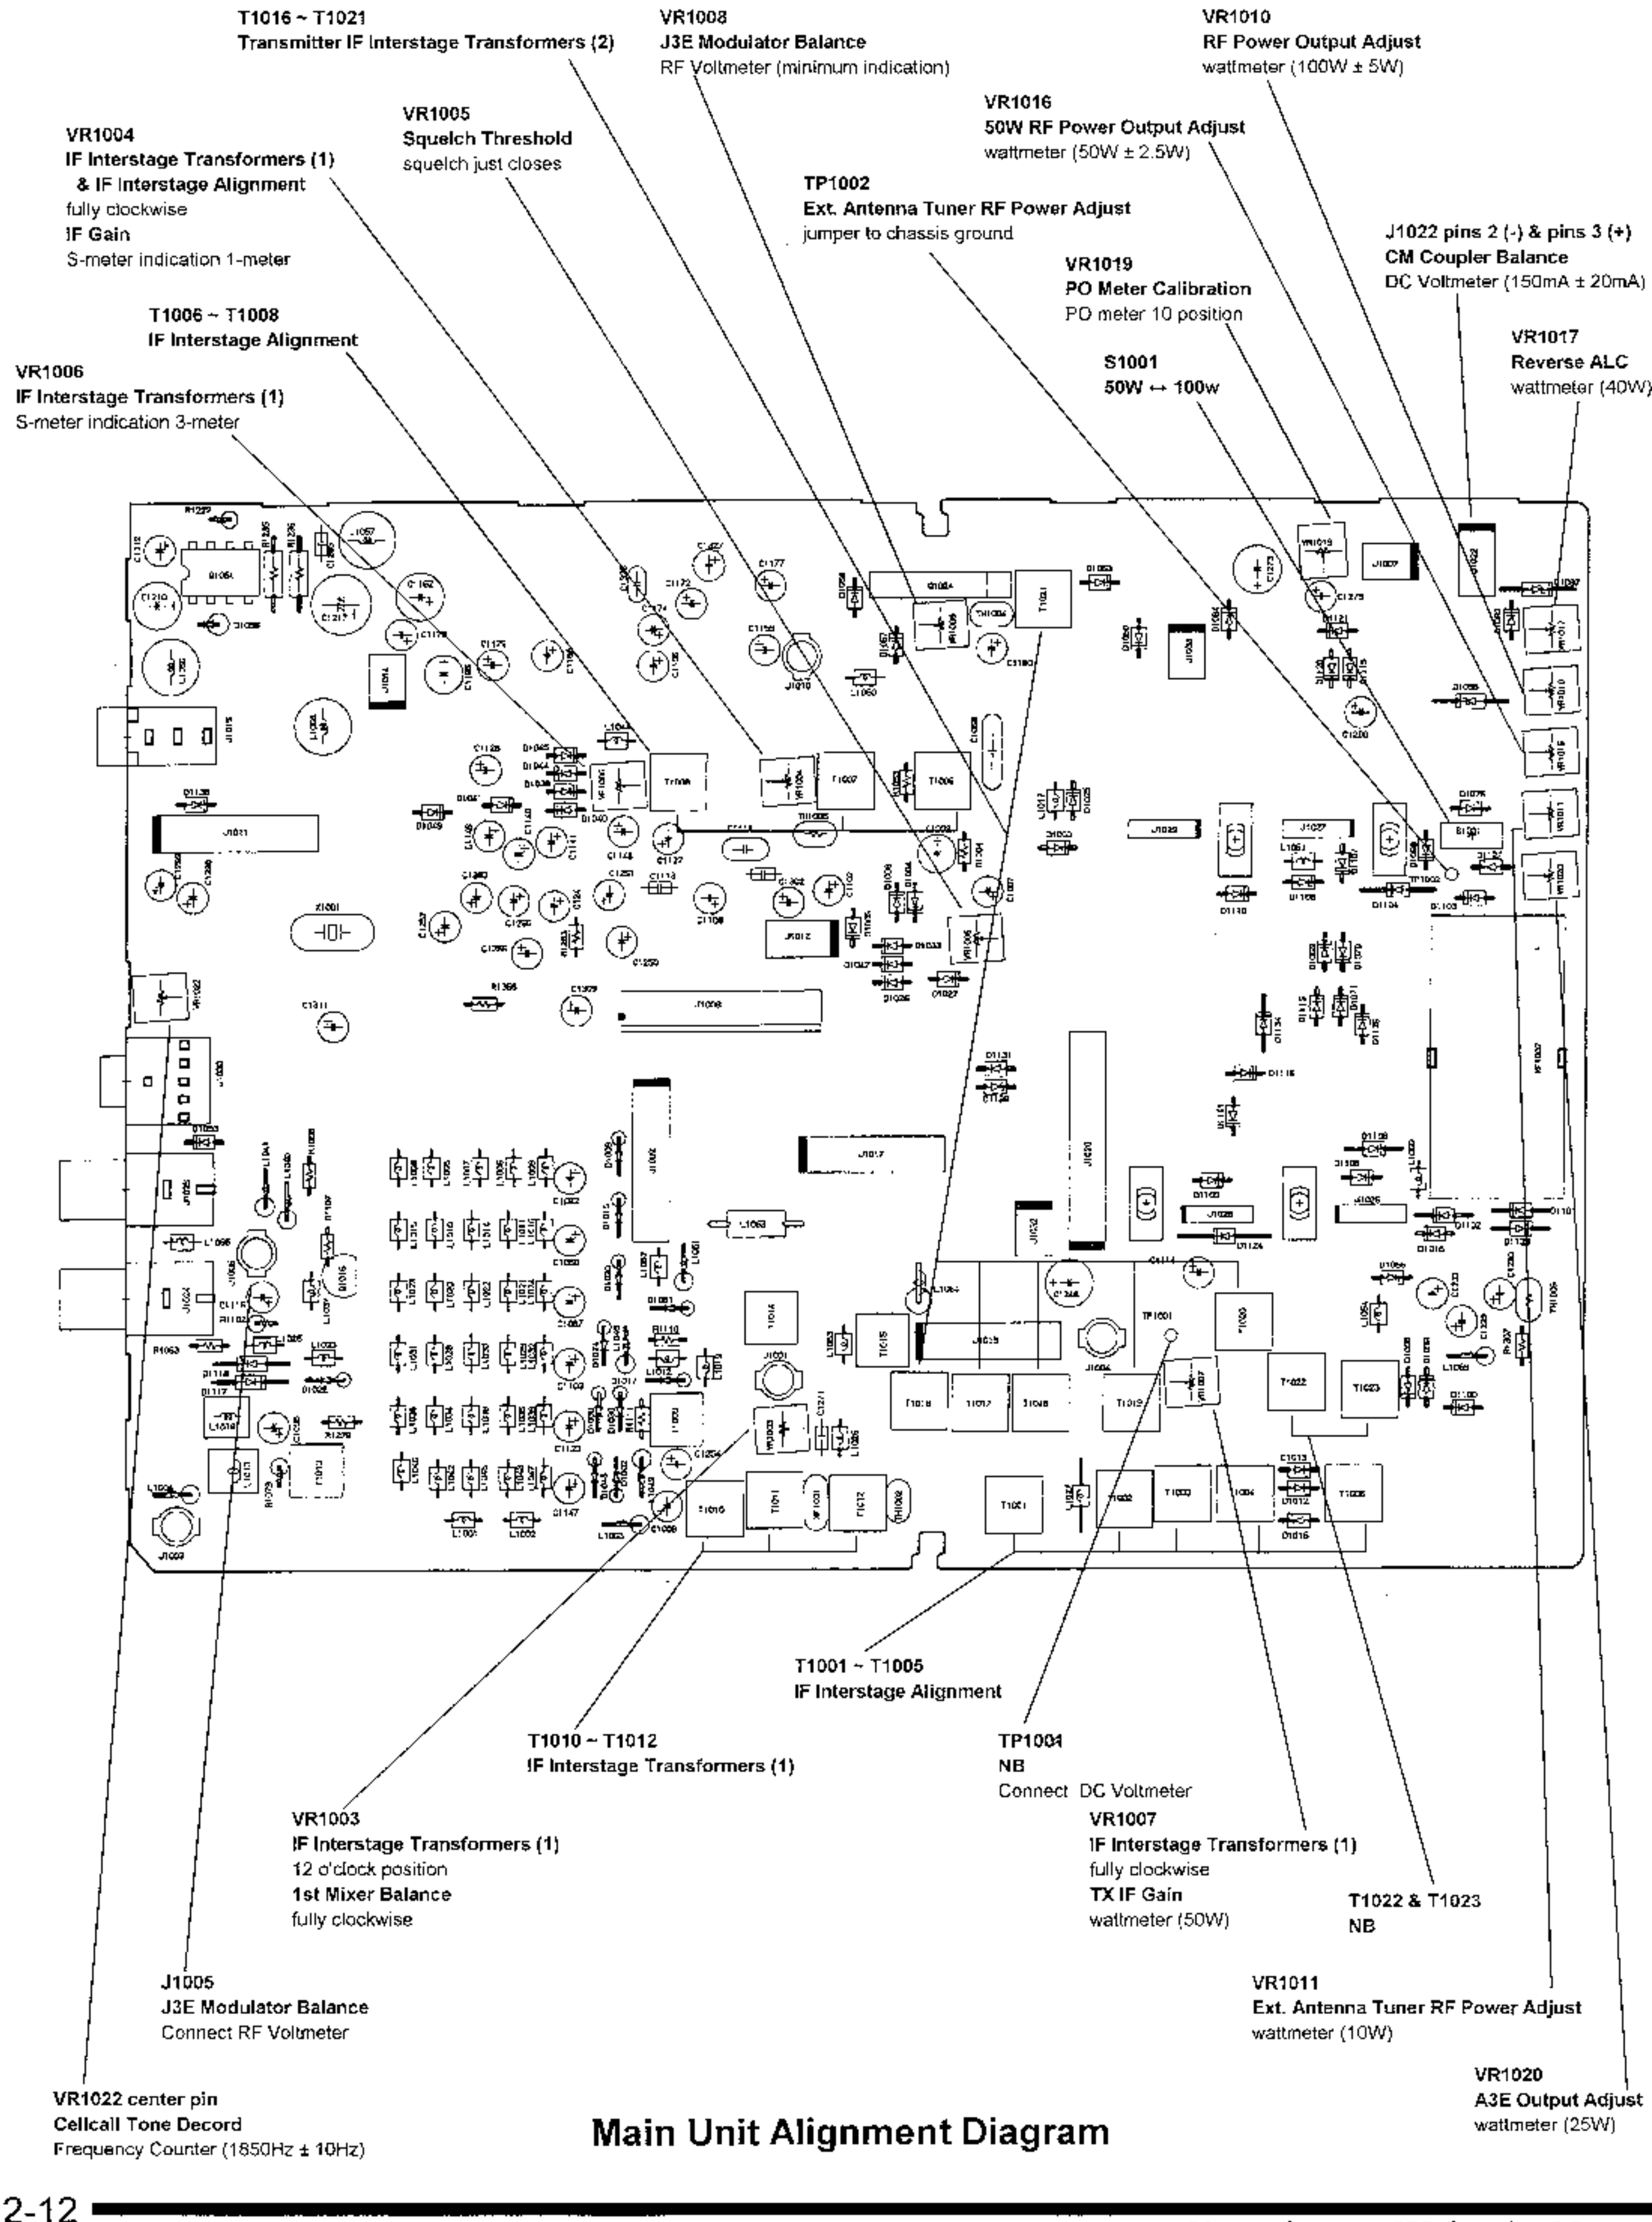

Main Unit Alignment Diagram

Receive Signal Circuitry

RF Circuit

The RF signal from the ANT connector passes through the Relay RL4013 in the LPF-UNIT, and enters the MAIN-UNIT.

The signal just arrived at MAIN-UNIT is then led through the bandpass filter (BPF) via the 5th-order Butterworth low-pass filter whose cut-off frequency is 30 MHz.

The output from BPF has a frequency range of 50kHz to 30MHz, and the signal is divided into seven bands by switching diodes D1001 through D10043 according to the receiving frequencies before they are applied at the 1st Mixer circuit.

1st Mixer Circuit/1st IF Circuit

The 1st Mixer circuit comprises two FETs (FET Q1006 and 1012), and each of the source terminals receives the first local signal(47.105 to 77.055 MHz) from LOCAL UNIT.

The resulting output signal (the difference between the local and received signals) passes through monolithic crystal filter (MCF) XF1001(BW: [+/-] 7.5kHz) to obtain the 1st IF signal having a center frequency of 47.055 MHz. The signal is fed to the 2nd IF circuit after it has been amplified by FET Q1007.

2nd Mixer Circuit/2nd IF Circuit

The 2nd Mixer circuit comprises FET Q1011 (on MAIN-UNIT), and the gate terminal receives the second local signal(38.840 MHz) from LOCAL UNIT.

The resulting 2nd Mixer output signal is selected at the bandpass filter (BPF) that is composed of RF transformers (T1002 ,T1003 and T1004) and capacitor C1040, and becomes 2nd IF signal (8.215 MHz). The 2nd IF signal that has just passed the BPF enters the noise blanker gate (NB GATE) that is composed of diodes D1012, D1013 and D1016. It is then routed through crystal filter XF1002, according to the receiving mode (CW, SSB or AM), and sent to the 2nd IF circuit.

Noise Blanker Circuit

The signal sampled from the 2nd IF circuit is amplified by FET Q1055/Q1056 on MAIN-UNIT, and then detected (with twofold voltage amplitude) by diodes D1098 and D1099. This detected output controls the gain of above-mentioned FET by an average AGC voltage responsible for transistor Q1058 . Also, noise pulses contained in the detected output is amplified by the transistor Q1057 to be utilized for controlling NB GATE.

The 2nd IF signal (8.215 MHz) is amplified by FET Q1008 through Q1010, and then sent to the SSB demodulation circuit and the two circuits (AGC and AM demodulation by way of transistor Q1003 in the buffer amplifier).

AGC Circuit/AM Demodulator Circuit

The AGC circuit consists of detector diodes D1004, D1006 and Q1005 (on MAIN-UNIT).

Its output is fed to the FETs in the 1st and 2nd IF circuits in order to control the gains.

The AM demodulator circuit performs envelope detection of the 2nd IF circuit through D1005 and C1017. Its output is applied to Q1017.

SSB Demodulator Circuit

The 2nd IF signal is fed to the diodes D1038, D1040, D1044 and D1045 in the SSB demodulator (SSB EDT) circuit on MAIN-UNIT. Its output is demodulated into audio signal by

utilizing the carrier signal from DDS-2 UNIT, and then applied to transistor Q1017.

Audio Amplifier Circuit

The audio signal detected by SSB is fed to the ring detector that consists of the diodes D1038, D1040, D1044 and D1045, and applied to Q1017 for amplification, passed through a diode switch, and then applied to Q1017. The signal at Q1017 then passes through an active lowpass filter for higher frequency to be cut. The final output of 1.5 W (max.) is obtained at IC Q2026 with VR7201 for voice level adjustment on VR-A-UNIT.

An internal speaker (or an external speaker) can be connected.

AFSK Circuit

The AFSK (Audio Frequency-shift Keying) output is available at the terminal J1030 of the following signal path: the active lowpass filter with Q1014, the analog switch with Q1072, and the audio amplifier with Q1065.

Selective Call Circuit

The FSK signal for the selective call appears at Q1014 (the output stage of the active lowpass filter), then distributed to both IC Q1080 (a tone decoder) and IC Q1076 (FSK MODEM). At Q1080, a coming signal is checked to see if it is a SELCALL. If it is, the signal is directed to the J1011 (on MAIN UNIT), to J2007 (on LOCAL UNIT), and then to the pin 48 on CPU Q2009. As for the FSK MODEM signal, it is first converted into serial data at the MODEM, directed to J1011, to J2007, and then to the pin 47 on Q2009 in the same manner as with Q1080. The message "SELCALL" on LCD will blink and CPU Q2009 will provide a call signal at pin 79, if the serial data stored in CPU Q2009 has been identified as the data with the same ID as this station. The call signal is applied to an amplifier Q2064, a low-pass filter, and then a speaker at AF IC Q2026 (a power amplifier stage).

Encryption Circuit

Demodulated signal by the encryption process, derived from active LPF Q1014 , first enters amplifier Q1073 and is applied to pin 4 of the Encryption Unit (ENC-UNIT) to be decoded. The signal is then decoded into original voice signal(available at pin 5), passes through J1012 on MAIN UNIT, passes through VR-A-UNIT, and then input at AF IC Q2026 (on LOCAL UNIT).

Transmit Signal Circuitry

Microphone Amplifier Circuit

The voice signal arriving at the jack J7102 passes through the board connector JP7103, Q1027 (a low noise transistor on MAIN UNIT), IC Q1026-2 (an analog switch), Q1025/Q1028 (amplifier stages), and Q1024 (the Balanced Modulator circuit).

Balanced Modulator (BM)

The BM IC Q1024 receives both the carrier signal, selected according to transmitting mode (CW, SSB or AM) from LOCAL-UNIT, and modulation signals from the microphone circuit. The modulated signal (or 1st IF signal) from the BM IC is then applied at the crystal filter (on MAIN-UNIT).

ALC (Automatic Level Control) Circuit

The screwdriver control potentiometer VR1010 is adjusted and fixed so that the transmitter output of 100 W may be attained. The FWD (traveling-wave) voltage from LFP-UNIT is compared with the VR1010 at the operational amplifier Q1043-1 whose output is applied at the base of Q1042. The ALC output from Q1042 is input at the second gate of Q1023, and serves for maintaining a constant transmitter output.

Keying Circuit

The objective of this circuit is to generate the continuous wave (CW). The input signal from the KEY passes through Q1044 and Q1039. The transistor Q1039 causes both the base bias to Q1021 (TX RF amplifier) and gate bias to Q1020/Q1029 (the TX Mixer circuit) to change in order to get the CW. The resistors R1149/R1192 and capacitors C1176/C1322 are to limit bandwidth of the keyed waves.

1st IF Circuit/1st Mixer Circuit

The 1st IF signal (8.215 MHz) modulated in the BM is band-limited by the crystal filter XF1002 according to the selected mode (CW, SSB or AM), amplified by FET Q1023, and applied at FET Q1020/Q1029 (the 1st Mixer circuit). Gate 2 of FET Q1023 is fed by the ALC voltage to stabilize TX output.

The 2nd Mixer is fed by the local signal (38.840 MHz) from LOCAL-UNIT, and converts this local signal into the 2nd IF signal (47.055 MHz).

2nd IF Circuit/2nd Mixer Circuit

The 2nd IF signal is input at the 2nd Mixer circuit by way of a bandpass filter that consists of RF transformers T1016/T1017.

The 2nd Mixer circuit (DBM IC D1015), which comprises diodes, receives the local signal (48.855 MHz to 77.055 MHz) generated by the PLL Frequency Synthesizer, and converts this local signal into 1.8 MHz to 30 MHz.

TX Preamplifier Circuit

The TX output from the DBM IC is amplified by the wide bandwidth high-frequency transistor Q1021, passed through a BPF, amplified again by Q1016, and sent to the PA-UNIT by way of the J1006.

Power Amplifier Circuit

The output from the RF-UNIT is fed to the 100 W PA-UNIT via connector J5001. The input TX signal (1.8 MHz to 30 MHz) is fed to pre-driver, driver and the final stages (Q5001 through Q5005 for all stages). Its output is available at connector J5002, and sent to LPF-UNIT.

Lowpass Filter Circuit

The TX RF output from the power amplifier circuit is input at P4004, passes through the Chebyshev LPF network (1.8 MHz to 30 MHz, composed of the relays RL4001 through RL4012, coils L4001 through L4012, and capacitors with this network being divided into six bands), passes through CM coupler coil L4013 and ANT relay RL4013, and finally is delivered at ANT connector.

The CM coupler consists of coil L4013, trimmer TC4001, capacitor C4036, and checks the traveling and reflected waves by extracting a small portion of the output. The sampled TX RF is detected by diodes D4002 and D4003 as negative voltage to used in ALC (Automatic Level Control).

AFSK (Audio Frequency-shift Keying)

The AFSK signal from the terminal unit enters at J1030 on MAIN UNIT, passes through active LPF Q1081, is amplified by Q1028/Q1025, and becomes the modulated signal. The voice signal from the microphone is interrupted, because switching transistors Q1031/Q1071 cut off analog switch Q1026-2.

Selective Call Circuit

An ID code entered at the panel keyboard is dispatched from CPU IC Q2009 (with 46 pins, and located on LOCAL UNIT) on a serial data bus, routed through J2007 on LOCAL UNIT, routed through J1011 on MAIN UNIT, and input at pin 11 of FSK MODEM IC Q1076. The MODEM IC then converts this signal from CPU into two-tone FSK signals (mark = 1650 Hz, space = 1850 Hz). The FSK signal becomes a modulated signal, after it is routed through analog switch Q1026-1 and then amplified by Q1028/Q1025. On transmitting an ID signal for the selective call, voice signal from the microphone is interrupted by analog switch Q1026-2 (which is turned OFF under control of transistors Q1031/Q1071).

Encryption Circuit

Original voice signal to be processed by Encryption circuit is derived from the collection of MIC amplifier Q1027, amplified by Q1064, input at pin 2 of the ENC-UNIT for processing.

The signal just processed is available at pin 3 of ENC-UNIT, passes through analog switch Q1026-1, amplified by Q1028/Q1025, and then becomes a modulated signal. The original signal from Q1027 is interrupted by analog switch Q1026-2 (which is turned OFF under control of transistors Q1031/Q1071).

Alarm Circuit

Alarm signal for emergency communication is generated at pin 62 of CPU Q2009 on LOCAL UNIT, passes through active LPF Q2066 to attenuate harmonics, passes through both J2017 and J1012 (on MAIN UNIT), and is input at pin 1 (input from external signal) of FSK MODEM IC Q1076. In addition, this signal passes through a line drive amplifier inside the MODEM IC, and becomes a modulated alarm signal (available at pin 17 just as in the selective call FSK signal) to be transmitted. Voice signal from the microphone is interrupted on transmitting alarm signal. This inhibition against the voice signal also occurs when transmitting the selective call ID signal.

Alarm signal provided at Q2066 is adjusted for its level by VR2002, fed to AF IC Q2026, and connected to a speaker to have monitor sound.

PLL Frequency Synthesizer

Master Reference Oscillator Circuit

The master reference oscillator consists of crystal vibrator X2701, PLL IC2048, trimmer capacitor TC2701, capacitor C2701/C2702, etc., and has a frequency of 10.48567 MHz. If the option TCXO-4 is used, the oscillator output must be fed to pin 1 of PLL IC Q2048.

The output is supplied to Q2035 -1(divide-by-2 frequency divider) and DDS-1/DDS-2 via buffer amplifier Q2059.

Voltage Controlled Oscillator (VCO)

VCO covers the frequency range for the 1st local oscillation frequency (47.105 MHz to 77.055

MHz) by using VCO1 through VCO4 circuits in order to divide the range in four bands. The VCO consists of oscillator FET Q2034/Q2040/Q2046/Q2052, variable capacity diodes D2043/D2045/D2047/D2050, coils L2011/L2017/L2019/L2027, feedback capacitors, etc. The switching among the four circuits is performed by using switching transistors Q2039/Q2043/Q2051/Q2058 which are driven as follows:

Decode IC Q2020 receives the band data from CPU IC Q2009, and makes a selected switching transistor conduct the corresponding FET. The frequency of each VCO is controlled by control voltage (VCV) from the loop filter.

2nd Local Oscillator Circuit

The 38.84 MHz 2nd Local Oscillator Circuit is a Colpitts oscillator. Its output is fed to the TX and RX mixers (on MAIN-UNIT) via buffer amplifier Q2030, LPF, and connector J2020.

DDS-1/DDS-2 UNIT

DDS (Direct Digital Synthesizer) is composed of DDS IC Q2501/Q2601, the shift registers, selectors, phase accumulators, ROM, etc. A ROM inside the IC has information on a sine wave over a half cycle:

A half cycle sine wave is sliced to have phase addresses versus amplitude for each slice.

The ROM provides users with address vs. amplitude information on each slice.

The input signal (the 10.48576 MHz master reference signal) is utilized as the clock for this circuit. The frequency setting signal from CPU IC is input to the Phase Accumulator via shift registers and selectors. The Phase Accumulator accumulates input data in sync with the clock, and its output designates an address of the ROM. The ROM provides a digital output data that corresponds to the address given, and the digital output data is converted into an analog voltage after D/A conversion through ladder resistors RB2501/R2601, amplification by buffer amplifiers Q2502/Q2602, and generation of sine wave together with LPF have been performed. The DDS-1 has the frequency range of 432.600 to 514.520 kHz; DDS-2,1133.880 to 1136380 kHz (center freq. = 1135.380 kHz).

PLL Circuit

PLL IC Q2048 consists of prescaler, programmable and reference dividers, phase comparator, oscillator, shift register, etc. The 10.48576 MHz master reference signal is input to the phase comparator as a 81.92 kHz comparison reference frequency, after the master signal has been divided by 128 in the PLL IC reference divider. The resultant output of the ceramic filter CF2001 has a frequency range of 5.67548 to 5.75740 MHz, after the DDS-1 UNIT signal (432.60 to 514.52 kHz) and the 1/2 divider Q2035-1 (5.24288 MHz) have been mixed at the mixer Q2036 by addition. Furthermore, the ceramic filter output is mixed with 2nd local signal (38.84 MHz) at mixer Q2029 (the frequency range by this addition : 44.51548 to 44.59740 MHz), passes through BPF T2002/T2003, and is amplified by transistor Q2032. The output of transistor Q2032 is then mixed at mixer Q2027 (the frequency range by this subtraction : 2.58952 to 32.52224 MHz) with the VCO signal (47.105 to77.055 MHz), passes through both LPF/buffer Q2041, and input at PIN 13 of PLL IC FIN. The output at PIN 13 of PLL IC FIN is then fed to the Phase Comparator, after it has been transformed into an input comparison frequency determined by the program-

mable divider and the frequency setting of CPU IC Q2009. Phase Comparator provides a pulse proportional to the phase difference between the input comparison frequency and the 81.92 kHz comparison reference frequency. This pulse is integrated by the loop filter to get a control voltage (VCV) which controls oscillation frequency of the VCO.

The CPU IC notify PLL IC that the following information should be converted into parallel data in PLL IC:

The frequencies and divider ratios (at the power ON time, the TX/RX switching time, and frequency setting change time) should be sent to the shift registers and latches as serial data inside the PLL IC.

This serial data is converted into the parallel data to be used as the "comparison dividing ratio" and "reference dividing ratio".

The transmission prohibition signal is sent to CPU at unlock time by inverting the UL signal with transistor Q2053 depending on the results obtained at the Phase Comparator.

Loop Filter

Loop filter consists of active filter (made up of FET Q2049, transistor Q2050, R2157/R2166, C2167, etc.) and 1st order lowpass filter. The loop filter is to get a control voltage (VCV) proportional to the phase difference at the Phase Comparator in order to control oscillation frequency of the VCO. The VCV is obtained by integrating the pulses from the Phase Comparator.

1st Local Oscillator Signal


The oscillation frequency of the VCO is amplified at FET Q2038, buffer-amplified at Q2056, amplified by transistor Q2057, passes through LPF/HPF, and finally supplied to the TX and RX frequency mixers (on MAIN-UNIT) via connector J2022.


Carrier Oscillation Signal Circuit

The carrier oscillation signal is obtained by the following process:


The DDS-2-UNIT output (1133.88 to 1136.38 kHz) and the 1/2 freq. divider Q2035-1 output (5.24288 MHz) are mixed at mixer Q2044 to obtain a differential signal between 4.10900 MHz and 4.10650 MHz. Filtered by a LPF. Amplified by transistor Q2054, and passes through BPF T2004/T2005. Amplified by twofold freq. multiplier. Buffer-amplified at Q2055. The carrier oscillation signal of 8.21300 to 8.21800 MHz (cf = 8.215 MHz) is supplied to Balanced Modulator (BM)(on MAIN UNIT) and the demodulator(SSB DET) via connector J2021.

Block

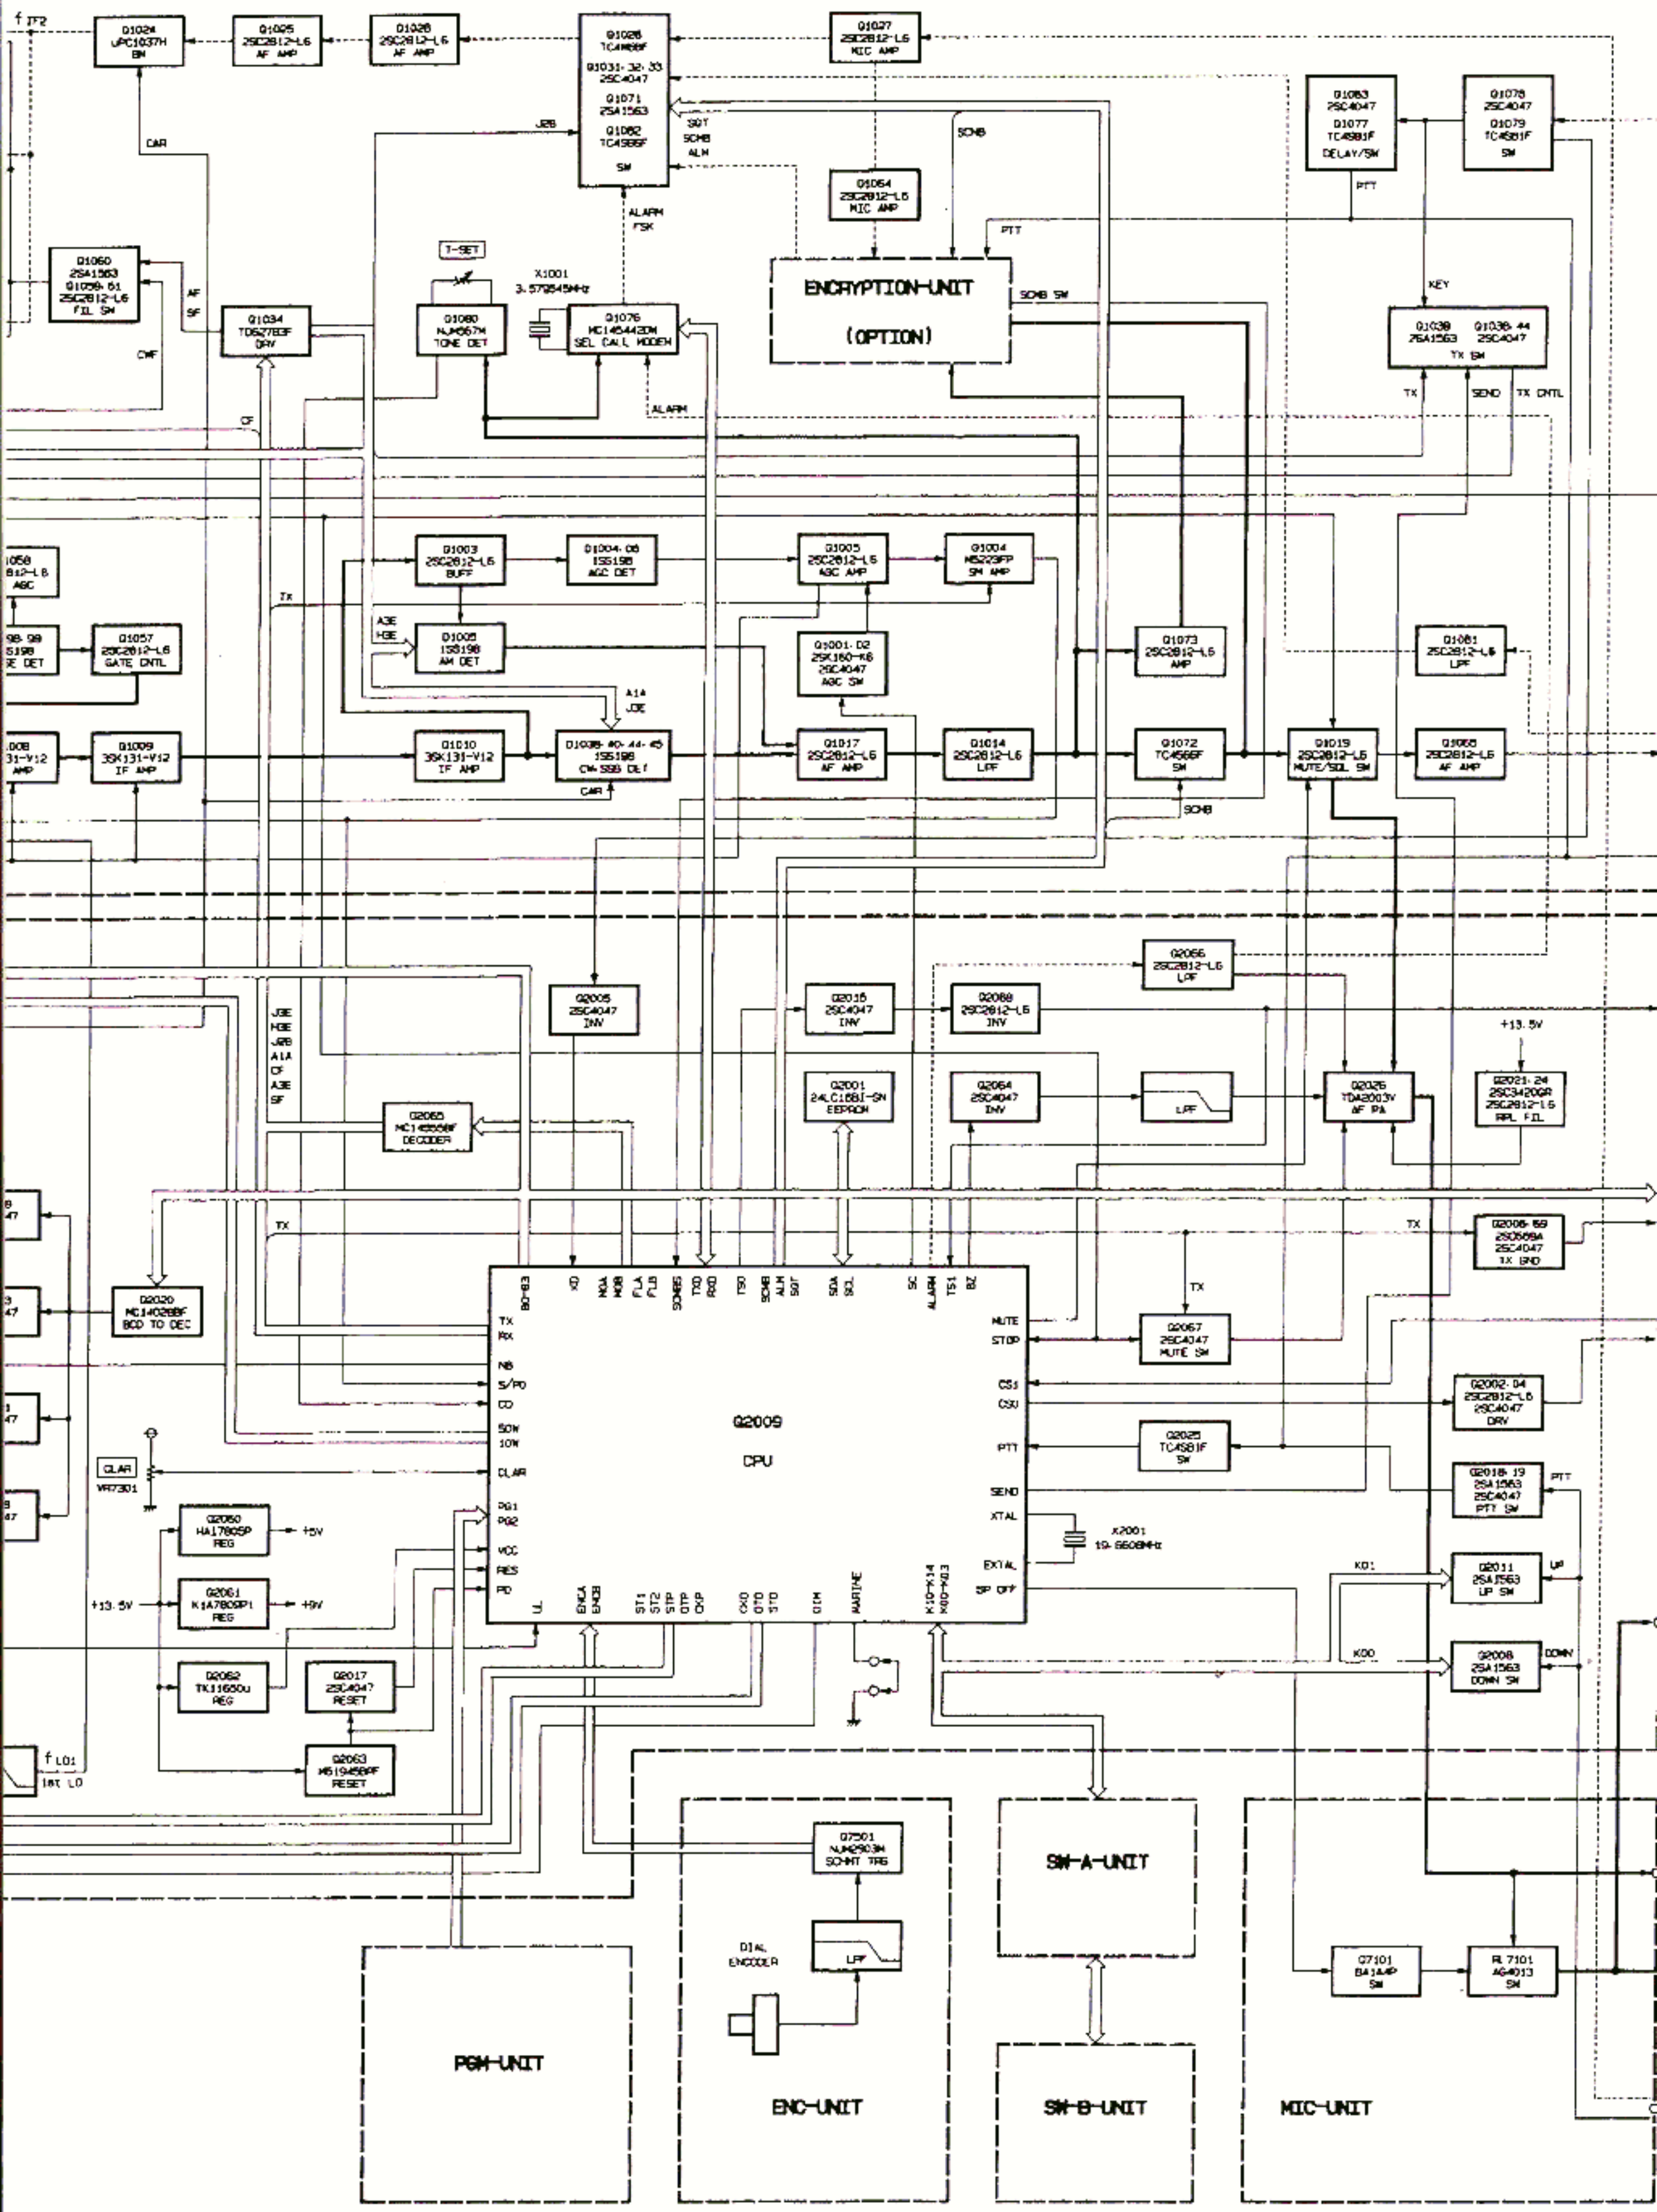
ENCRYPTION-UNIT
(OPTION)
CPU
PGM-UNIT
ENC-UNIT
SW-A-UNIT
SW-B-UNIT
MIC-UNIT

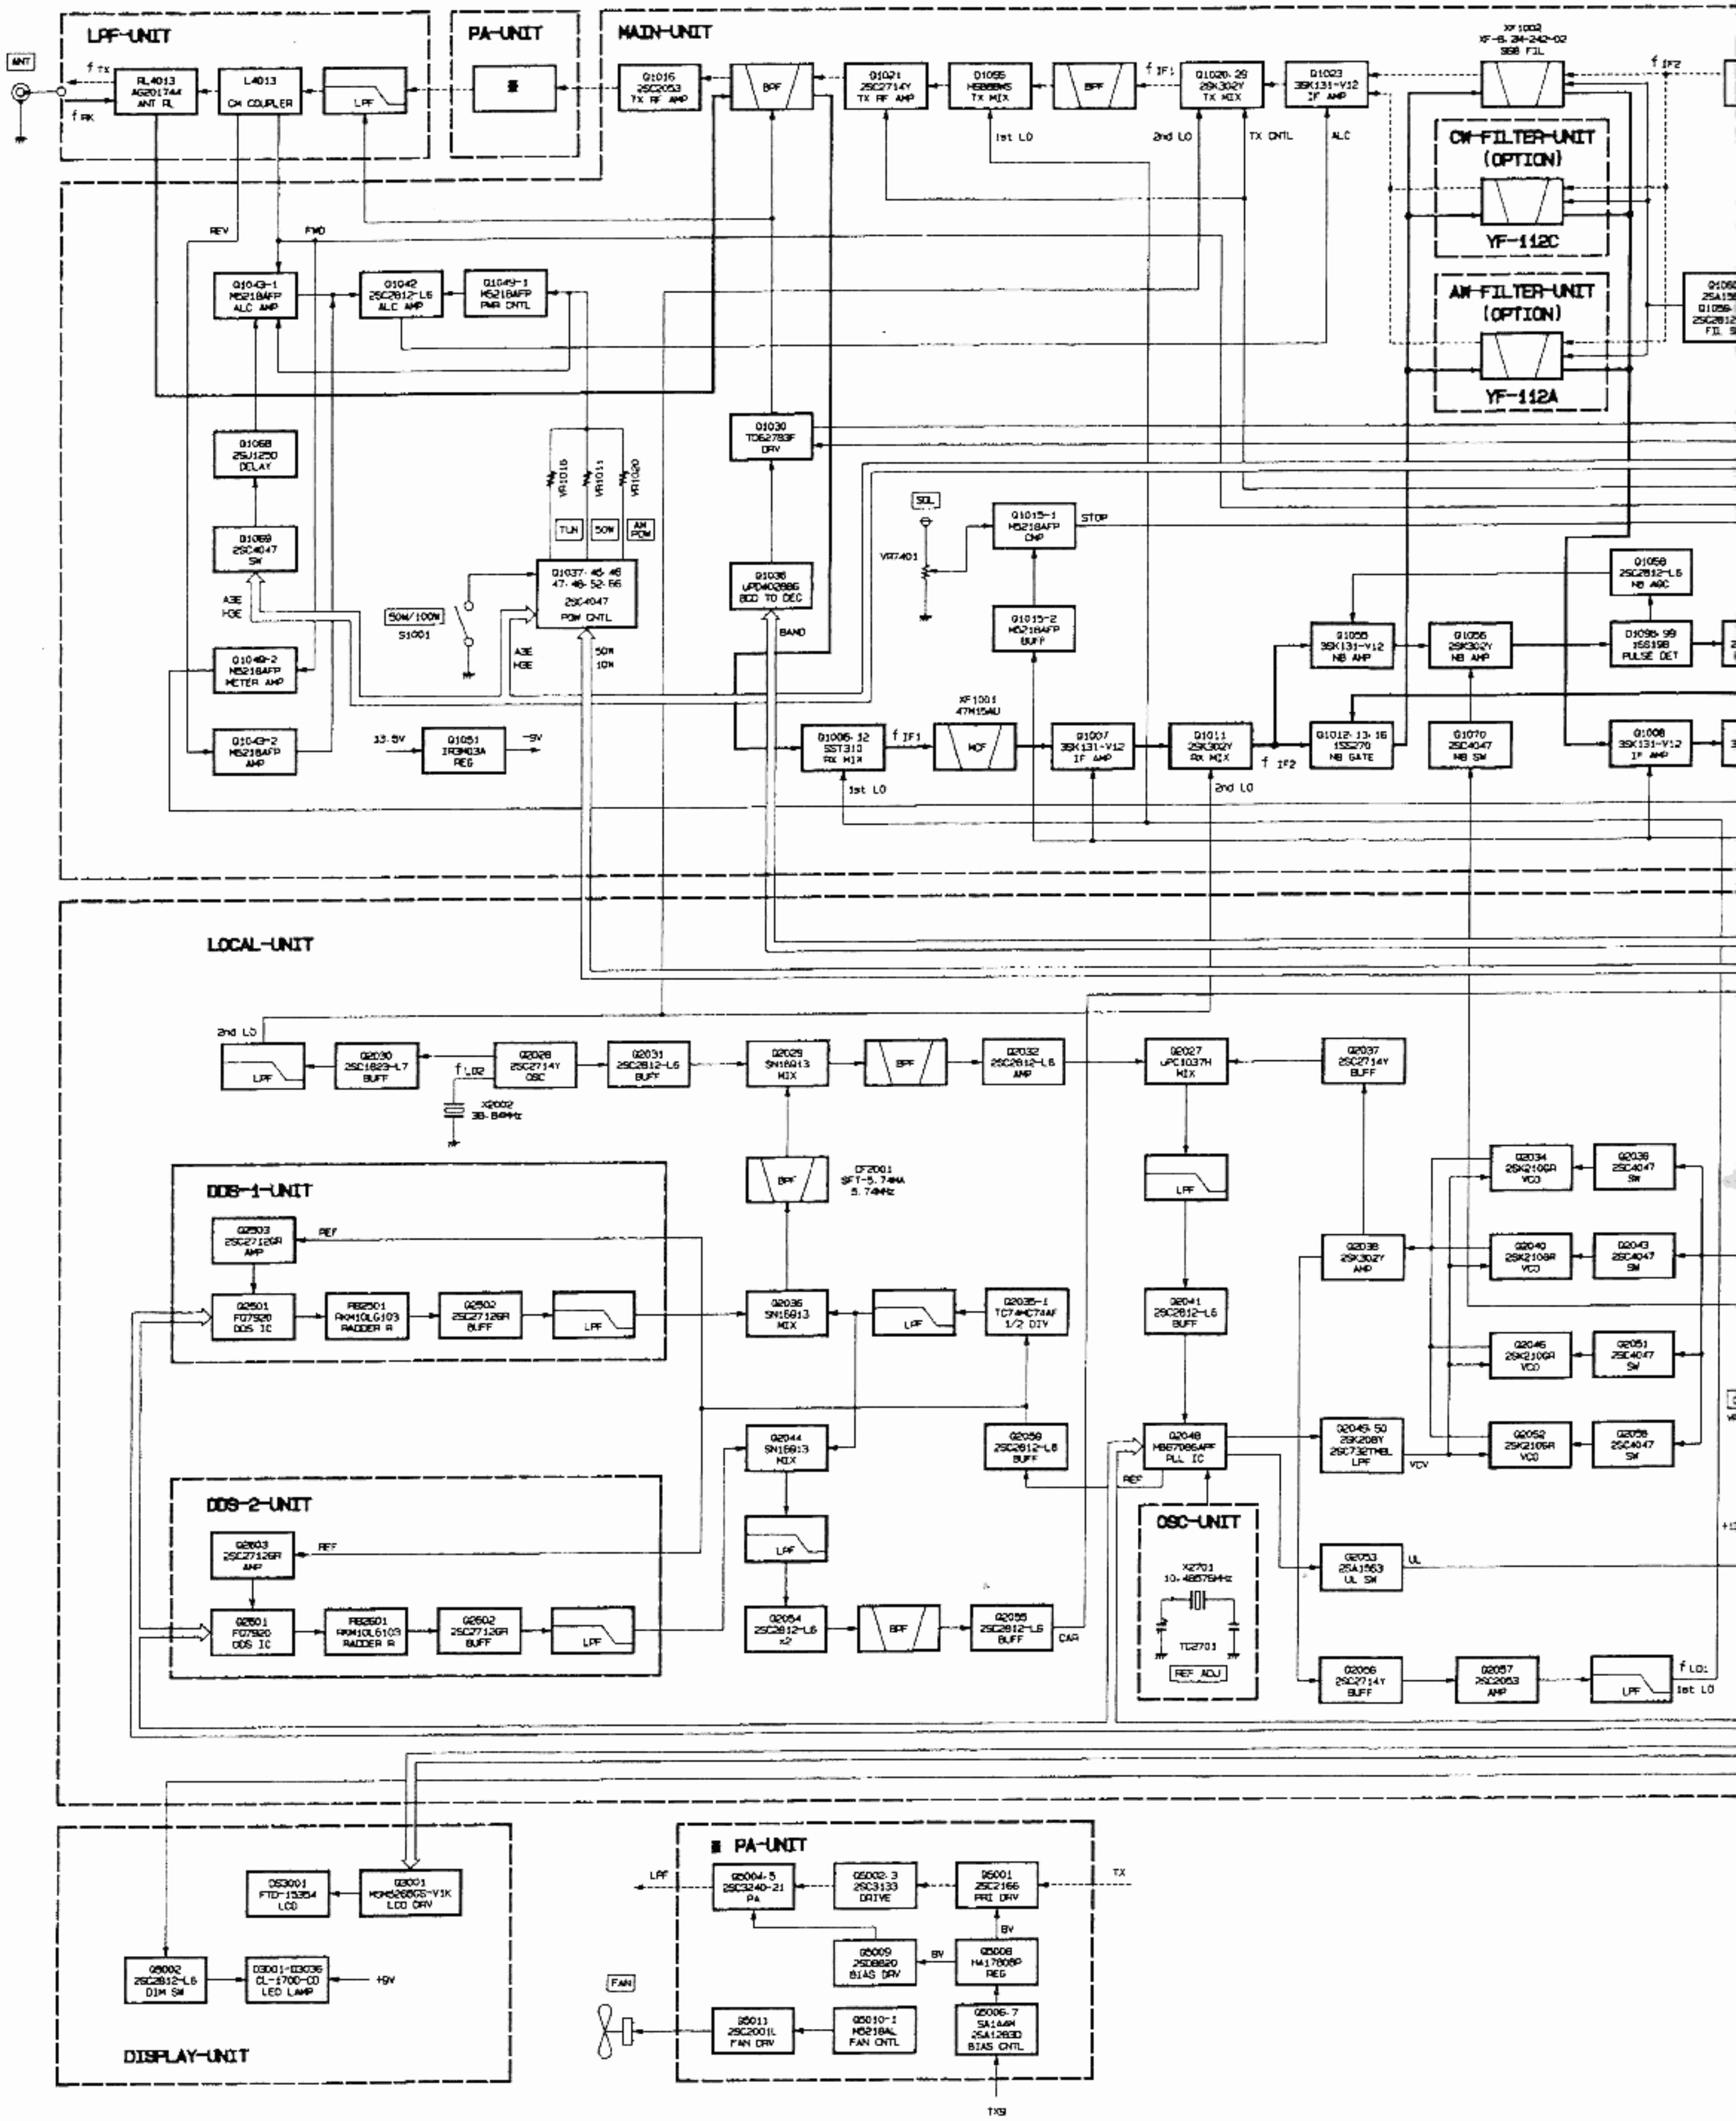
LPF-UNIT
PA-UNIT
MAIN-UNIT
ANT
f TX
f RX
RL4013
AG201744
ANT RL
L4013
CH COUPLER
LPF
Q1016
2SC2053
TX RF AMP
BPF
Q1021
2SC2714Y
TX RF AMP
Q1055
HSB88WS
TX MIX
BPF
f IF1
Q1020-29
2SK302Y
TX MIX
Q1023
3SK131-V12
IF AMP
XF1002
YF-6, 2M-242-02
SSB FIL
f IF2
1st LO
2nd LO
TX CNTL
ALC
CW-FILTER-UNIT
(OPTION)
YF-112C
AM-FILTER-UNIT
(OPTION)
YF-112A
REV
FWD
Q1043-1
M5218AFP
ALC AMP
Q1042
2SC2812-L6
ALC AMP
Q1049-1
M5218AFP
PWR CNTL
Q1068
2SJ1250
DELAY
Q1069
2SC4047
SW
ASE
HSE
Q1049-2
M5218AFP
METER AMP
Q1043-2
M5218AFP
AMP
Q1030
TD62783F
DRV
Q1036
UPD4028BG
BCD TO DEC
BAND
VR1010
VR1011
VR1020
TUN
SSN
AM PDN
Q1037-45-46
47-48-52-56
2SC4047
PDN CNTL
50M/100M
S1001
50M
10M
SQL
VR1401
Q1015-1
M5218AFP
DNP
STOP
Q1015-2
M5218AFP
BUFF
13.5V
Q1051
IR3M03A
REG
-9V
Q1006-12
SST310
RX MIX
f IF1
XF1001
47M15AU
MCF
Q1007
3SK131-V12
IF AMP
Q1011
2SK302Y
RX MIX
f IF2
1st LO
2nd LO
Q1012-13-16
1SS270
NB GATE
Q1055
3SK131-V12
NB AMP
Q1026
2SK302Y
NB AMP
Q1070
2SC4047
NB SW
Q1058
2SC2812-L6
NB AGC
Q1098-99
1SS198
PULSE DET
Q1008
3SK131-V12
IF AMP
LOCAL-UNIT
2nd LO
Q2030
2SC1623-L7
BUFF
Q2028
2SC2714Y
OSC
f LO2
X2002
38.84MHz
Q2031
2SC2812-L6
BUFF
Q2029
SN16913
MIX
BPF
Q2032
2SC2812-L6
AMP
Q2027
UPC1037H
MIX
Q2037
2SC2714Y
BUFF
DF2001
SFT-5.74MA
5.74MHz
DDS-1-UNIT
Q2503
2SC2712GR
AMP
REF
Q2501
FQ7520
DDS IC
RB2501
RKM10LG103
RADDER R
Q2502
2SC2712GR
BUFF
LPF
Q2035
SN16913
MIX
LPF
Q2035-1
TC74HC74AF
1/2 DIV
LPF
Q2034
2SK210GR
VCO
Q2036
2SC4047
SW
Q2038
2SK302Y
AMP
Q2040
2SK210GR
VCO
Q2043
2SC4047
SW
Q2041
2SC2812-L6
BUFF
Q2044
SN16913
MIX
LPF
Q2054
2SC2812-L6
x2
BPF
Q2055
2SC2812-L6
BUFF
CAR
Q2059
2SC2812-L6
BUFF
Q2048
MB87086APF
PLL IC
REF
Q2045-50
2SK208Y
2SC3278MBL
LPF
VCV
Q2052
2SK210GR
VCO
Q2058
2SC4047
SW
DDS-2-UNIT
Q2603
2SC2712GR
AMP
REF
Q2601
FQ7520
DDS IC
RB2601
RKM10L6103
RADDER R
Q2602
2SC2712GR
BUFF
LPF
OSC-UNIT
X2701
10.48576MHz
TC2701
REF ADJ
Q2053
2SA1363
UL SW
UL
Q2006
2SC2714Y
BUFF
Q2057
2SC2053
AMP
LPF
f LO1
1st LO
DISPLAY-UNIT
DS3001
FTD-13354
LCD
Q3001
M24S2600S-V1K
LCD DRV
Q9002
2SC2812-L6
DIM SW
D3001-D3036
CL-1700-CO
LED LAMP
+9V
PA-UNIT
LPF
Q5004-5
2SC3240-21
PA
Q5002-3
2SC3133
DRIVE
Q5001
2SC2166
PRI DRV
TX
8V
Q5009
2SD820
BIAS DRV
8V
Q5008
HA17808P
REG
FAN
Q5011
2SC2001L
FAN DRV
Q5010-1
M5218AL
FAN CNTL
Q5006-7
SA1489
2SA1283D
BIAS CNTL
TX9

Interconnection Diagram

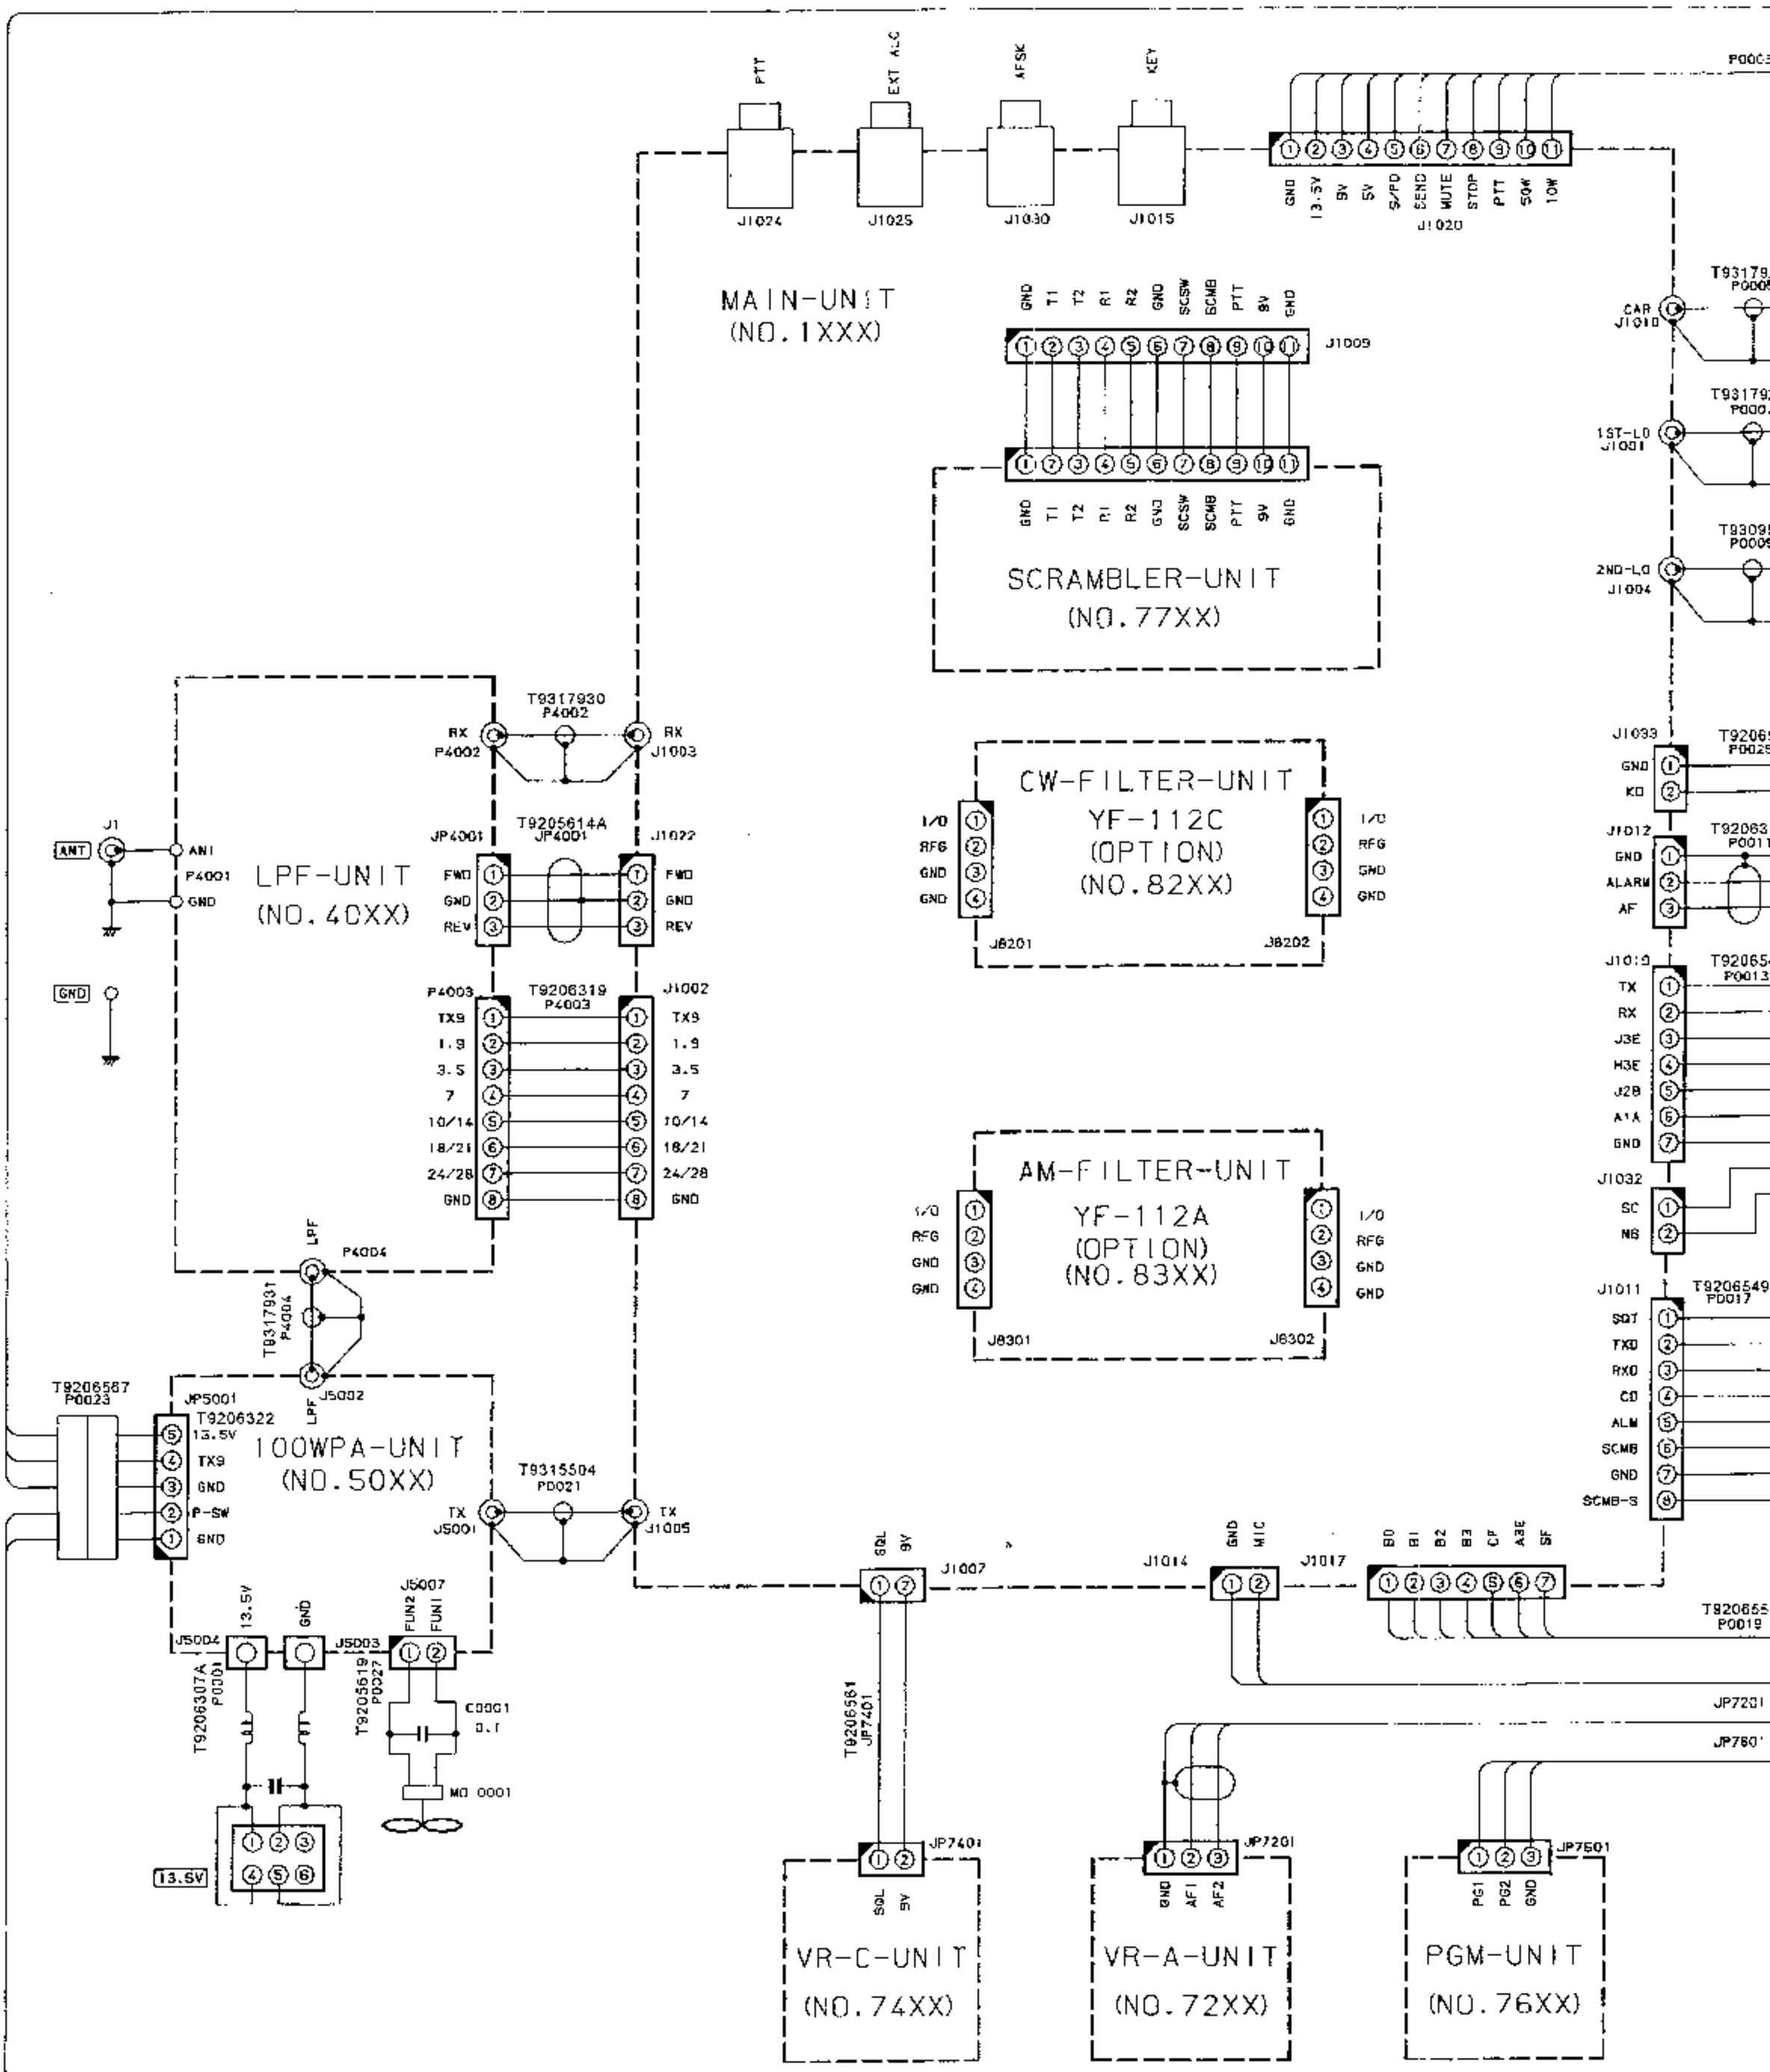

P0003 T9206299

J2011: 1 GND, 2 13.5V, 3 9V, 4 5V, 5 S/PD, 6 SEND, 7 MLTE, 8 STOP, 9 PTT, 10 SDW, 11 10W

J2008: 1 GND, 2 TXD, 3 13.5V

J2002 BAND DATA

J2003 FC-803

J2004 CLONE

J2012 EXT SPKR

LOCAL UNIT
(NO.2XXX)

SP0001

MIC-UNIT
(NO.71XX)

J2025 — T9206556 JP7101 — JP7101
SP OFF 1 — 1 SP OFF
GND 2 — 2 GND
13.5V 3 — 3 13.5V

J2014 — T9206557 JP7102 — JP7102
GND 1 — 1 GND
AFOUT 2 — 2 AF OUT
EXT SP 3 — 3 EXT SP
INT SP 4 — 4 INT SP

J2009 — T9206558 JP7103 — JP7103
GND 1 — 1 GND
DOWN 2 — 2 DOWN
UP 3 — 3 UP
PTT 4 — 4 PTT
5V 5 — 5 5V
6 — 6 MICGND
MIC 7 — 7 MIC

T9317928 P0005 — CAR J2021

T9317928 P0007 — 1ST-LO J2022

T9309503 P0009 — 2ND-LO J2020

OSC-UNIT
(NO.27XX)

TCXO-UNIT
TCXO-4(OPTION)
(NO.28XX)

GND XI XO 9V

T9206551 P0025 — J2013: 1 GND, 2 KD

T9206310 P0011 — J2017: 1 GND, 2 ALARM, 3 AF

T9206548 P0013 — J2019: 1 TX, 2 RX, 3 J3E, 4 H3E, 5 J2B, 6 A1A, 7 GND, 8 SC, 9 NB

T9206549 P0017 — J2007: 1 SQT, 2 TXD, 3 RXD, 4 CD, 5 ALM, 6 SCNB, 7 GND, 8 SCNB-S

REF GND GND OUT — J2502 — DDS-1-UNIT (NO.25XX) — J2501: 1 5V, 2 ST2, 3 GND, 4 DTP, 5 CKP

REF GND GND OUT — J2602 — DDS-2-UNIT (NO.26XX) — J2601: 1 5V, 2 ST2, 3 GND, 4 DTP, 5 CKP

J2023 — T9206562 JP7501 — JP7501
GND 1 — 1 GND
ENC A 2 — 2 ENC A
ENC B 3 — 3 ENC B
5V 4 — 4 5V

ENC-UNIT
(NO.75XX)

J2001 — T9206560 JP7301 — JP7301
AGND 1 — 1 AGND
CLAR 2 — 2 CLAR
REF 3 — 3 REF

VR-B-UNIT
(NO.73XX)

J2028: CF, A3E, BF
J2005: B0, B1, B2, B3
J2015: GND, MF1, MF2
J2018: MG1, MG2, GND
J2010: K10, K11, K12, K13, K14, GND
J2016: K00, K01, K02, K03
J2027: DIM, 9V, DTO, CKO, STO, GND

T9206550 P0019

JP7201 T9206559

JP7601 T9206563

JP7002 T9206554

T9206553 JP7001

T9206555 JP7003

T9206552 JP3001

K10 GND K02 K03 — JP7051 — J7051: 1 GND, 2 P-SW — SW-B-UNIT (NO.705X)

K10 GND K02 K03 — JP7002


K10 K11 K12 K13 K14 GND — JP7001

K00 K01 K02 K03 — JP7003


SW-A UNIT
(NO.70XX)

DIM 9V DTO CKO STO GND — JP3001


DISPLAY-UNIT
(NO.30XX)

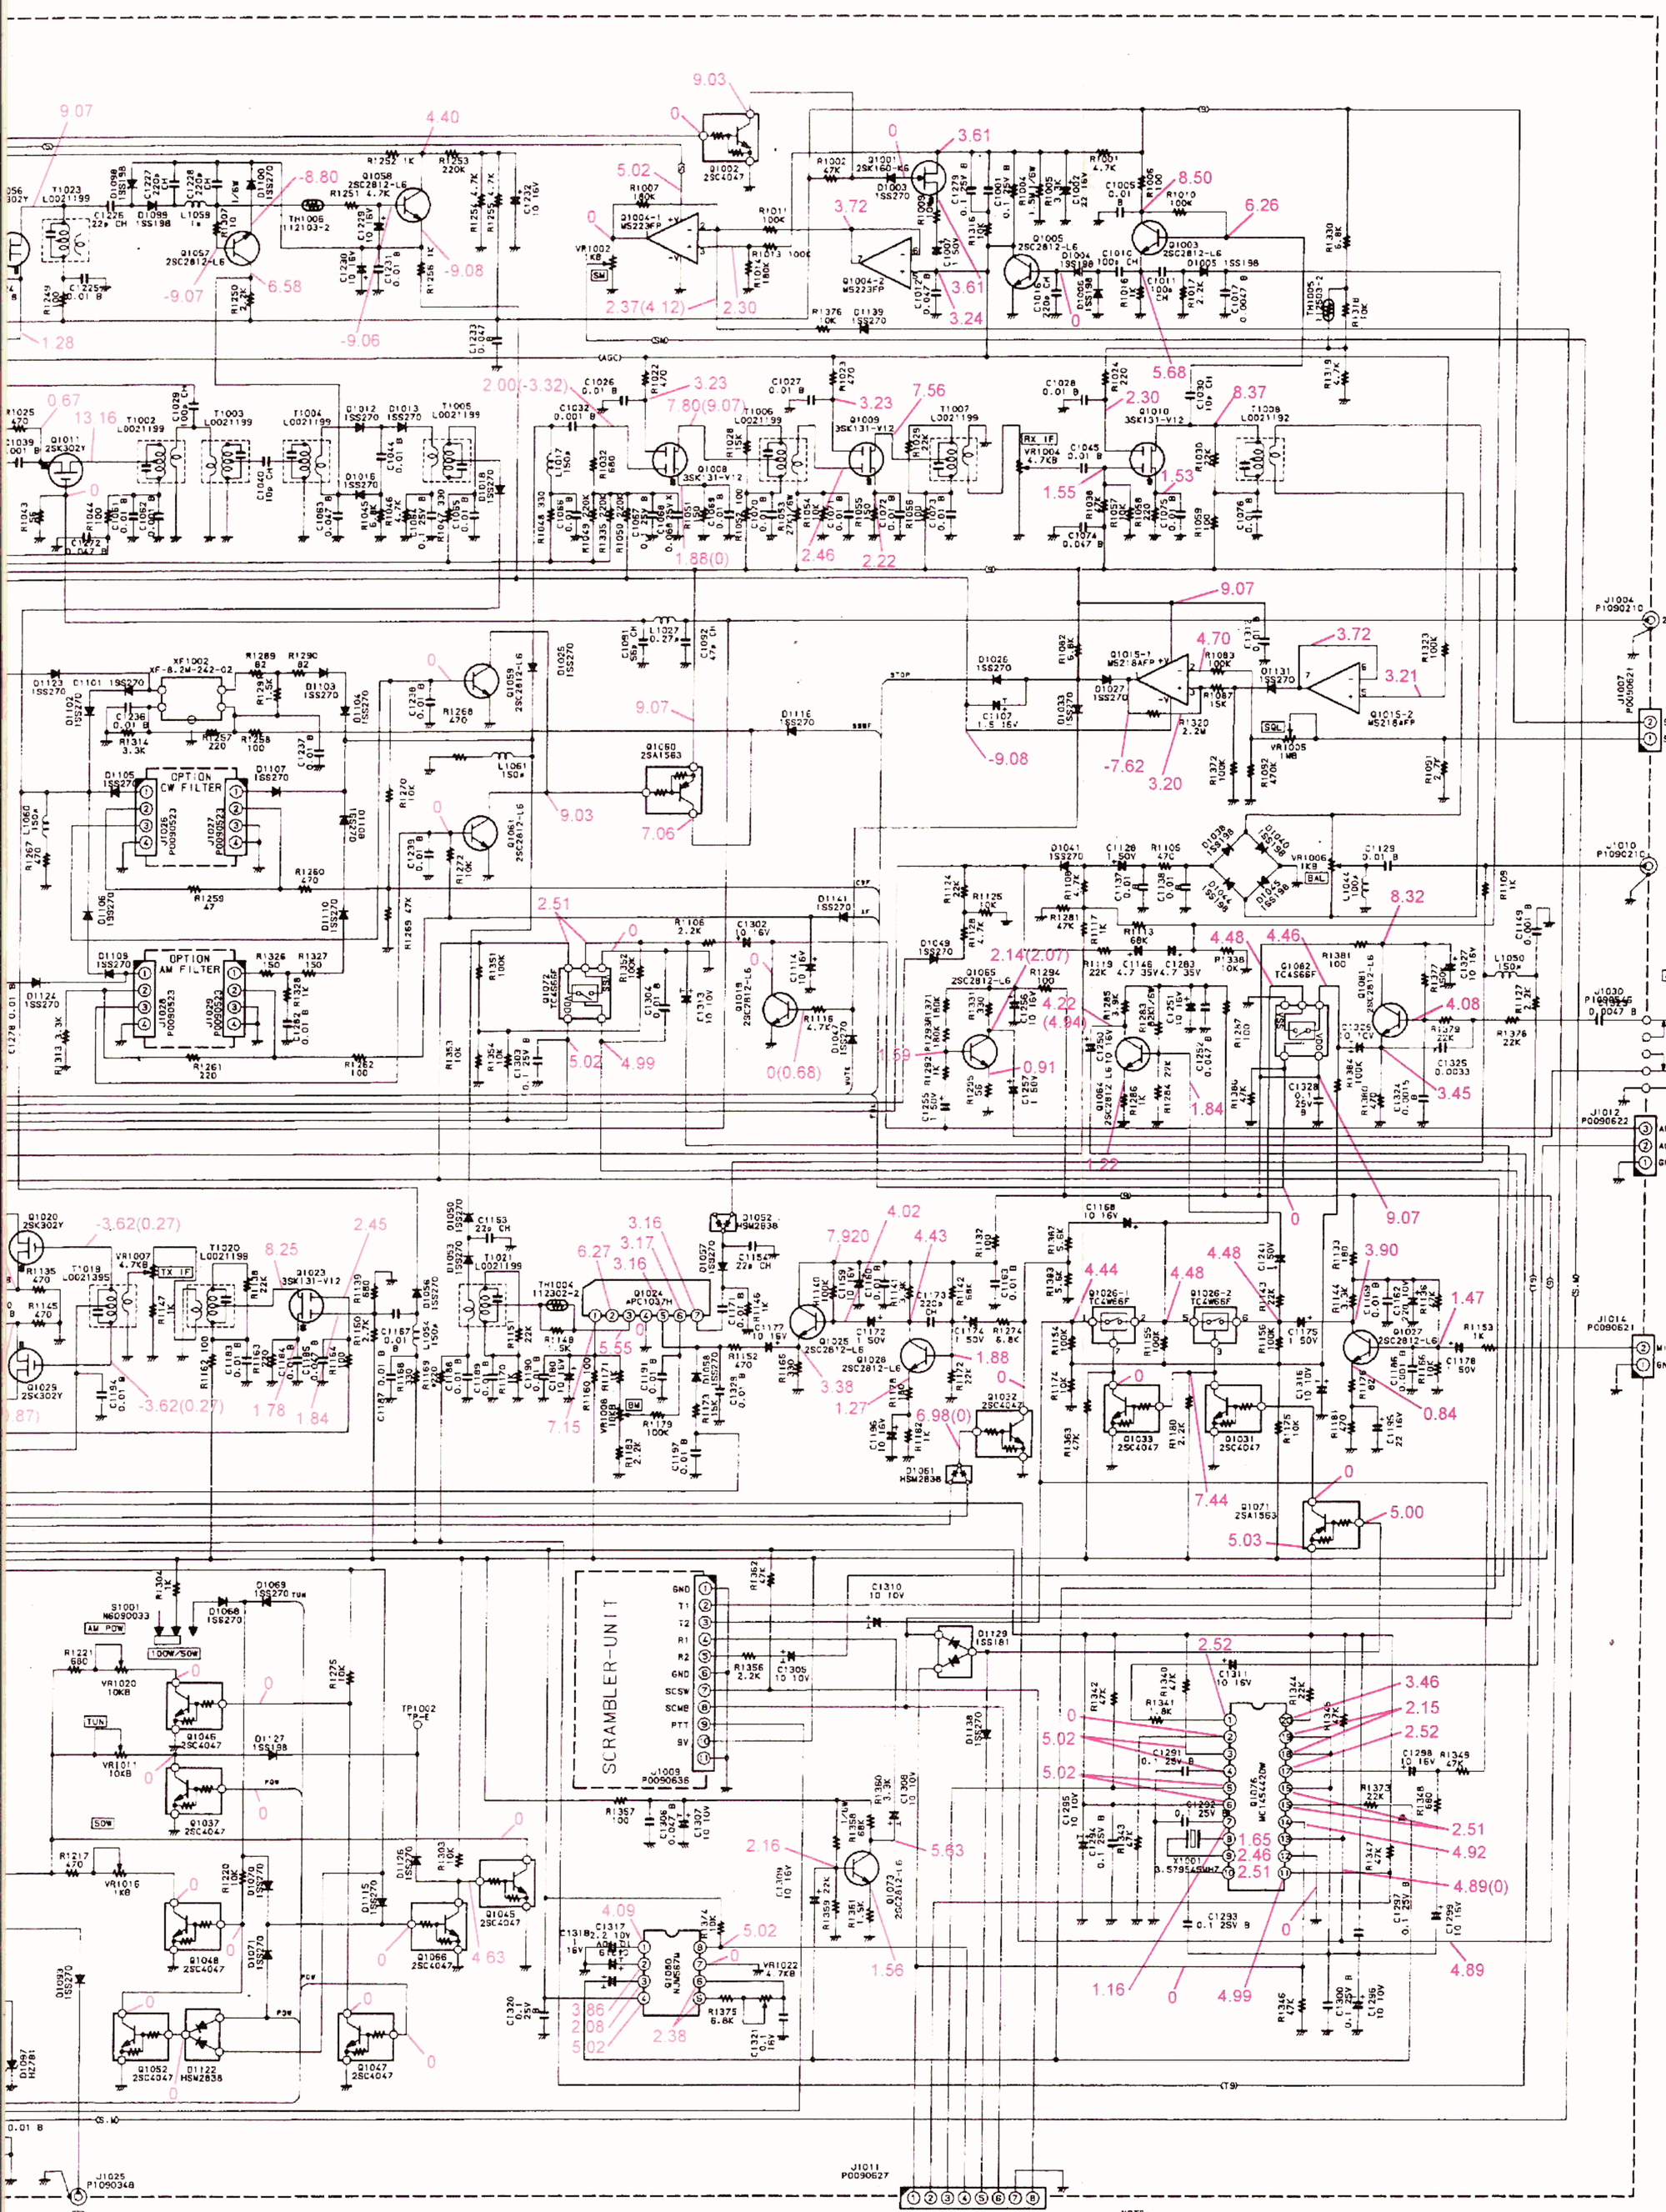
To Local Unit J2020
(See Page 4B-1)
To VR-C Unit JP7401
(See Page 4N-1)
To Local Unit J2021
(See Page 4B-1)
To Local Unit J2017
(See Page 4B-1)
To MIC Unit JP7103
(See Page 4K-1)
To Local Unit J2007
(See Page 4B-1)
RX (TX)
RX: 14.25 MHz
TX: 14.25 MHz, 100 W (Connected to a 50-W dummy load)
NOTE:
RESISTOR VALUES ARE IN Ω.;
CAPACITOR VALUES ARE IN μF, 50V ;
(T) CAPACITOR VALUES ARE TANTALUM ;
INDUCTOR VALUES ARE IN H
UNLESS OTHERWISE NOTED.

Circuit Diagram

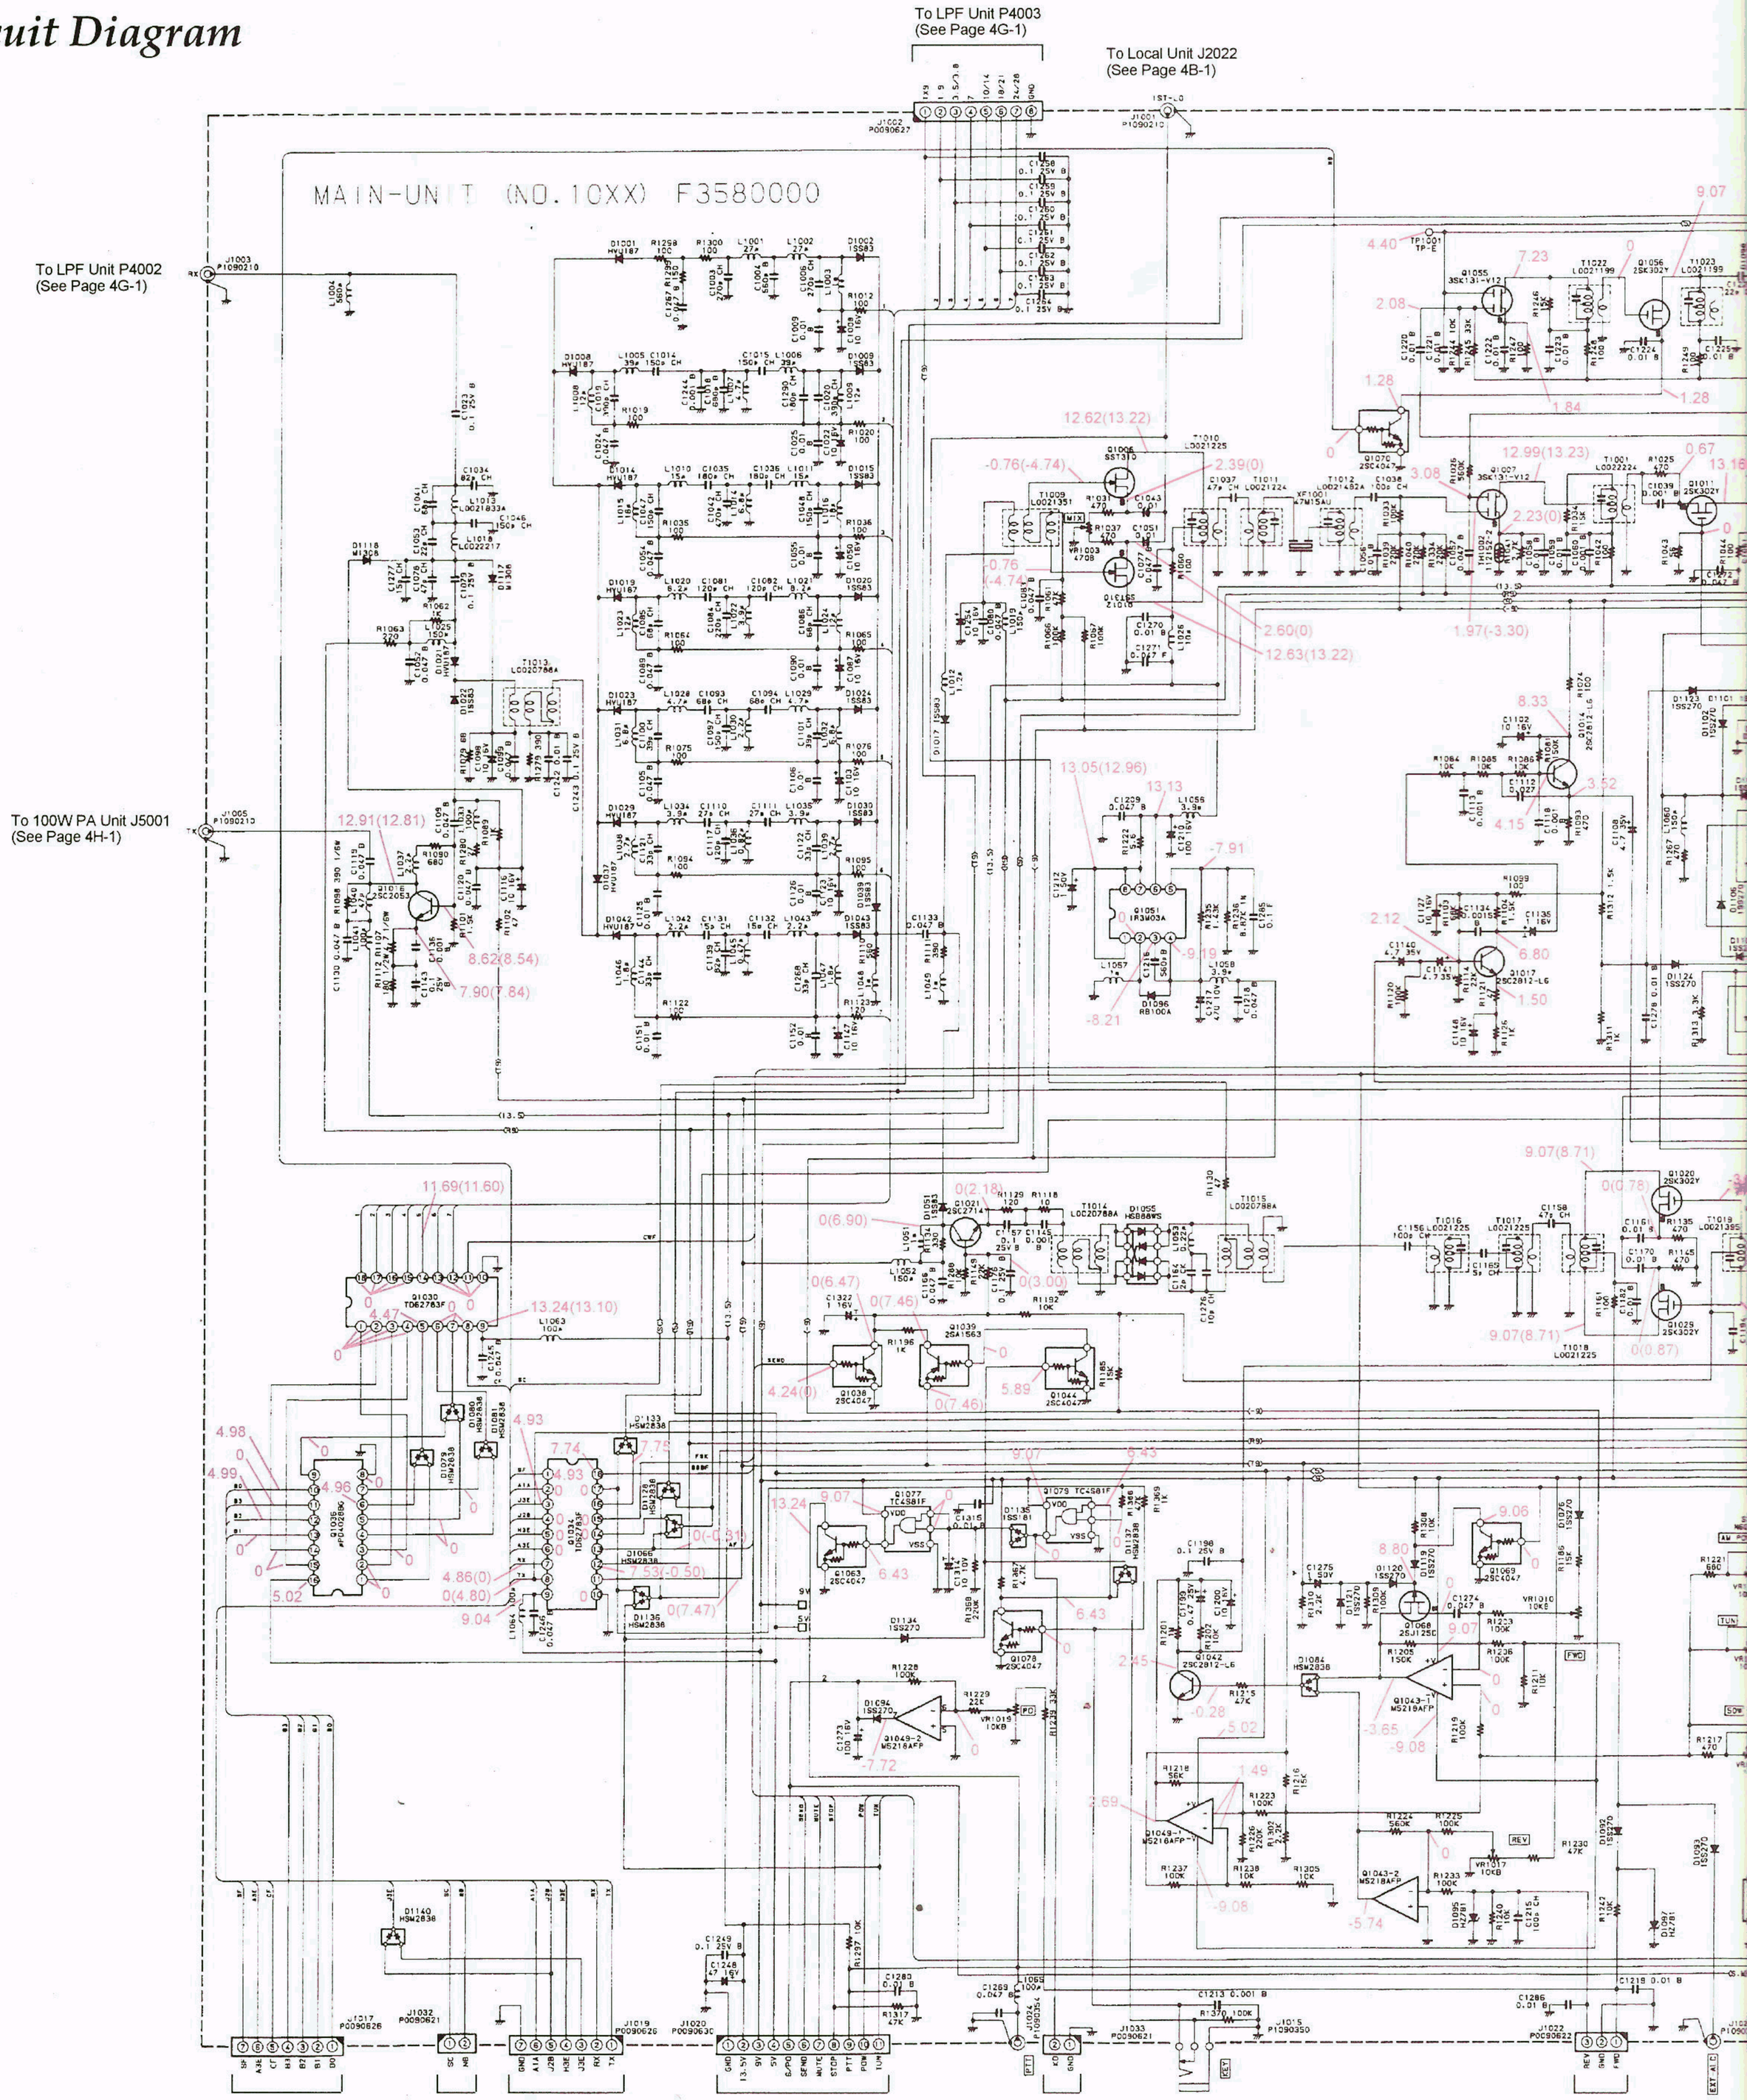

E F

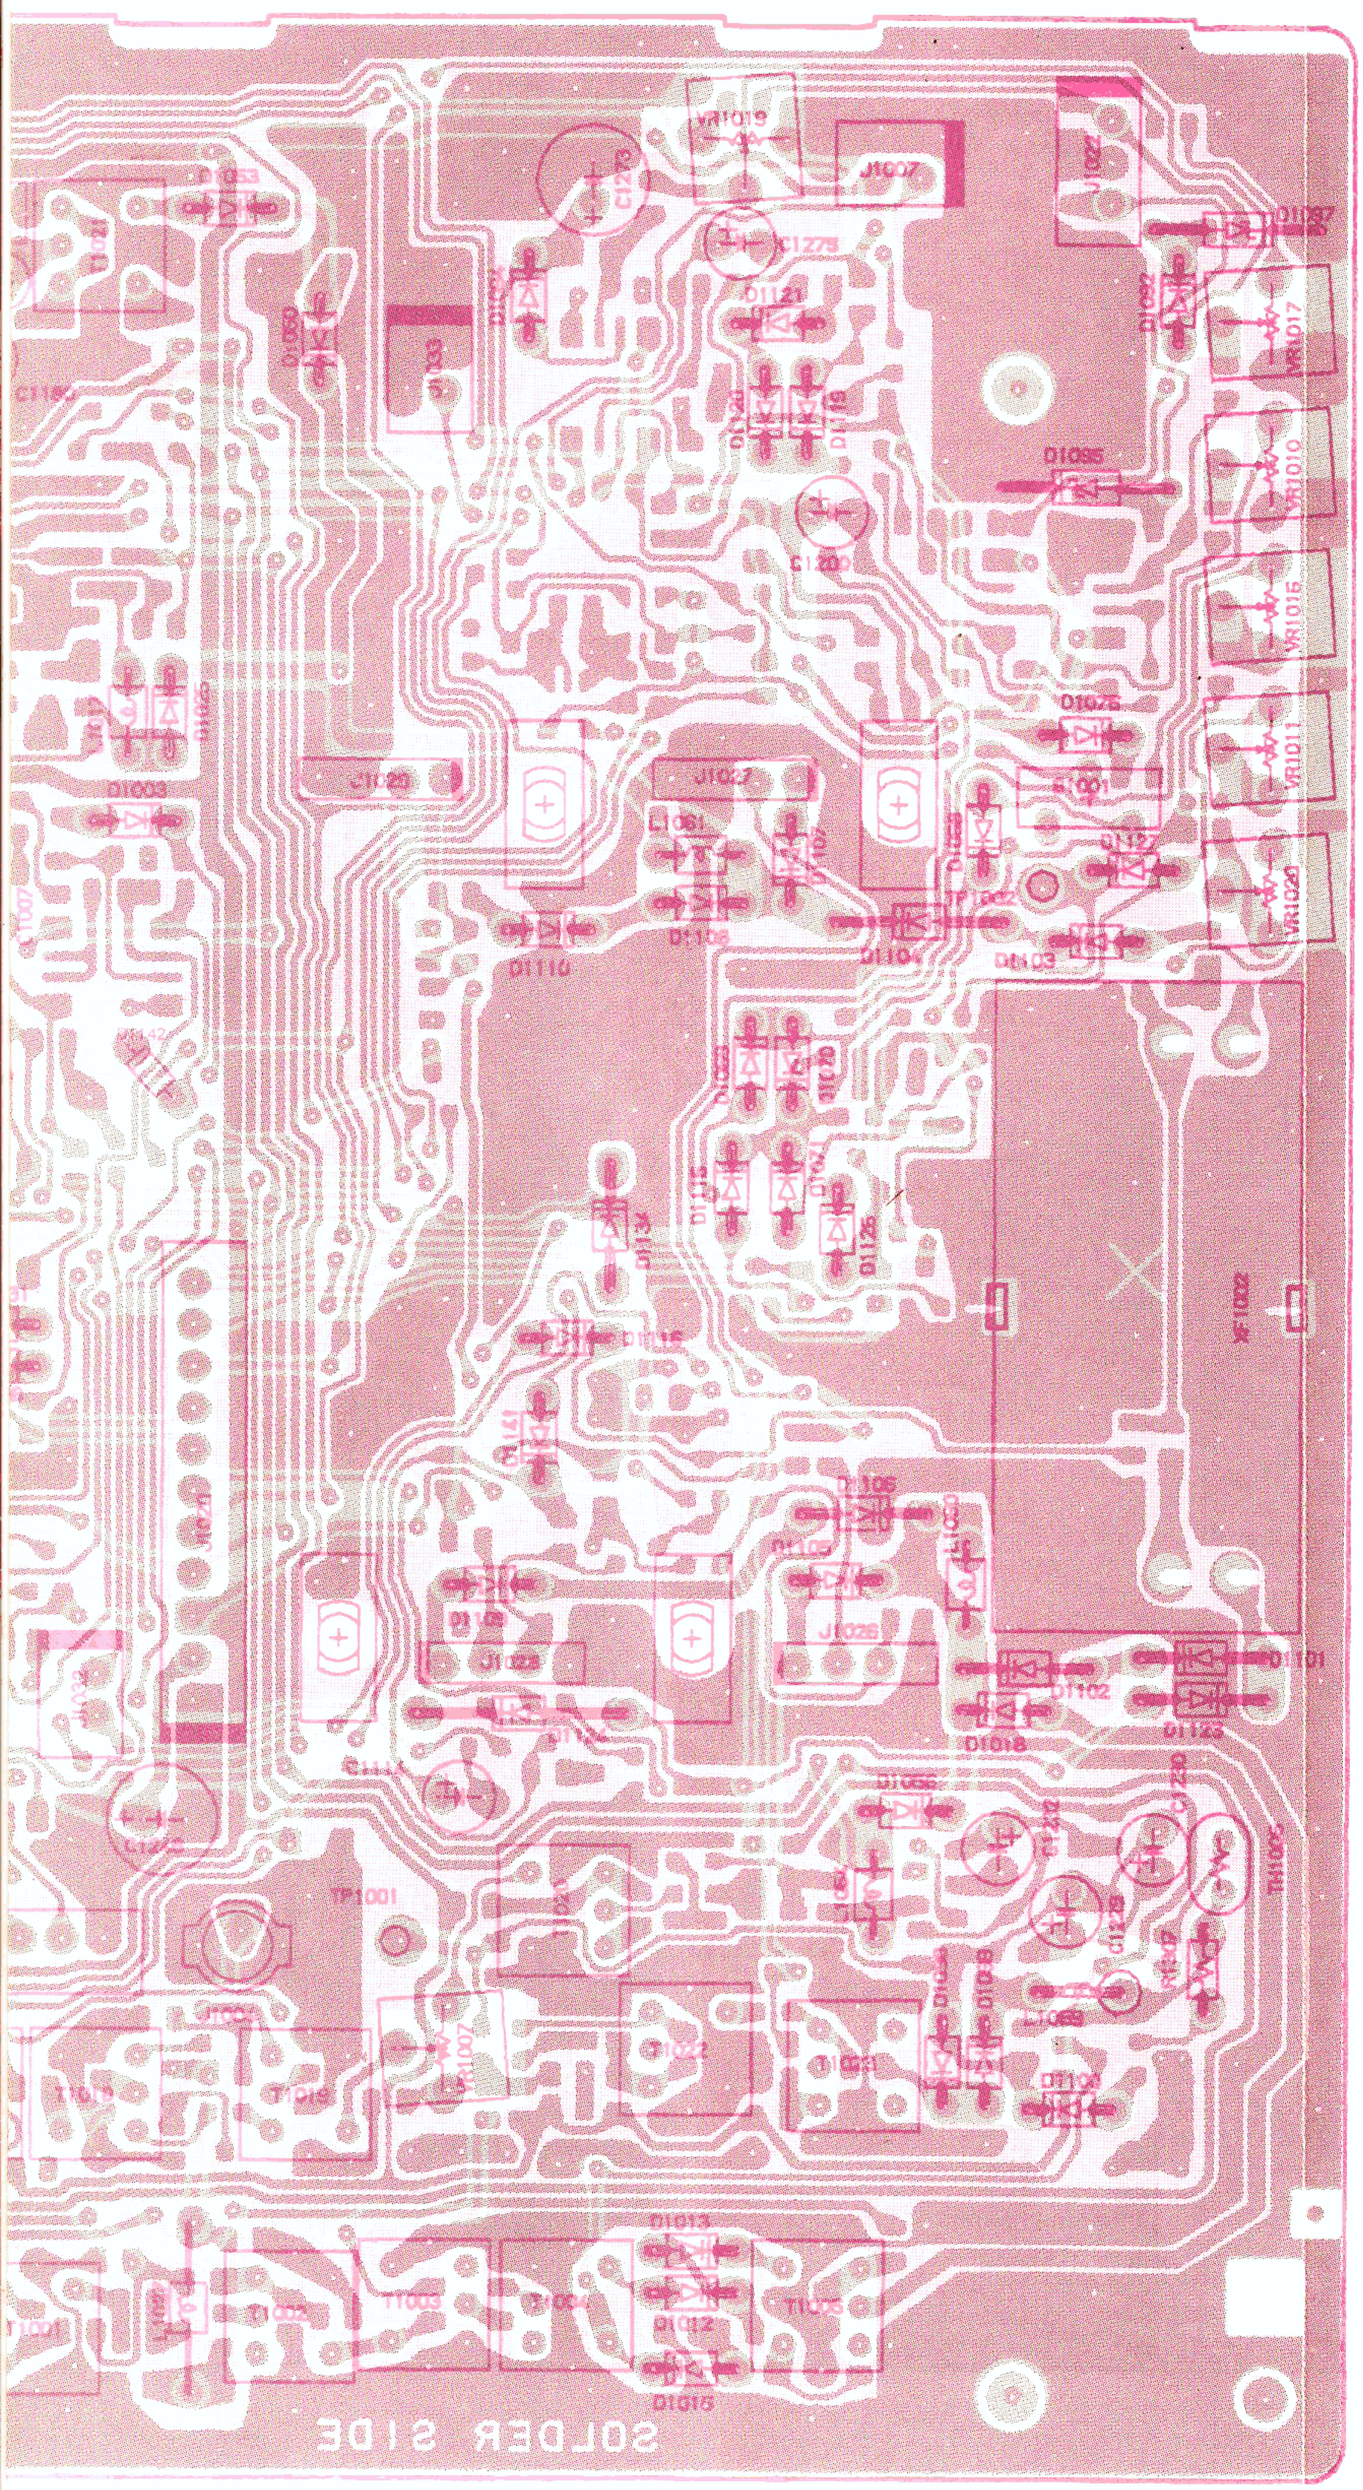


J1007: SQL, 9V

J1022: FWD, GND, REV

J1033: GND, K0


2SC2053 (Q1016)

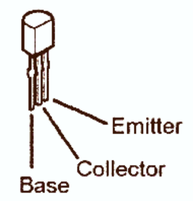

J1029: GND, GND, RFG, I/O

J1027: GND, GND, RFG, I/O


μPC1037H (Q1024)

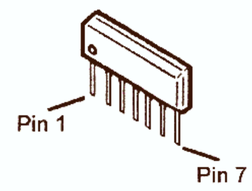

J1012: AF, ALARM, GND

J1009: GND, T1, T2, R1, R2, GND, SCSW, SCMB, PTT, 9V, GND

IR3M03A (Q1051)

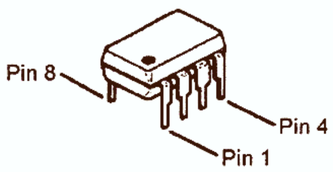

J1032: SC, NB

J1028: I/O, RFG, GND, GND

J1026: I/O, RFG, GND, GND

J1020: 10W, 50W, PTT, STOP, MUTE, SENO, S/PO, 5V, 9V, 13.5V, GND

J1017: B0, B1, B2, B3, CF, A3E, SF


J1019: TX, RX, J3E, H3E, J2B, A1A, GND

J1002: TX9, 1.9, 3.5, 7, 10/14, 18//21, 24/28, GND


Component Side

Parts Layout


Main Unit

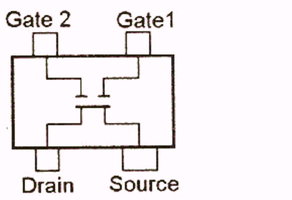


3SK131 (V12)
(Q1007,1008,1009,1010
1023,1055)

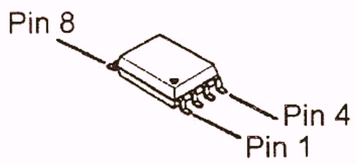


M5223FP
(Q1004)
M5218AFP
(Q1015,1043,1049)
NJM567M
(Q1080)

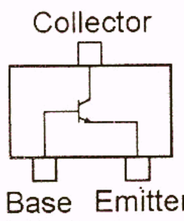


2SC2812 (L6)
(Q1003,1005,1014,1017
1019,1025,1027,1028
1042,1057,1058,1059
1061,1064,1065,1073
1081)
2SC2714Y (QY)
(Q1021)

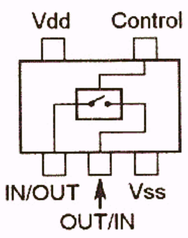


TC4S66F (C9)
(Q1072,101082)

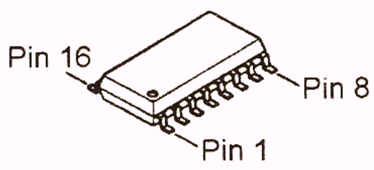


UPD4028BG
(Q1036)

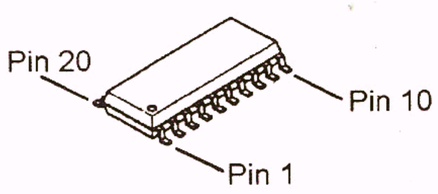


MC145442DWEL
(Q1076)

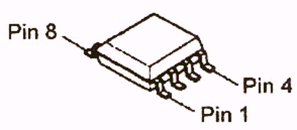


TC4W66F
(Q1026)

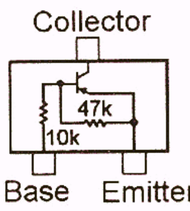


2SA1563 (RL)
(Q1039,1060,1071)

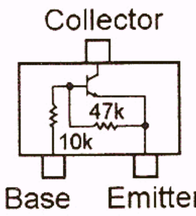


2SC4047 (ZY)
(Q1002,1031,1032,1033
1037,1038,1044,1045
1046,1047,1048,1052
1063,1066,1069,1070
1078)

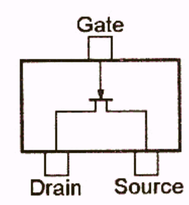


SST310 (Z0)
(Q1006,1012)

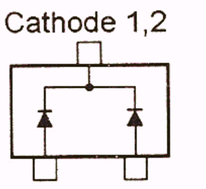


HSM2838 (A6)
(D1028,1052,1061,1066
1079,1080,1081,1084
1122,1128,1133,1136
1137,1140)

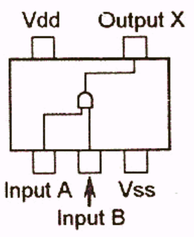


TC4S81F ()
(Q1077,1079)

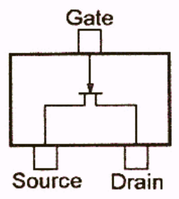


2SK160 (K6)
(Q1001)

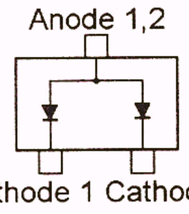


1SS181 (A3)
(D1129,1135)

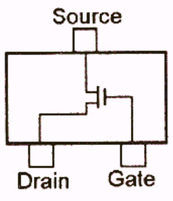


2SK302Y (TY)
(Q1011,1020,1029,1056)

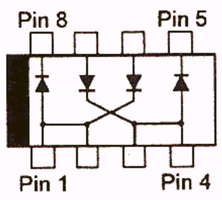

HSB88WSTR
(D1055)

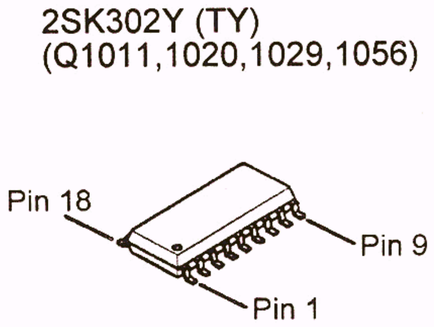


TD62783F
(Q1030,1034)

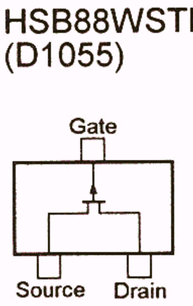


2SJ125D (JD)
(Q1068)


f e

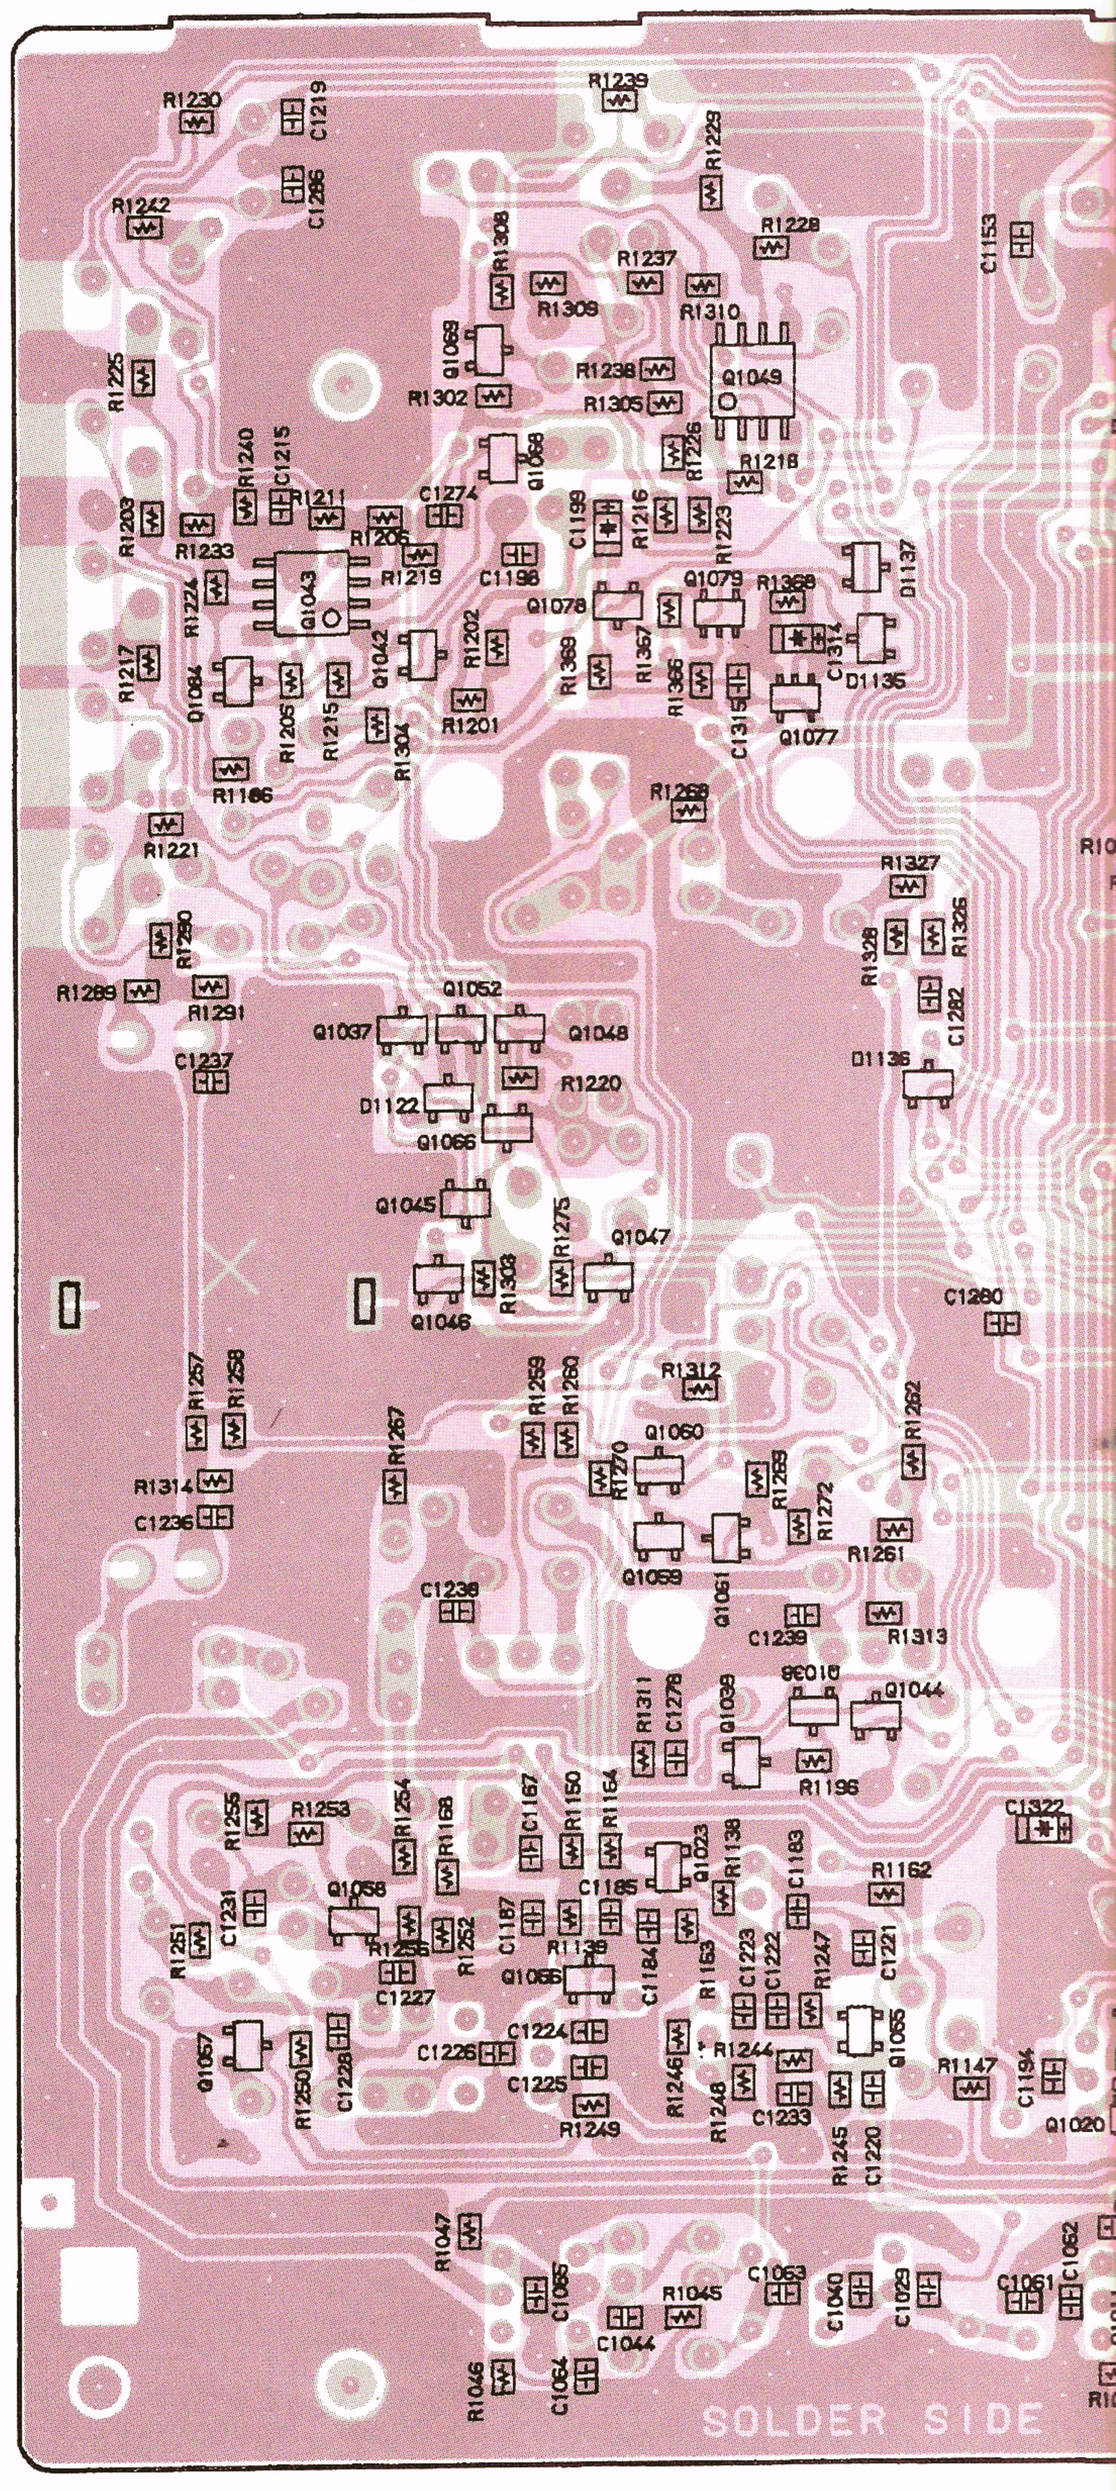

d c b a

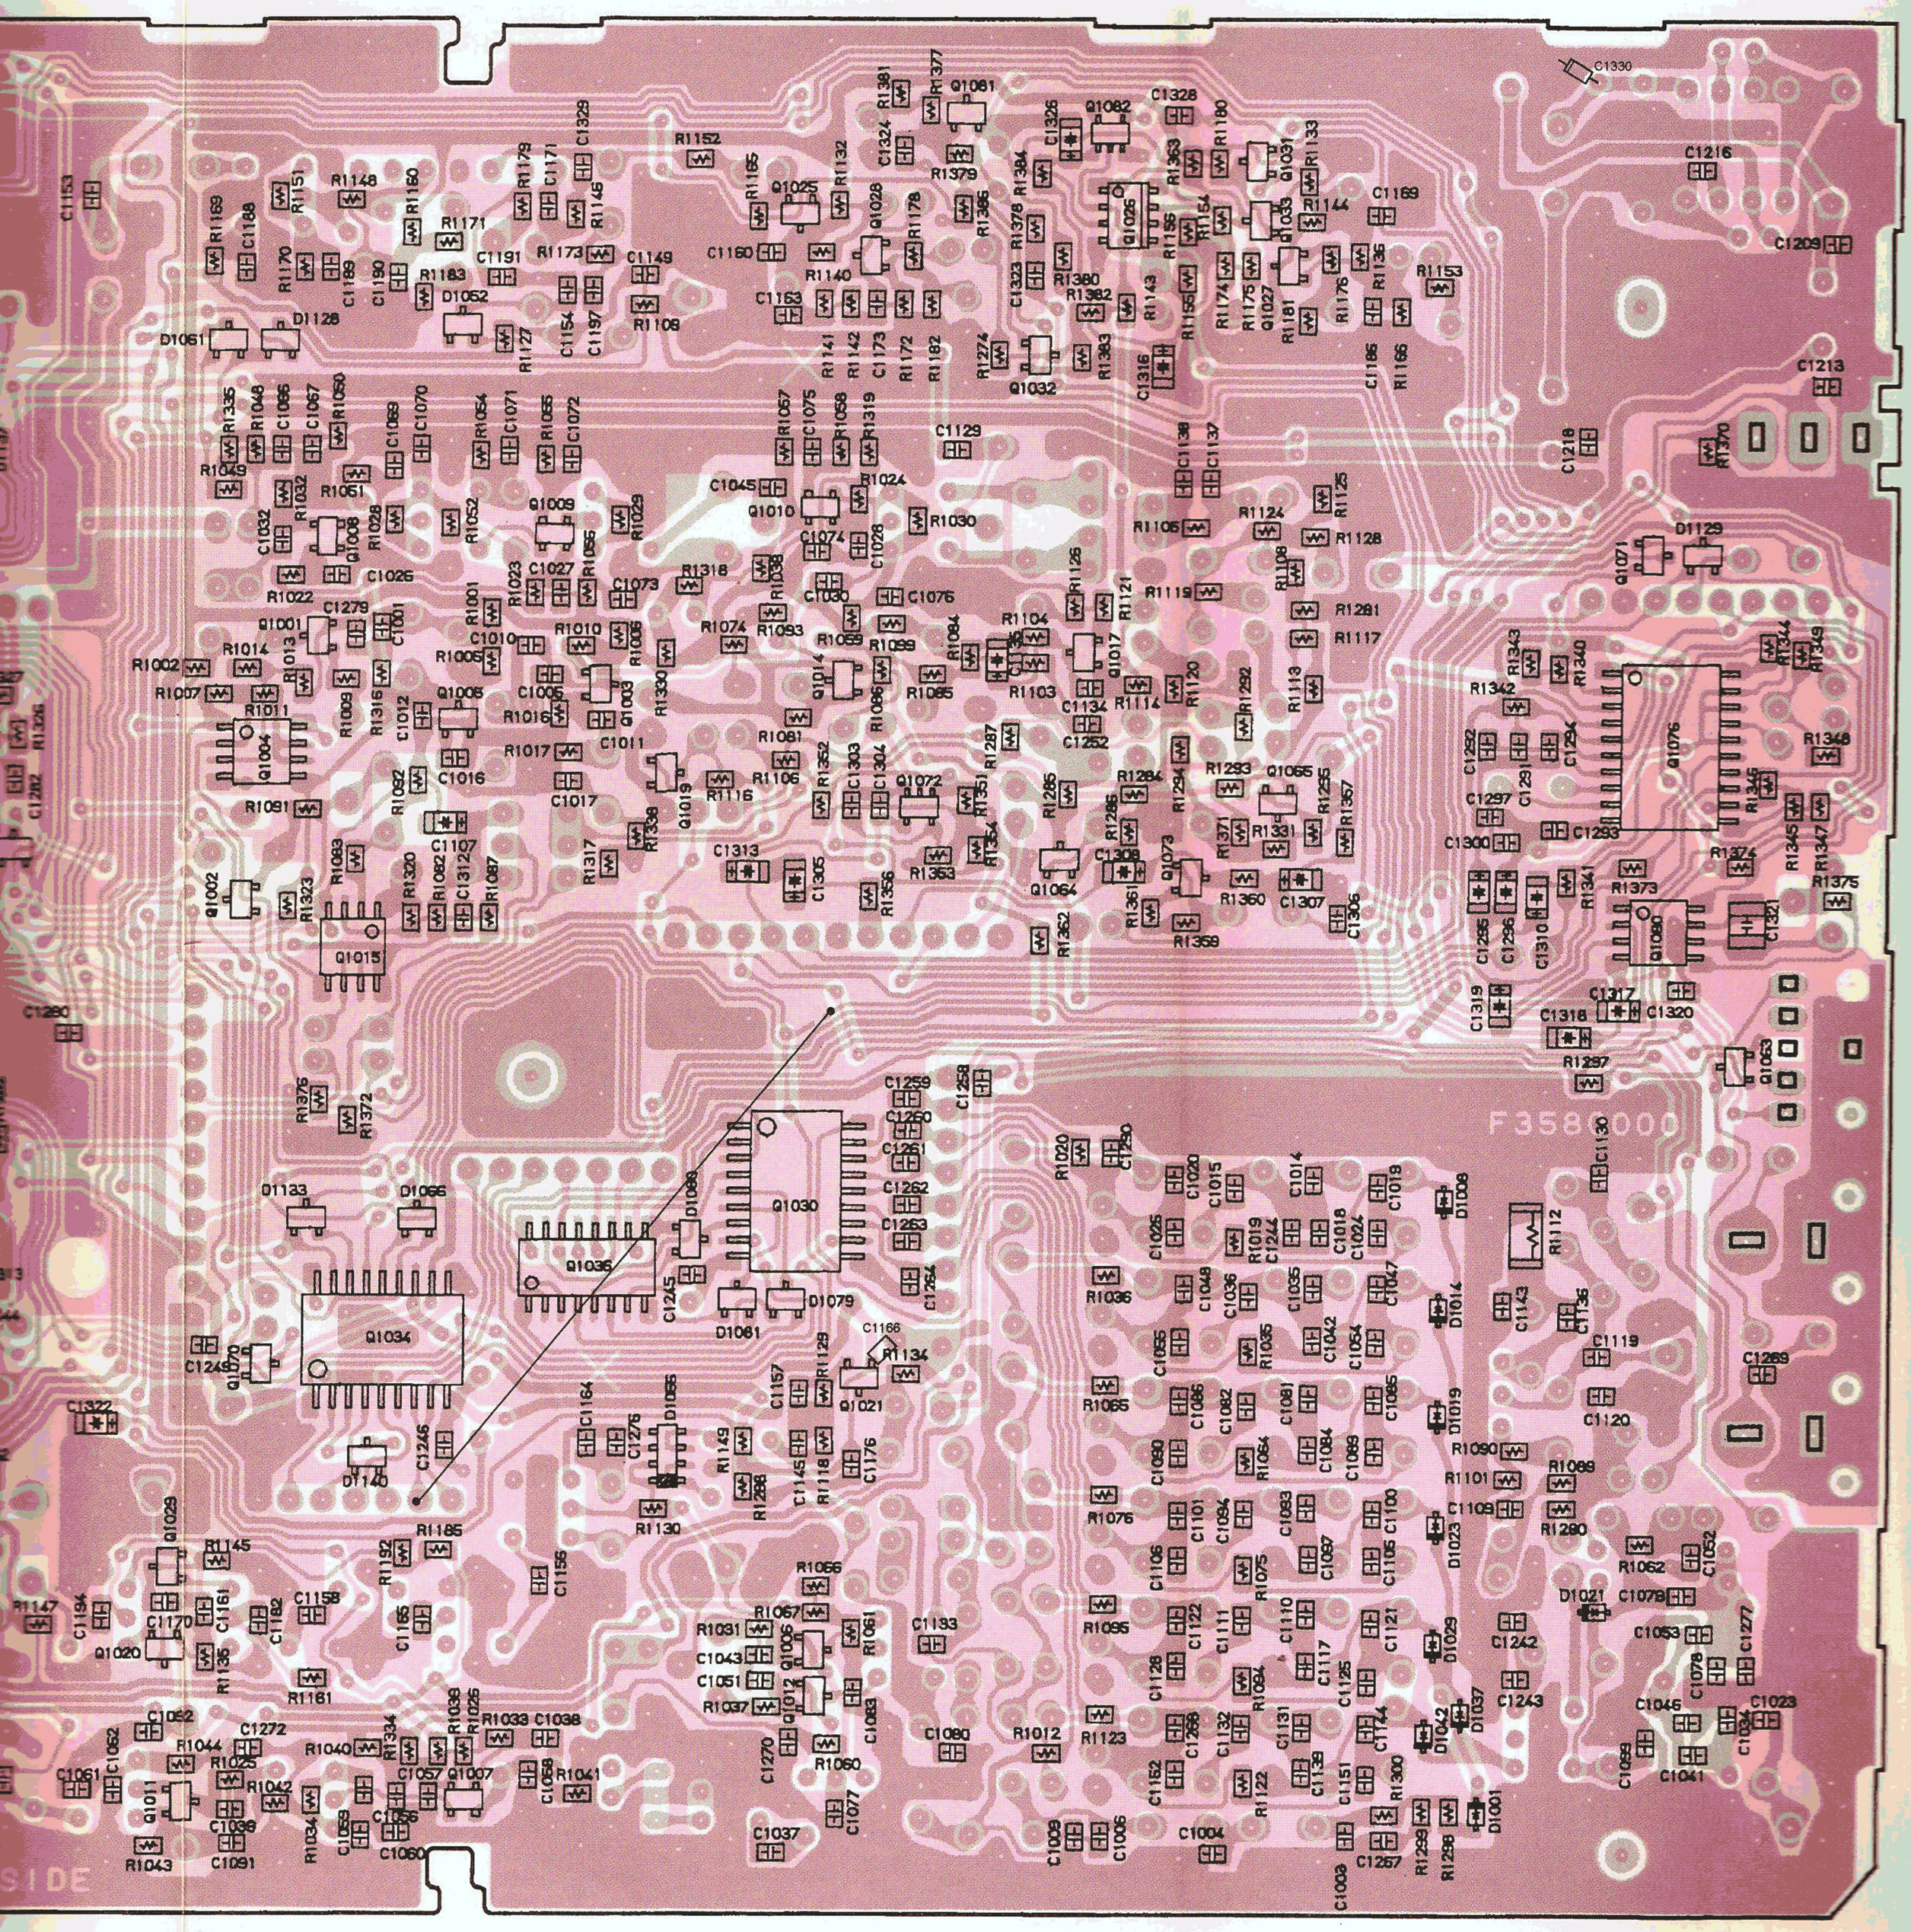


Chip Side

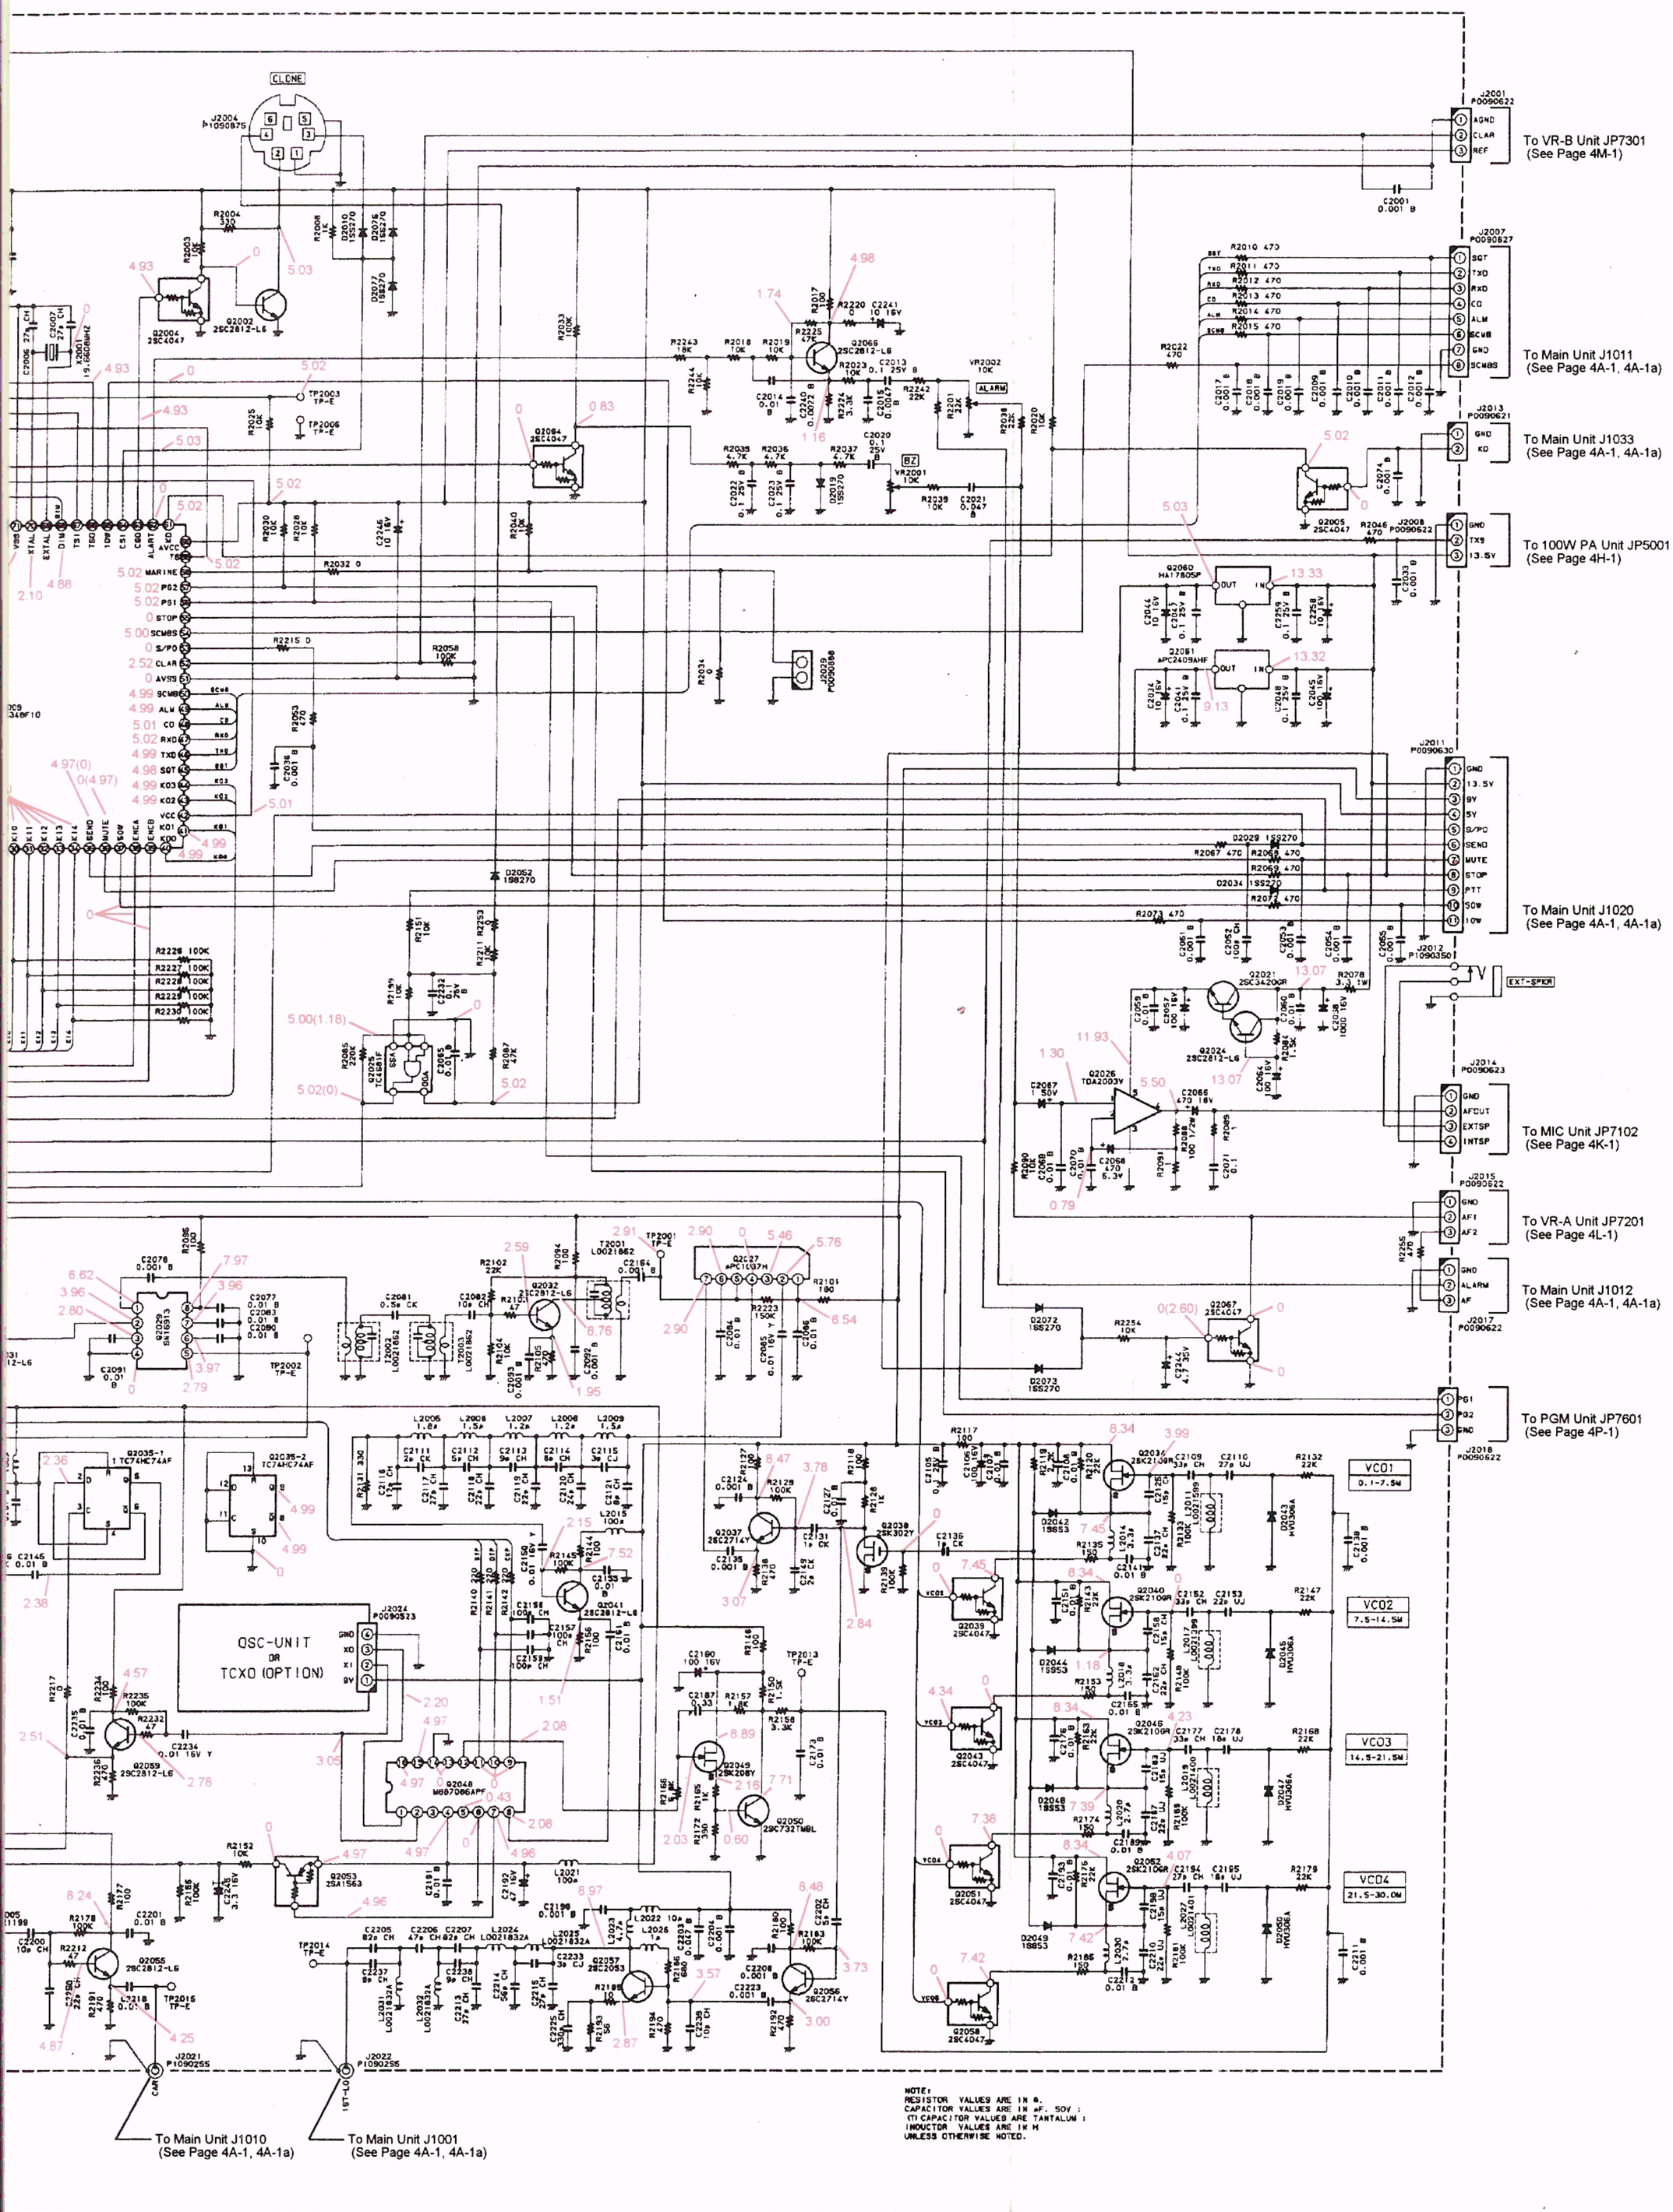

NOTE:
RESISTOR VALUES ARE IN Ω.
CAPACITOR VALUES ARE IN μF, 50V ;
(T) CAPACITOR VALUES ARE TANTALUM ;
INDUCTOR VALUES ARE IN H
UNLESS OTHERWISE NOTED.


Circuit Diagram

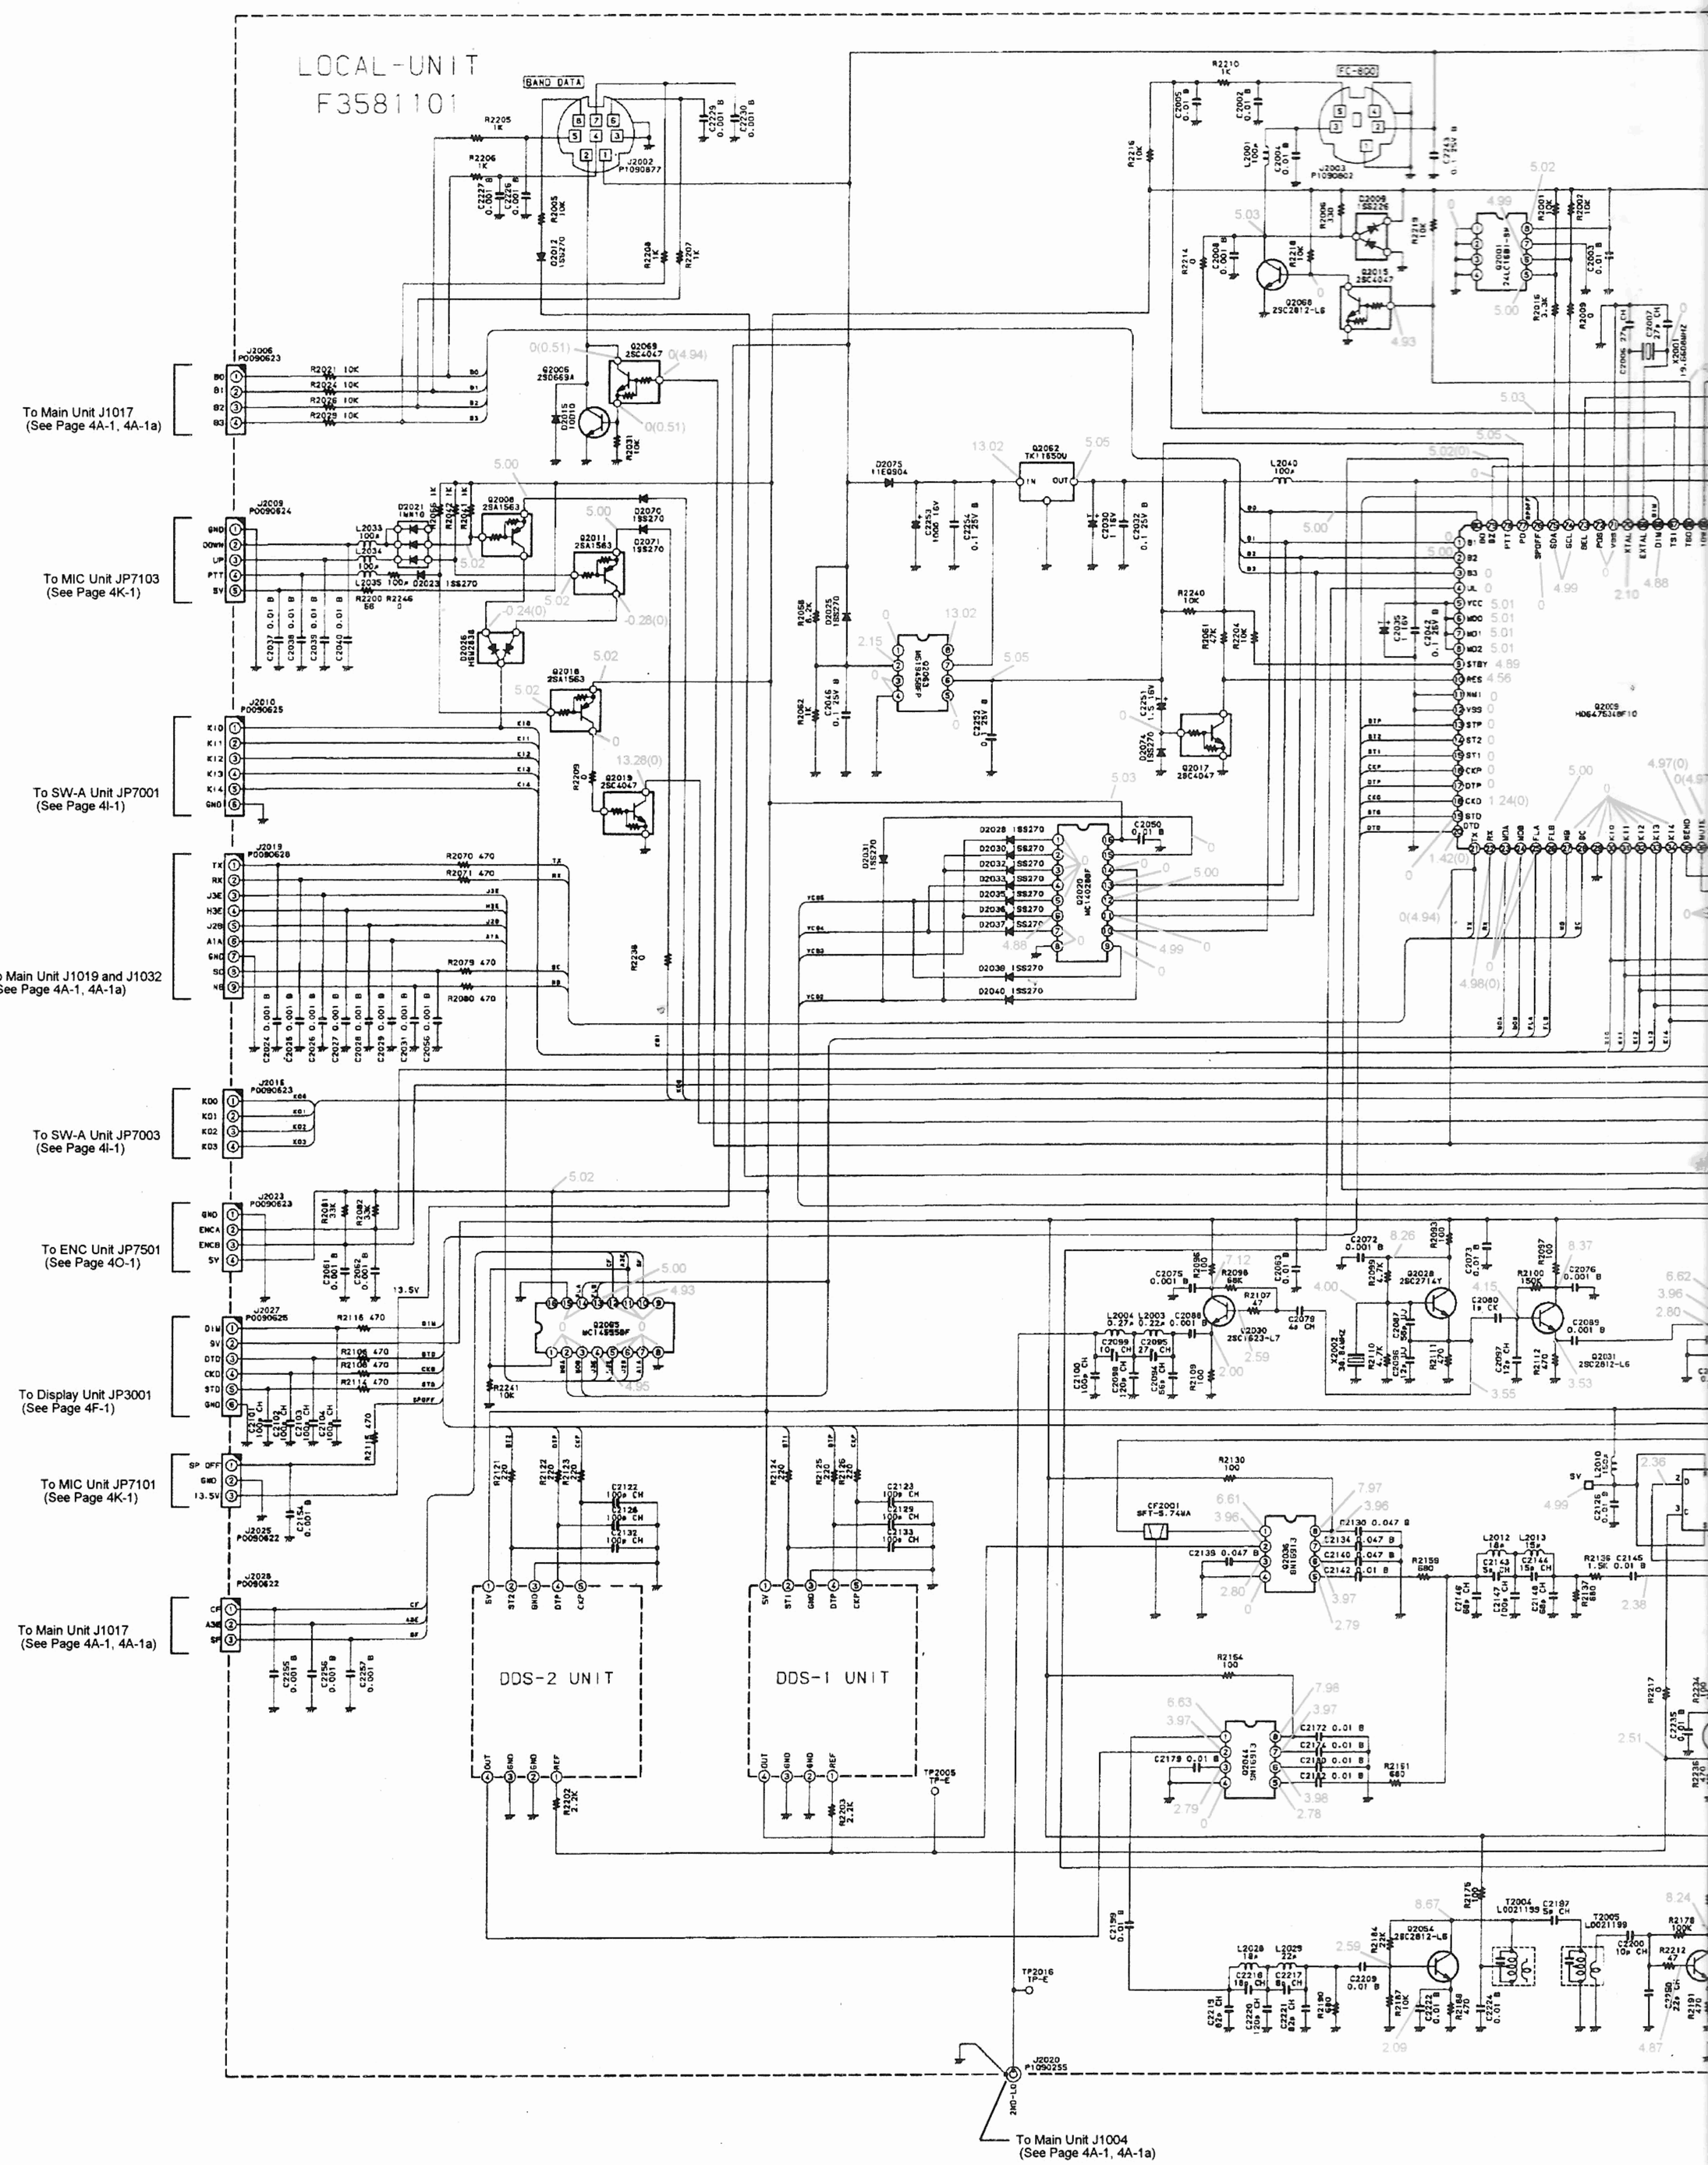


Parts Layout

E F

1ST-LO J2022

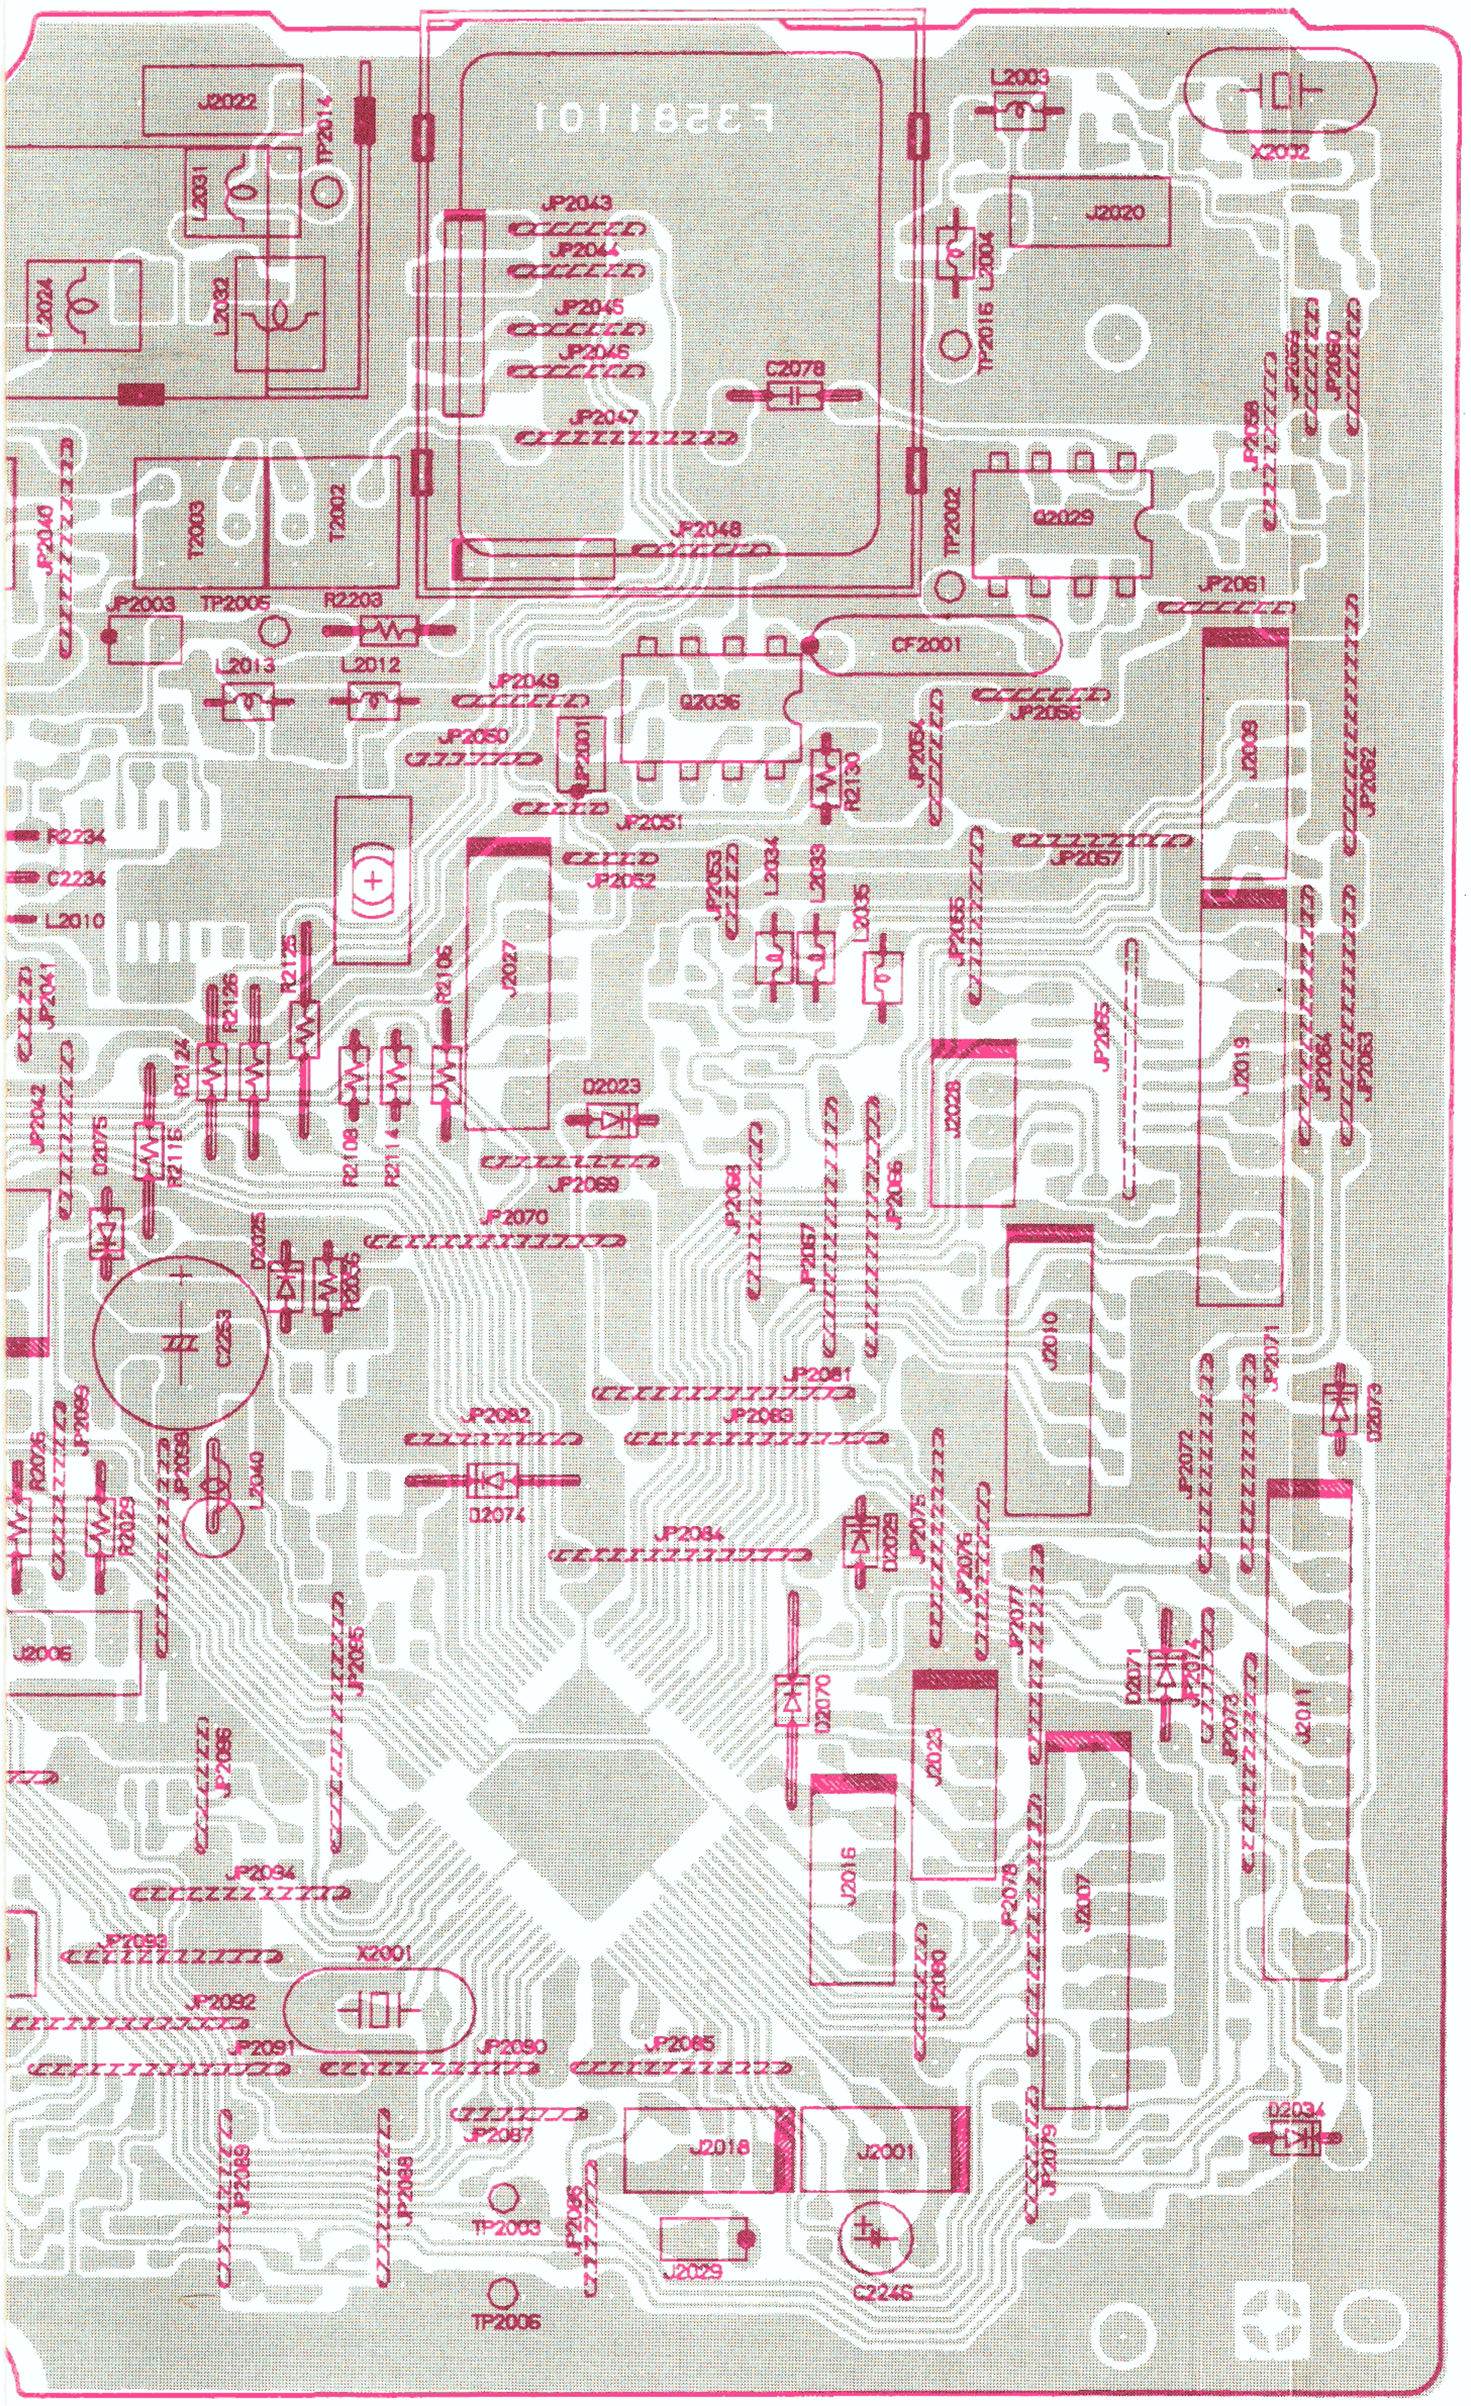
J2022
TP2014
L2031
L2024
L2032
JP2043
JP2044
JP2045
JP2046
C2078
JP2047
T2003
T2002
JP2048
JP2003
TP2005
R2203
L2013
L2012
JP2049
JP2050
JP2001
JP2051
JP2052
JP2053
L2034
L2033
L2035
R2234
C2234
L2010
R2125
R2126
R2105
J2027
D2023
JP2069
JP2070
D2076
R2116
R2108
R2114
D2075
R2106
R2124
JP2068
JP2067
JP2086
JP2085
J2028
J2019
JP2065
JP2064
JP2063
JP2062
JP2061
CF2001
Q2036
R2130
JP2056
JP2054
JP2057
L2003
J2020
TP2016
L2004
X2002
JP2060
JP2059
JP2058
TP2002
Q2029
J2009
J2008
JP2071
JP2072
D2073
J2011
J2010
JP2081
JP2083
JP2082
D2074
JP2084
D2072
JP2077
JP2076
D2071
JP2075
D2070
J2023
J2016
JP2078
J2007
JP2066
D2034
JP2079
J2018
J2001
JP2087
JP2088
JP2089
TP2003
J2029
C2245
TP2006
JP2090
JP2091
JP2092
X2001
JP2094
JP2095
JP2096
JP2097
JP2098
JP2099
JP2100
JP2101
JP2102
JP2103
JP2104
JP2105
JP2106
JP2107
JP2108
JP2109
JP2110
JP2111
JP2112
JP2113
JP2114
JP2115
JP2116
JP2117
JP2118
JP2119
JP2120
JP2121
JP2122
JP2123
JP2124
JP2125
JP2126
JP2127
JP2128
JP2129
JP2130
JP2131
JP2132
JP2133
JP2134
JP2135
JP2136
JP2137
JP2138
JP2139
JP2140
JP2141
JP2142
JP2143
JP2144
JP2145
JP2146
JP2147
JP2148
JP2149
JP2150
JP2151
JP2152
JP2153
JP2154
JP2155
JP2156
JP2157
JP2158
JP2159
JP2160
JP2161
JP2162
JP2163
JP2164
JP2165
JP2166
JP2167
JP2168
JP2169
JP2170
JP2171
JP2172
JP2173
JP2174
JP2175
JP2176
JP2177
JP2178
JP2179
JP2180
JP2181
JP2182
JP2183
JP2184
JP2185
JP2186
JP2187
JP2188
JP2189
JP2190
JP2191
JP2192
JP2193
JP2194
JP2195
JP2196
JP2197
JP2198
JP2199
JP2200
JP2201
JP2202
JP2203
JP2204
JP2205
JP2206
JP2207
JP2208
JP2209
JP2210
JP2211
JP2212
JP2213
JP2214
JP2215
JP2216
JP2217
JP2218
JP2219
JP2220
JP2221
JP2222
JP2223
JP2224
JP2225
JP2226
JP2227
JP2228
JP2229
JP2230
JP2231
JP2232
JP2233
JP2234
JP2235
JP2236
JP2237
JP2238
JP2239
JP2240
JP2241
JP2242
JP2243
JP2244
JP2245
JP2246
JP2247
JP2248
JP2249
JP2250
JP2251
JP2252
JP2253
JP2254
JP2255
JP2256
JP2257
JP2258
JP2259
JP2260
JP2261
JP2262
JP2263
JP2264
JP2265
JP2266
JP2267
JP2268
JP2269
JP2270
JP2271
JP2272
JP2273
JP2274
JP2275
JP2276
JP2277
JP2278
JP2279
JP2280
JP2281
JP2282
JP2283
JP2284
JP2285
JP2286
JP2287
JP2288
JP2289
JP2290
JP2291
JP2292
JP2293
JP2294
JP2295
JP2296
JP2297
JP2298
JP2299
JP2300
JP2301
JP2302
JP2303
JP2304
JP2305
JP2306
JP2307
JP2308
JP2309
JP2310
JP2311
JP2312
JP2313
JP2314
JP2315
JP2316
JP2317
JP2318
JP2319
JP2320
JP2321
JP2322
JP2323
JP2324
JP2325
JP2326
JP2327
JP2328
JP2329
JP2330
JP2331
JP2332
JP2333
JP2334
JP2335
JP2336
JP2337
JP2338
JP2339
JP2340
JP2341
JP2342
JP2343
JP2344
JP2345
JP2346
JP2347
JP2348
JP2349
JP2350
JP2351
JP2352
JP2353
JP2354
JP2355
JP2356
JP2357
JP2358
JP2359
JP2360
JP2361
JP2362
JP2363
JP2364
JP2365
JP2366
JP2367
JP2368
JP2369
JP2370
JP2371
JP2372
JP2373
JP2374
JP2375
JP2376
JP2377
JP2378
JP2379
JP2380
JP2381
JP2382
JP2383
JP2384
JP2385
JP2386
JP2387
JP2388
JP2389
JP2390
JP2391
JP2392
JP2393
JP2394
JP2395
JP2396
JP2397
JP2398
JP2399
JP2400
JP2401
JP2402
JP2403
JP2404
JP2405
JP2406
JP2407
JP2408
JP2409
JP2410
JP2411
JP2412
JP2413
JP2414
JP2415
JP2416
JP2417
JP2418
JP2419
JP2420
JP2421
JP2422
JP2423
JP2424
JP2425
JP2426
JP2427
JP2428
JP2429
JP2430
JP2431
JP2432
JP2433
JP2434
JP2435
JP2436
JP2437
JP2438
JP2439
JP2440
JP2441
JP2442
JP2443
JP2444
JP2445
JP2446
JP2447
JP2448
JP2449
JP2450
JP2451
JP2452
JP2453
JP2454
JP2455
JP2456
JP2457
JP2458
JP2459
JP2460
JP2461
JP2462
JP2463
JP2464
JP2465
JP2466
JP2467
JP2468
JP2469
JP2470
JP2471
JP2472
JP2473
JP2474
JP2475
JP2476
JP2477
JP2478
JP2479
JP2480
JP2481
JP2482
JP2483
JP2484
JP2485
JP2486
JP2487
JP2488
JP2489
JP2490
JP2491
JP2492
JP2493
JP2494
JP2495
JP2496
JP2497
JP2498
JP2499
JP2500
JP2501
JP2502
JP2503
JP2504
JP2505
JP2506
JP2507
JP2508
JP2509
JP2510
JP2511
JP2512
JP2513
JP2514
JP2515
JP2516
JP2517
JP2518
JP2519
JP2520
JP2521
JP2522
JP2523
JP2524
JP2525
JP2526
JP2527
JP2528
JP2529
JP2530
JP2531
JP2532
JP2533
JP2534
JP2535
JP2536
JP2537
JP2538
JP2539
JP2540
JP2541
JP2542
JP2543
JP2544
JP2545
JP2546
JP2547
JP2548
JP2549
JP2550
JP2551
JP2552
JP2553
JP2554
JP2555
JP2556
JP2557
JP2558
JP2559
JP2560
JP2561
JP2562
JP2563
JP2564
JP2565
JP2566
JP2567
JP2568
JP2569
JP2570
JP2571
JP2572
JP2573
JP2574
JP2575
JP2576
JP2577
JP2578
JP2579
JP2580
JP2581
JP2582
JP2583
JP2584
JP2585
JP2586
JP2587
JP2588
JP2589
JP2590
JP2591
JP2592
JP2593
JP2594
JP2595
JP2596
JP2597
JP2598
JP2599
JP2600
JP2601
JP2602
JP2603
JP2604
JP2605
JP2606
JP2607
JP2608
JP2609
JP2610
JP2611
JP2612
JP2613
JP2614
JP2615
JP2616
JP2617
JP2618
JP2619
JP2620
JP2621
JP2622
JP2623
JP2624
JP2625
JP2626
JP2627
JP2628
JP2629
JP2630
JP2631
JP2632
JP2633
JP2634
JP2635
JP2636
JP2637
JP2638
JP2639
JP2640
JP2641
JP2642
JP2643
JP2644
JP2645
JP2646
JP2647
JP2648
JP2649
JP2650
JP2651
JP2652
JP2653
JP2654
JP2655
JP2656
JP2657
JP2658
JP2659
JP2660
JP2661
JP2662
JP2663
JP2664
JP2665
JP2666
JP2667
JP2668
JP2669
JP2670
JP2671
JP2672
JP2673
JP2674
JP2675
JP2676
JP2677
JP2678
JP2679
JP2680
JP2681
JP2682
JP2683
JP2684
JP2685
JP2686
JP2687
JP2688
JP2689
JP2690
JP2691
JP2692
JP2693
JP2694
JP2695
JP2696
JP2697
JP2698
JP2699
JP2700
JP2701
JP2702
JP2703
JP2704
JP2705
JP2706
JP2707
JP2708
JP2709
JP2710
JP2711
JP2712
JP2713
JP2714
JP2715
JP2716
JP2717
JP2718
JP2719
JP2720
JP2721
JP2722
JP2723
JP2724
JP2725
JP2726
JP2727
JP2728
JP2729
JP2730
JP2731
JP2732
JP2733
JP2734
JP2735
JP2736
JP2737
JP2738
JP2739
JP2740
JP2741
JP2742
JP2743
JP2744
JP2745
JP2746
JP2747
JP2748
JP2749
JP2750
JP2751
JP2752
JP2753
JP2754
JP2755
JP2756
JP2757
JP2758
JP2759
JP2760
JP2761
JP2762
JP2763
JP2764
JP2765
JP2766
JP2767
JP2768
JP2769
JP2770
JP2771
JP2772
JP2773
JP2774
JP2775
JP2776
JP2777
JP2778
JP2779
JP2780
JP2781
JP2782
JP2783
JP2784
JP2785
JP2786
JP2787
JP2788
JP2789
JP2790
JP2791
JP2792
JP2793
JP2794
JP2795
JP2796
JP2797
JP2798
JP2799
JP2800
JP2801
JP2802
JP2803
JP2804
JP2805
JP2806
JP2807
JP2808
JP2809
JP2810
JP2811
JP2812
JP2813
JP2814
JP2815
JP2816
JP2817
JP2818
JP2819
JP2820
JP2821
JP2822
JP2823
JP2824
JP2825
JP2826
JP2827
JP2828
JP2829
JP2830
JP2831
JP2832
JP2833
JP2834
JP2835
JP2836
JP2837
JP2838
JP2839
JP2840
JP2841
JP2842
JP2843
JP2844
JP2845
JP2846
JP2847
JP2848
JP2849
JP2850
JP2851
JP2852
JP2853
JP2854
JP2855
JP2856
JP2857
JP2858
JP2859
JP2860
JP2861
JP2862
JP2863
JP2864
JP2865
JP2866
JP2867
JP2868
JP2869
JP2870
JP2871
JP2872
JP2873
JP2874
JP2875
JP2876
JP2877
JP2878
JP2879
JP2880
JP2881
JP2882
JP2883
JP2884
JP2885
JP2886
JP2887
JP2888
JP2889
JP2890
JP2891
JP2892
JP2893
JP2894
JP2895
JP2896
JP2897
JP2898
JP2899
JP2900
JP2901
JP2902
JP2903
JP2904
JP2905
JP2906
JP2907
JP2908
JP2909
JP2910
JP2911
JP2912
JP2913
JP2914
JP2915
JP2916
JP2917
JP2918
JP2919
JP2920
JP2921
JP2922
JP2923
JP2924
JP2925
JP2926
JP2927
JP2928
JP2929
JP2930
JP2931
JP2932
JP2933
JP2934
JP2935
JP2936
JP2937
JP2938
JP2939
JP2940
JP2941
JP2942
JP2943
JP2944
JP2945
JP2946
JP2947
JP2948
JP2949
JP2950
JP2951
JP2952
JP2953
JP2954
JP2955
JP2956
JP2957
JP2958
JP2959
JP2960
JP2961
JP2962
JP2963
JP2964
JP2965
JP2966
JP2967
JP2968
JP2969
JP2970
JP2971
JP2972
JP2973
JP2974
JP2975
JP2976
JP2977
JP2978
JP2979
JP2980
JP2981
JP2982
JP2983
JP2984
JP2985
JP2986
JP2987
JP2988
JP2989
JP2990
JP2991
JP2992
JP2993
JP2994
JP2995
JP2996
JP2997
JP2998
JP2999
JP3000
JP3001
JP3002
JP3003
JP3004
JP3005
JP3006
JP3007
JP3008
JP3009
JP3010
JP3011
JP3012
JP3013
JP3014
JP3015
JP3016
JP3017
JP3018
JP3019
JP3020
JP3021
JP3022
JP3023
JP3024
JP3025
JP3026
JP3027
JP3028
JP3029
JP3030
JP3031
JP3032
JP3033
JP3034
JP3035
JP3036
JP3037
JP3038
JP3039
JP3040
JP3041
JP3042
JP3043
JP3044
JP3045
JP3046
JP3047
JP3048
JP3049
JP3050
JP3051
JP3052
JP3053
JP3054
JP3055
JP3056
JP3057
JP3058
JP3059
JP3060
JP3061
JP3062
JP3063
JP3064
JP3065
JP3066
JP3067
JP3068
JP3069
JP3070
JP3071
JP3072
JP3073
JP3074
JP3075
JP3076
JP3077
JP3078
JP3079
JP3080
JP3081
JP3082
JP3083
JP3084
JP3085
JP3086
JP3087
JP3088
JP3089
JP3090
JP3091
JP3092
JP3093
JP3094
JP3095
JP3096
JP3097
JP3098
JP3099
JP3100
JP3101
JP3102
JP3103
JP3104
JP3105
JP3106
JP3107
JP3108
JP3109
JP3110
JP3111
JP3112
JP3113
JP3114
JP3115
JP3116
JP3117
JP3118
JP3119
JP3120
JP3121
JP3122
JP3123
JP3124
JP3125
JP3126
JP3127
JP3128
JP3129
JP3130
JP3131
JP3132
JP3133
JP3134
JP3135
JP3136
JP3137
JP3138
JP3139
JP3140
JP3141
JP3142
JP3143
JP3144
JP3145
JP3146
JP3147
JP3148
JP3149
JP3150
JP3151
JP3152
JP3153
JP3154
JP3155
JP3156
JP3157
JP3158
JP3159
JP3160
JP3161
JP3162
JP3163
JP3164
JP3165
JP3166
JP3167
JP3168
JP3169
JP3170
JP3171
JP3172
JP3173
JP3174
JP3175
JP3176
JP3177
JP3178
JP3179
JP3180
JP3181
JP3182
JP3183
JP3184
JP3185
JP3186
JP3187
JP3188
JP3189
JP3190
JP3191
JP3192
JP3193
JP3194
JP3195
JP3196
JP3197
JP3198
JP3199
JP3200
JP3201
JP3202
JP3203
JP3204
JP3205
JP3206
JP3207
JP3208
JP3209
JP3210
JP3211
JP3212
JP3213
JP3214
JP3215
JP3216
JP3217
JP3218
JP3219
JP3220
JP3221
JP3222
JP3223
JP3224
JP3225
JP3226
JP3227
JP3228
JP3229
JP3230
JP3231
JP3232
JP3233
JP3234
JP3235
JP3236
JP3237
JP3238
JP3239
JP3240
JP3241
JP3242
JP3243
JP3244
JP3245
JP3246
JP3247
JP3248
JP3249
JP3250
JP3251
JP3252
JP3253
JP3254
JP3255
JP3256
JP3257
JP3258
JP3259
JP3260
JP3261
JP3262
JP3263
JP3264
JP3265
JP3266
JP3267
JP3268
JP3269
JP3270
JP3271
JP3272
JP3273
JP3274
JP3275
JP3276
JP3277
JP3278
JP3279
JP3280
JP3281
JP3282
JP3283
JP3284
JP3285
JP3286
JP3287
JP3288
JP3289
JP3290
JP3291
JP3292
JP3293
JP3294
JP3295
JP3296
JP3297
JP3298
JP3299
JP3300
JP3301
JP3302
JP3303
JP3304
JP3305
JP3306
JP3307
JP3308
JP3309
JP3310
JP3311
JP3312
JP3313
JP3314
JP3315
JP3316
JP3317
JP3318
JP3319
JP3320
JP3321
JP3322
JP3323
JP3324
JP3325
JP3326
JP3327
JP3328
JP3329
JP3330
JP3331
JP3332
JP3333
JP3334
JP3335
JP3336
JP3337
JP3338
JP3339
JP3340
JP3341
JP3342
JP3343
JP3344
JP3345
JP3346
JP3347
JP3348
JP3349
JP3350
JP3351
JP3352
JP3353
JP3354
JP3355
JP3356
JP3357
JP3358
JP3359
JP3360
JP3361
JP3362
JP3363
JP3364
JP3365
JP3366
JP3367
JP3368
JP3369
JP3370
JP3371
JP3372
JP3373
JP3374
JP3375
JP3376
JP3377
JP3378
JP3379
JP3380
JP3381
JP3382
JP3383
JP3384
JP3385
JP3386
JP3387
JP3388
JP3389
JP3390
JP3391
JP3392
JP3393
JP3394
JP3395
JP3396
JP3397
JP3398
JP3399
JP3400
JP3401
JP3402
JP3403
JP3404
JP3405
JP3406
JP3407
JP3408
JP3409
JP3410
JP3411
JP3412
JP3413
JP3414
JP3415
JP3416
JP3417
JP3418
JP3419
JP3420
JP3421
JP3422
JP3423
JP3424
JP3425
JP3426
JP3427
JP3428
JP3429
JP3430
JP3431
JP3432
JP3433
JP3434
JP3435
JP3436
JP3437
JP3438
JP3439
JP3440
JP3441
JP3442
JP3443
JP3444
JP3445
JP3446
JP3447
JP3448
JP3449
JP3450
JP3451
JP3452
JP3453
JP3454
JP3455
JP3456
JP3457
JP3458
JP3459
JP3460
JP3461
JP3462
JP3463
JP3464
JP3465
JP3466
JP3467
JP3468
JP3469
JP3470
JP3471
JP3472
JP3473
JP3474
JP3475
JP3476
JP3477
JP3478
JP3479
JP3480
JP3481
JP3482
JP3483
JP3484
JP3485
JP3486
JP3487
JP3488
JP3489
JP3490
JP3491
JP3492
JP3493
JP3494
JP3495
JP3496
JP3497
JP3498
JP3499
JP3500
JP3501
JP3502
JP3503
JP3504
JP3505
JP3506
JP3507
JP3508
JP3509
JP3510
JP3511
JP3512
JP3513
JP3514
JP3515
JP3516
JP3517
JP3518
JP3519
JP3520
JP3521
JP3522
JP3523
JP3524
JP3525
JP3526
JP3527
JP3528
JP3529
JP3530
JP3531
JP3532
JP3533
JP3534
JP3535
JP3536
JP3537
JP3538
JP3539
JP3540
JP3541
JP3542
JP3543
JP3544
JP3545
JP3546
JP3547
JP3548
JP3549
JP3550
JP3551
JP3552
JP3553
JP3554
JP3555
JP3556
JP3557
JP3558
JP3559
JP3560
JP3561
JP3562
JP3563
JP3564
JP3565
JP3566
JP3567
JP3568
JP3569
JP3570
JP3571
JP3572
JP3573
JP3574
JP3575
JP3576
JP3577
JP3578
JP3579
JP3580
JP3581
JP3582
JP3583
JP3584
JP3585
JP3586
JP3587
JP3588
JP3589
JP3590
JP3591
JP3592
JP3593
JP3594
JP3595
JP3596
JP3597
JP3598
JP3599
JP3600
JP3601
JP3602
JP3603
JP3604
JP3605
JP3606
JP3607
JP3608
JP3609
JP3610
JP3611
JP3612
JP3613
JP3614
JP3615
JP3616
JP3617
JP3618
JP3619
JP3620
JP3621
JP3622
JP3623
JP3624
JP3625
JP3626
JP3627
JP3628
JP3629
JP3630
JP3631
JP3632
JP3633
JP3634
JP3635
JP3636
JP3637
JP3638
JP3639
JP3640
JP3641
JP3642
JP3643
JP3644
JP3645
JP3646
JP3647
JP3648
JP3649
JP3650
JP3651
JP3652
JP3653
JP3654
JP3655
JP3656
JP3657
JP3658
JP3659
JP3660
JP3661
JP3662
JP3663
JP3664
JP3665
JP3666
JP3667
JP3668
JP3669
JP3670
JP3671
JP3672
JP3673
JP3674
JP3675
JP3676
JP3677
JP3678
JP3679
JP3680
JP3681
JP3682
JP3683
JP3684
JP3685
JP3686
JP3687
JP3688
JP3689
JP3690
JP3691
JP3692
JP3693
JP3694
JP3695
JP3696
JP3697
JP3698
JP3699
JP3700
JP3701
JP3702
JP3703
JP3704
JP3705
JP3706
JP3707
JP3708
JP3709
JP3710
JP3711
JP3712
JP3713
JP3714
JP3715
JP3716
JP3717
JP3718
JP3719
JP3720
JP3721
JP3722
JP3723
JP3724
JP3725
JP3726
JP3727
JP3728
JP3729
JP3730
JP3731
JP3732
JP3733
JP3734
JP3735
JP3736
JP3737
JP3738
JP3739
JP3740
JP3741
JP3742
JP3743
JP3744
JP3745
JP3746
JP3747
JP3748
JP3749
JP3750
JP3751
JP3752
JP3753
JP3754
JP3755
JP3756
JP3757
JP3758
JP3759
JP3760
JP3761
JP3762
JP3763
JP3764
JP3765
JP3766
JP3767
JP3768
JP3769
JP3770
JP3771
JP3772
JP3773
JP3774
JP3775
JP3776
JP3777
JP3778
JP3779
JP3780
JP3781
JP3782
JP3783
JP3784
JP3785
JP3786
JP3787
JP3788
JP3789
JP3790
JP3791
JP3792
JP3793
JP3794
JP3795
JP3796
JP3797
JP3798
JP3799
JP3800
JP3801
JP3802
JP3803
JP3804
JP3805
JP3806
JP3807
JP3808
JP3809
JP3810
JP3811
JP3812
JP3813
JP3814
JP3815
JP3816
JP3817
JP3818
JP3819
JP3820
JP3821
JP3822
JP3823
JP3824
JP3825
JP3826
JP3827
JP3828
JP3829
JP3830
JP3831
JP3832
JP3833
JP3834
JP3835
JP3836
JP3837
JP3838
JP3839
JP3840
JP3841
JP3842
JP3843
JP3844
JP3845
JP3846
JP3847
JP3848
JP3849
JP3850
JP3851
JP3852
JP3853
JP3854
JP3855
JP3856
JP3857
JP3858
JP3859
JP3860
JP3861
JP3862
JP3863
JP3864
JP3865
JP3866
JP3867
JP3868
JP3869
JP3870
JP3871
JP3872
JP3873
JP3874
JP3875
JP3876
JP3877
JP3878
JP3879
JP3880
JP3881
JP3882
JP3883
JP3884
JP3885
JP3886
JP3887
JP3888
JP3889
JP3890
JP3891
JP3892
JP3893
JP3894
JP3895
JP3896
JP3897
JP3898
JP3899
JP3900
JP3901
JP3902
JP3903
JP3904
JP3905
JP3906
JP3907
JP3908
JP3909
JP3910
JP3911
JP3912
JP3913
JP3914
JP3915
JP3916
JP3917
JP3918
JP3919
JP3920
JP3921
JP3922
JP3923
JP3924
JP3925
JP3926
JP3927
JP3928
JP3929
JP3930
JP3931
JP3932
JP3933
JP3934
JP3935
JP3936
JP3937
JP3938
JP3939
JP3940
JP3941
JP3942
JP3943
JP3944
JP3945
JP3946
JP3947
JP3948
JP3949
JP3950
JP3951
JP3952
JP3953
JP3954
JP3955
JP3956
JP3957
JP3958
JP3959
JP3960
JP3961
JP3962
JP3963
JP3964
JP3965
JP3966
JP3967
JP3968
JP3969
JP3970
JP3971
JP3972
JP3973
JP3974
JP3975
JP3976
JP3977
JP3978
JP3979
JP3980
JP3981
JP3982
JP3983
JP3984
JP3985
JP3986
JP3987
JP3988
JP3989
JP3990
JP3991
JP3992
JP3993
JP3994
JP3995
JP3996
JP3997
JP3998
JP3999
JP4000
JP4001
JP4002
JP4003
JP4004
JP4005
JP4006
JP4007
JP4008
JP4009
JP4010
JP4011
JP4012
JP4013
JP4014
JP4015
JP4016
JP4017
JP4018
JP4019
JP4020
JP4021
JP4022
JP4023
JP4024
JP4025
JP4026
JP4027
JP4028
JP4029
JP4030
JP4031
JP4032
JP4033
JP4034
JP4035
JP4036
JP4037
JP4038
JP4039
JP4040
JP4041
JP4042
JP4043
JP4044
JP4045
JP4046
JP4047
JP4048
JP4049
JP4050
JP4051
JP4052
JP4053
JP4054
JP4055
JP4056
JP4057
JP4058
JP4059
JP4060
JP4061
JP4062
JP4063
JP4064
JP4065
JP4066
JP4067
JP4068
JP4069
JP4070
JP4071
JP4072
JP4073
JP4074
JP4075
JP4076
JP4077
JP4078
JP4079
JP4080
JP4081
JP4082
JP4083
JP4084
JP4085
JP4086
JP4087
JP4088
JP4089
JP4090
JP4091
JP4092
JP4093
JP4094
JP4095
JP4096
JP4097
JP4098
JP4099
JP4100
JP4101
JP4102
JP4103
JP4104
JP4105
JP4106
JP4107
JP4108
JP4109
JP4110
JP4111
JP4112
JP4113
JP4114
JP4115
JP4116
JP4117
JP4118
JP4119
JP4120
JP4121
JP4122
JP4123
JP4124
JP4125
JP4126
JP4127
JP4128
JP4129
JP4130
JP4131
JP4132
JP4133
JP4134
JP4135
JP4136
JP4137
JP4138
JP4139
JP4140
JP4141
JP4142
JP4143
JP4144
JP4145
JP4146
JP4147
JP4148
JP4149
JP4150
JP4151
JP4152
JP4153
JP4154
JP4155
JP4156
JP4157
JP4158
JP4159
JP4160
JP4161
JP4162
JP4163
JP4164
JP4165
JP4166
JP4167
JP4168
JP4169
JP4170
JP4171
JP4172
JP4173
JP4174
JP4175
JP4176
JP4177
JP4178
JP4179
JP4180
JP4181
JP4182
JP4183
JP4184
JP4185
JP4186
JP4187
JP4188
JP4189
JP4190
JP4191
JP4192
JP4193
JP4194
JP4195
JP4196
JP4197
JP4198
JP4199
JP4200
JP4201
JP4202
JP4203
JP4204
JP4205
JP4206
JP4207
JP4208
JP4209
JP4210
JP4211
JP4212
JP4213
JP4214
JP4215
JP4216
JP4217
JP4218
JP4219
JP4220
JP4221
JP4222
JP4223
JP4224
JP4225
JP4226
JP4227
JP4228
JP4229
JP4230
JP4231
JP4232
JP4233
JP4234
JP4235
JP4236
JP4237
JP4238
JP4239
JP4240
JP4241
JP4242
JP4243
JP4244
JP4245
JP4246
JP4247
JP4248
JP4249
JP4250
JP4251
JP4252
JP4253
JP4254
JP4255
JP4256
JP4257
JP4258
JP4259
JP4260
JP4261
JP4262
JP4263
JP4264
JP4265
JP4266
JP4267
JP4268
JP4269
JP4270
JP4271
JP4272
JP4273
JP4274
JP4275
JP4276
JP4277
JP4278
JP4279
JP4280
JP4281
JP4282
JP4283
JP4284
JP4285
JP4286
JP4287
JP4288
JP4289
JP4290
JP4291
JP4292
JP4293
JP4294
JP4295
JP4296
JP4297
JP4298
JP4299
JP4300
JP4301
JP4302
JP4303
JP4304
JP4305
JP4306
JP4307
JP4308
JP4309
JP4310
JP4311
JP4312
JP4313
JP4314
JP4315
JP4316
JP4317
JP4318
JP4319
JP4320
JP4321
JP4322
JP4323
JP4324
JP4325
JP4326
JP4327
JP4328
JP4329
JP4330
JP4331
JP4332
JP4333
JP4334
JP4335
JP4336
JP4337
JP4338
JP4339
JP4340
JP4341
JP4342
JP4343
JP4344
JP4345
JP4346
JP4347
JP4348
JP4349
JP4350
JP4351
JP4352
JP4353
JP4354
JP4355
JP4356
JP4357
JP4358
JP4359
JP4360
JP4361
JP4362
JP4363
JP4364
JP4365
JP4366
JP4367
JP4368
JP4369
JP4370
JP4371
JP4372
JP4373
JP4374
JP4375
JP4376
JP4377
JP4378
JP4379
JP4380
JP4381
JP4382
JP4383
JP4384
JP4385
JP4386
JP4387
JP4388
JP4389
JP4390
JP4391
JP4392
JP4393
JP4394
JP4395
JP4396
JP4397
JP4398
JP4399
JP4400
JP4401
JP4402
JP4403
JP4404
JP4405
JP4406
JP4407
JP4408
JP4409
JP4410
JP4411
JP4412
JP4413
JP4414
JP4415
JP4416
JP4417
JP4418
JP4419
JP4420
JP4421
JP4422
JP4423
JP4424
JP4425
JP4426
JP4427
JP4428
JP4429
JP4430
JP4431
JP4432
JP4433
JP4434
JP4435
JP4436
JP4437
JP4438
JP4439
JP4440
JP4441
JP4442
JP4443
JP4444
JP4445
JP4446
JP4447
JP4448
JP4449
JP4450
JP4451
JP4452
JP4453
JP4454
JP4455
JP4456
JP4457
JP4458
JP4459
JP4460
JP4461
JP4462
JP4463
JP4464
JP4465
JP4466
JP4467
JP4468
JP4469
JP4470
JP4471
JP4472
JP4473
JP4474
JP4475
JP4476
JP4477
JP4478
JP4479
JP4480
JP4481
JP4482
JP4483
JP4484
JP4485
JP4486
JP4487
JP4488
JP4489
JP4490
JP4491
JP4492
JP4493
JP4494
JP4495
JP4496
JP4497
JP4498
JP4499
JP4500
JP4501
JP4502
JP4503
JP4504
JP4505
JP4506
JP4507
JP4508
JP4509
JP4510
JP4511
JP4512
JP4513
JP4514
JP4515
JP4516
JP4517
JP4518
JP4519
JP4520
JP4521
JP4522
JP4523
JP4524
JP4525
JP4526
JP4527
JP4528
JP4529
JP4530
JP4531
JP4532
JP4533
JP4534
JP4535
JP4536
JP4537
JP4538
JP4539
JP4540
JP4541
JP4542
JP4543
JP4544
JP4545
JP4546
JP4547
JP4548
JP4549
JP4550
JP4551
JP4552
JP4553
JP4554
JP4555
JP4556
JP4557
JP4558
JP4559
JP4560
JP4561
JP4562
JP4563
JP4564
JP4565
JP4566
JP4567
JP4568
JP4569
JP4570
JP4571
JP4572
JP4573
JP4574
JP4575
JP4576
JP4577
JP4578
JP4579
JP4580
JP4581
JP4582
JP4583
JP4584
JP4585
JP4586
JP4587
JP4588
JP4589
JP4590
JP4591
JP4592
JP4593
JP4594
JP4595
JP4596
JP4597
JP4598
JP4599
JP4600
JP4601
JP4602
JP4603
JP4604
JP4605
JP4606
JP4607
JP4608
JP4609
JP4610
JP4611
JP4612
JP4613
JP4614
JP4615
JP4616
JP4617
JP4618
JP4619
JP4620
JP4621
JP4622
JP4623
JP4624
JP4625
JP4626
JP4627
JP4628
JP4629
JP4630
JP4631
JP4632
JP4633
JP4634
JP4635
JP4636
JP4637
JP4638
JP4639
JP4640
JP4641
JP4642
JP4643
JP4644
JP4645
JP4646
JP4647
JP4648
JP4649
JP4650
JP4651
JP4652
JP4653
JP4654
JP4655
JP4656
JP4657
JP4658
JP4659
JP4660
JP4661
JP4662
JP4663
JP4664
JP4665
JP4666
JP4667
JP4668
JP4669
JP4670
JP4671
JP4672
JP4673
JP4674
JP4675
JP4676
JP4677
JP4678
JP4679
JP4680
JP4681
JP4682
JP4683
JP4684
JP4685
JP4686
JP4687
JP4688
JP4689
JP4690
JP4691
JP4692
JP4693
JP4694
JP4695
JP4696
JP4697
JP4698
JP4699
JP4700
JP4701
JP4702
JP4703
JP4704
JP4705
JP4706
JP4707
JP4708
JP4709
JP4710
JP4711
JP4712
JP4713
JP4714
JP4715
JP4716
JP4717
JP4718
JP4719
JP4720
JP4721
JP4722
JP4723
JP4724
JP4725
JP4726
JP4727
JP4728
JP4729
JP4730
JP4731
JP4732
JP4733
JP4734
JP4735
JP4736
JP4737
JP4738
JP4739
JP4740
JP4741
JP4742
JP4743
JP4744
JP4745
JP4746
JP4747
JP4748
JP4749
JP4750
JP4751
JP4752
JP4753
JP4754
JP4755
JP4756
JP4757
JP4758
JP4759
JP4760
JP4761
JP4762
JP4763
JP4764
JP4765
JP4766
JP4767
JP4768
JP4769
JP4770
JP4771
JP4772
JP4773
JP4774
JP4775
JP4776
JP4777
JP4778
JP4779
JP4780
JP4781
JP4782
JP4783
JP4784
JP4785
JP4786
JP4787
JP4788
JP4789
JP4790
JP4791
JP4792
JP4793
JP4794
JP4795
JP4796
JP4797
JP4798
JP4799
JP4800
JP4801
JP4802
JP4803
JP4804
JP4805
JP4806
JP4807
JP4808
JP4809
JP4810
JP4811
JP4812
JP4813
JP4814
JP4815
JP4816
JP4817
JP4818
JP4819
JP4820
JP4821
JP4822
JP4823
JP4824
JP4825
JP4826
JP4827
JP4828
JP4829
JP4830
JP4831
JP4832
JP4833
JP4834
JP4835
JP4836
JP4837
JP4838
JP4839
JP4840
JP4841
JP4842
JP4843
JP4844
JP4845
JP4846
JP4847
JP4848
JP4849
JP4850
JP4851
JP4852
JP4853
JP4854
JP4855
JP4856
JP4857
JP4858
JP4859
JP4860
JP4861
JP4862
JP4863
JP4864
JP4865
JP4866
JP4867
JP4868
JP4869
JP4870
JP4871
JP4872
JP4873
JP4874
JP4875
JP4876
JP4877
JP4878
JP4879
JP4880
JP4881
JP4882
JP4883
JP4884
JP4885
JP4886
JP4887
JP4888
JP4889
JP4890
JP4891
JP4892
JP4893
JP4894
JP4895
JP4896
JP4897
JP4898
JP4899
JP4900
JP4901
JP4902
JP4903
JP4904
JP4905
JP4906
JP4907
JP4908
JP4909
JP4910
JP4911
JP4912
JP4913
JP4914
JP4915
JP4916
JP4917
JP4918
JP4919
JP4920
JP4921
JP4922
JP4923
JP4924
JP4925
JP4926
JP4927
JP4928
JP4929
JP4930
JP4931
JP4932
JP4933
JP4934
JP4935
JP4936
JP4937
JP4938
JP4939
JP4940
JP4941
JP4942
JP4943
JP4944
JP4945
JP4946
JP4947
JP4948
JP4949
JP4950
JP4951
JP4952
JP4953
JP4954
JP4955
JP4956
JP4957
JP4958
JP4959
JP4960
JP4961
JP4962
JP4963
JP4964
JP4965
JP4966
JP4967
JP4968
JP4969
JP4970
JP4971
JP4972
JP4973
JP4974
JP4975
JP4976
JP4977
JP4978
JP4979
JP4980
JP4981
JP4982
JP4983
JP4984
JP4985
JP4986
JP4987
JP4988
JP4989
JP4990
JP4991
JP4992
JP4993
JP4994
JP4995
JP4996
JP4997
JP4998
JP4999
JP5000
JP5001
JP5002
JP5003
JP5004
JP5005
JP5006
JP5007
JP5008
JP5009
JP5010
JP5011
JP5012
JP5013
JP5014
JP5015
JP5016
JP5017
JP5018
JP5019
JP5020
JP5021
JP5022
JP5023
JP5024
JP5025
JP5026
JP5027
JP5028
JP5029
JP5030
JP5031
JP5032
JP5033
JP5034
JP5035
JP5036
JP5037
JP5038
JP5039
JP5040
JP5041
JP5042
JP5043
JP5044
JP5045
JP5046
JP5047
JP5048
JP5049
JP5050
JP5051
JP5052
JP5053
JP5054
JP5055
JP5056
JP5057
JP5058
JP5059
JP5060
JP5061
JP5062
JP5063
JP5064
JP5065
JP5066
JP5067
JP5068
JP5069
JP5070
JP5071
JP5072
JP5073
JP5074
JP5075
JP5076
JP5077
JP5078
JP5079
JP5080
JP5081
JP5082
JP5083
JP5084
JP5085
JP5086
JP5087
JP5088
JP5089
JP5090
JP5091
JP5092
JP5093
JP5094
JP5095
JP5096
JP5097
JP5098
JP5099
JP5100
JP5101
JP5102
JP5103
JP5104
JP5105
JP5106
JP5107
JP5108
JP5109
JP5110
JP5111
JP5112
JP5113
JP5114
JP5115
JP5116
JP5117
JP5118
JP5119
JP5120
JP5121
JP5122
JP5123
JP5124
JP5125
JP5126
JP5127
JP5128
JP5129
JP5130
JP5131
JP5132
JP5133
JP5134
JP5135
JP5136
JP5137
JP5138
JP5139
JP5140
JP5141
JP5142
JP5143
JP5144
JP5145
JP5146
JP5147
JP5148
JP5149
JP5150
JP5151
JP5152
JP5153
JP5154
JP5155
JP5156
JP5157
JP5158
JP5159
JP5160
JP5161
JP5162
JP5163
JP5164
JP5165
JP5166
JP5167
JP5168
JP5169


Cathode 1, Anode 2

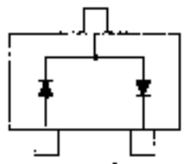

Anode 1 Cathode 2

1SS226 (C3)
(D2009)


Cathode 2
Cathode 1 Cathode 3

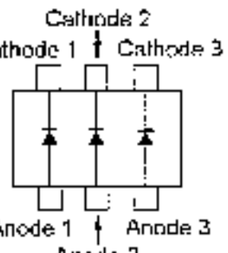

Anode 1 Anode 3
Anode 2

IMN10 (N10)
(D2021)


Cathode 1,2

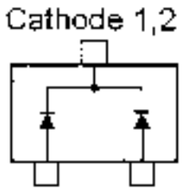

Anode 1 Anode 2

HSM2838 (A6)
(D2026)


Source

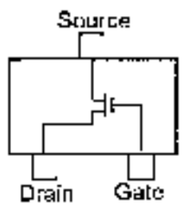

Drain Gate

2SK302Y (TY)
(Q2038)


Collector

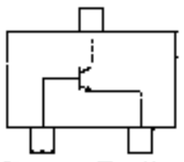

Base Emitter

2SC2714Y (QY)
(Q2037,2056)
2SC2812 (L6)
(Q2014,2054,2055
2059,2066,2068)


Collector

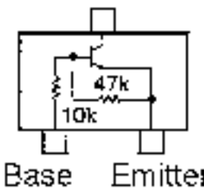

Base Emitter


2SC4047 (ZY)
(Q2039,2043,2051,2058
2064,2067,2069)

Collector

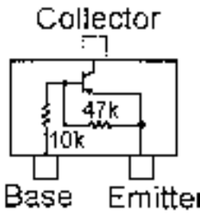

Base Emitter


2SA1563 (RL)
(Q2053)

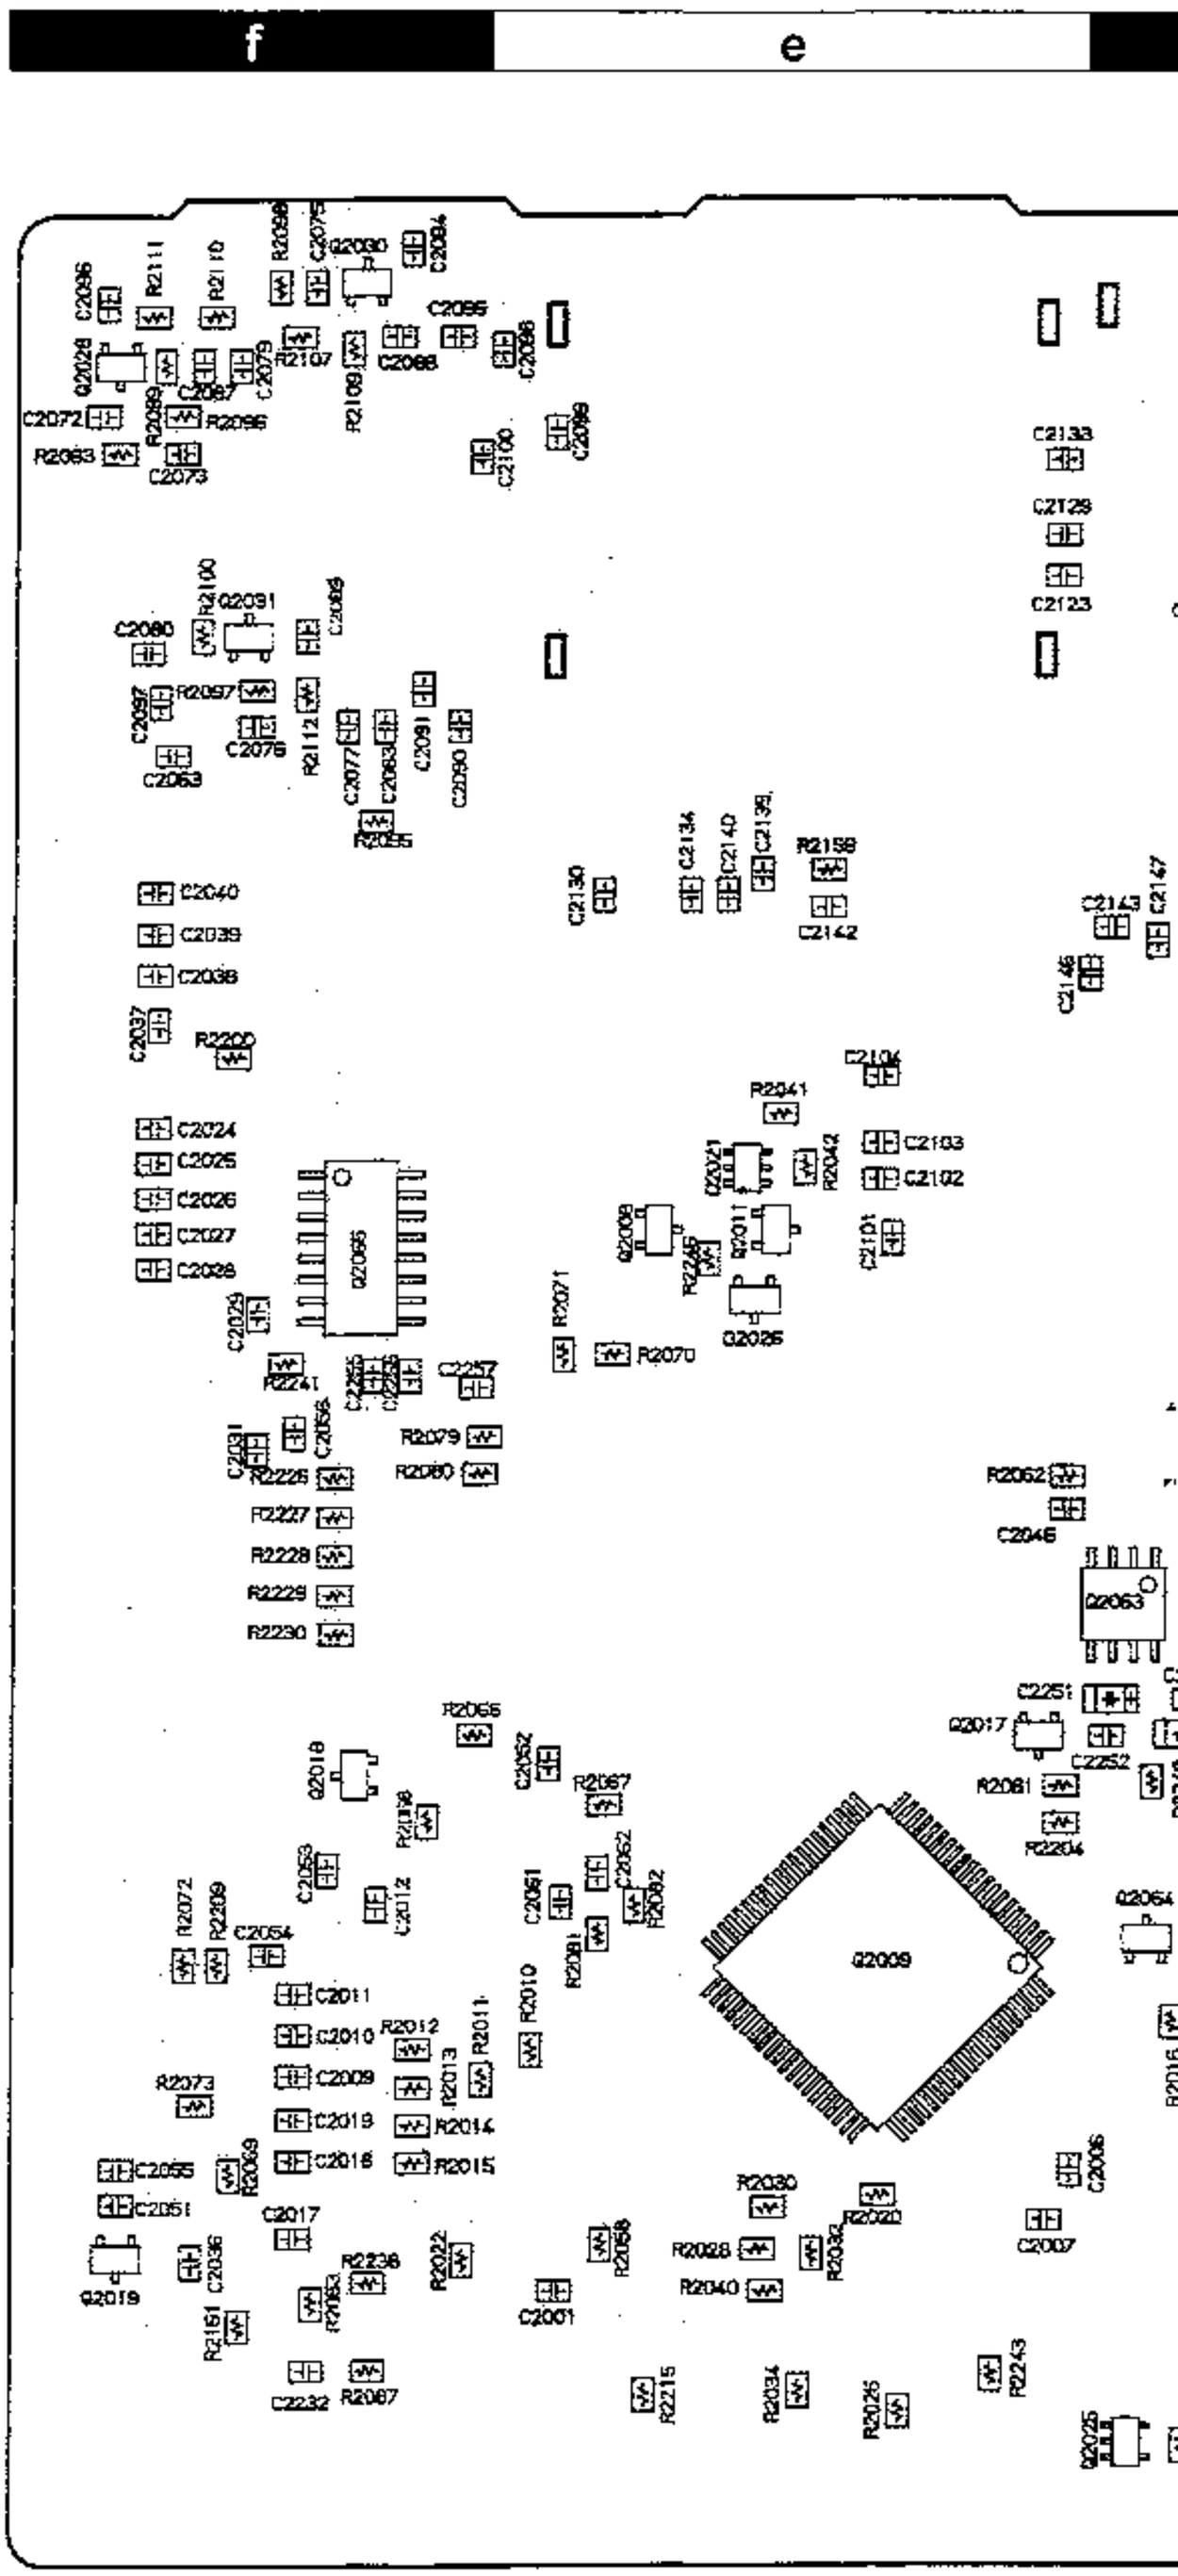


d c b a

Chip Side


Circuit Diagram

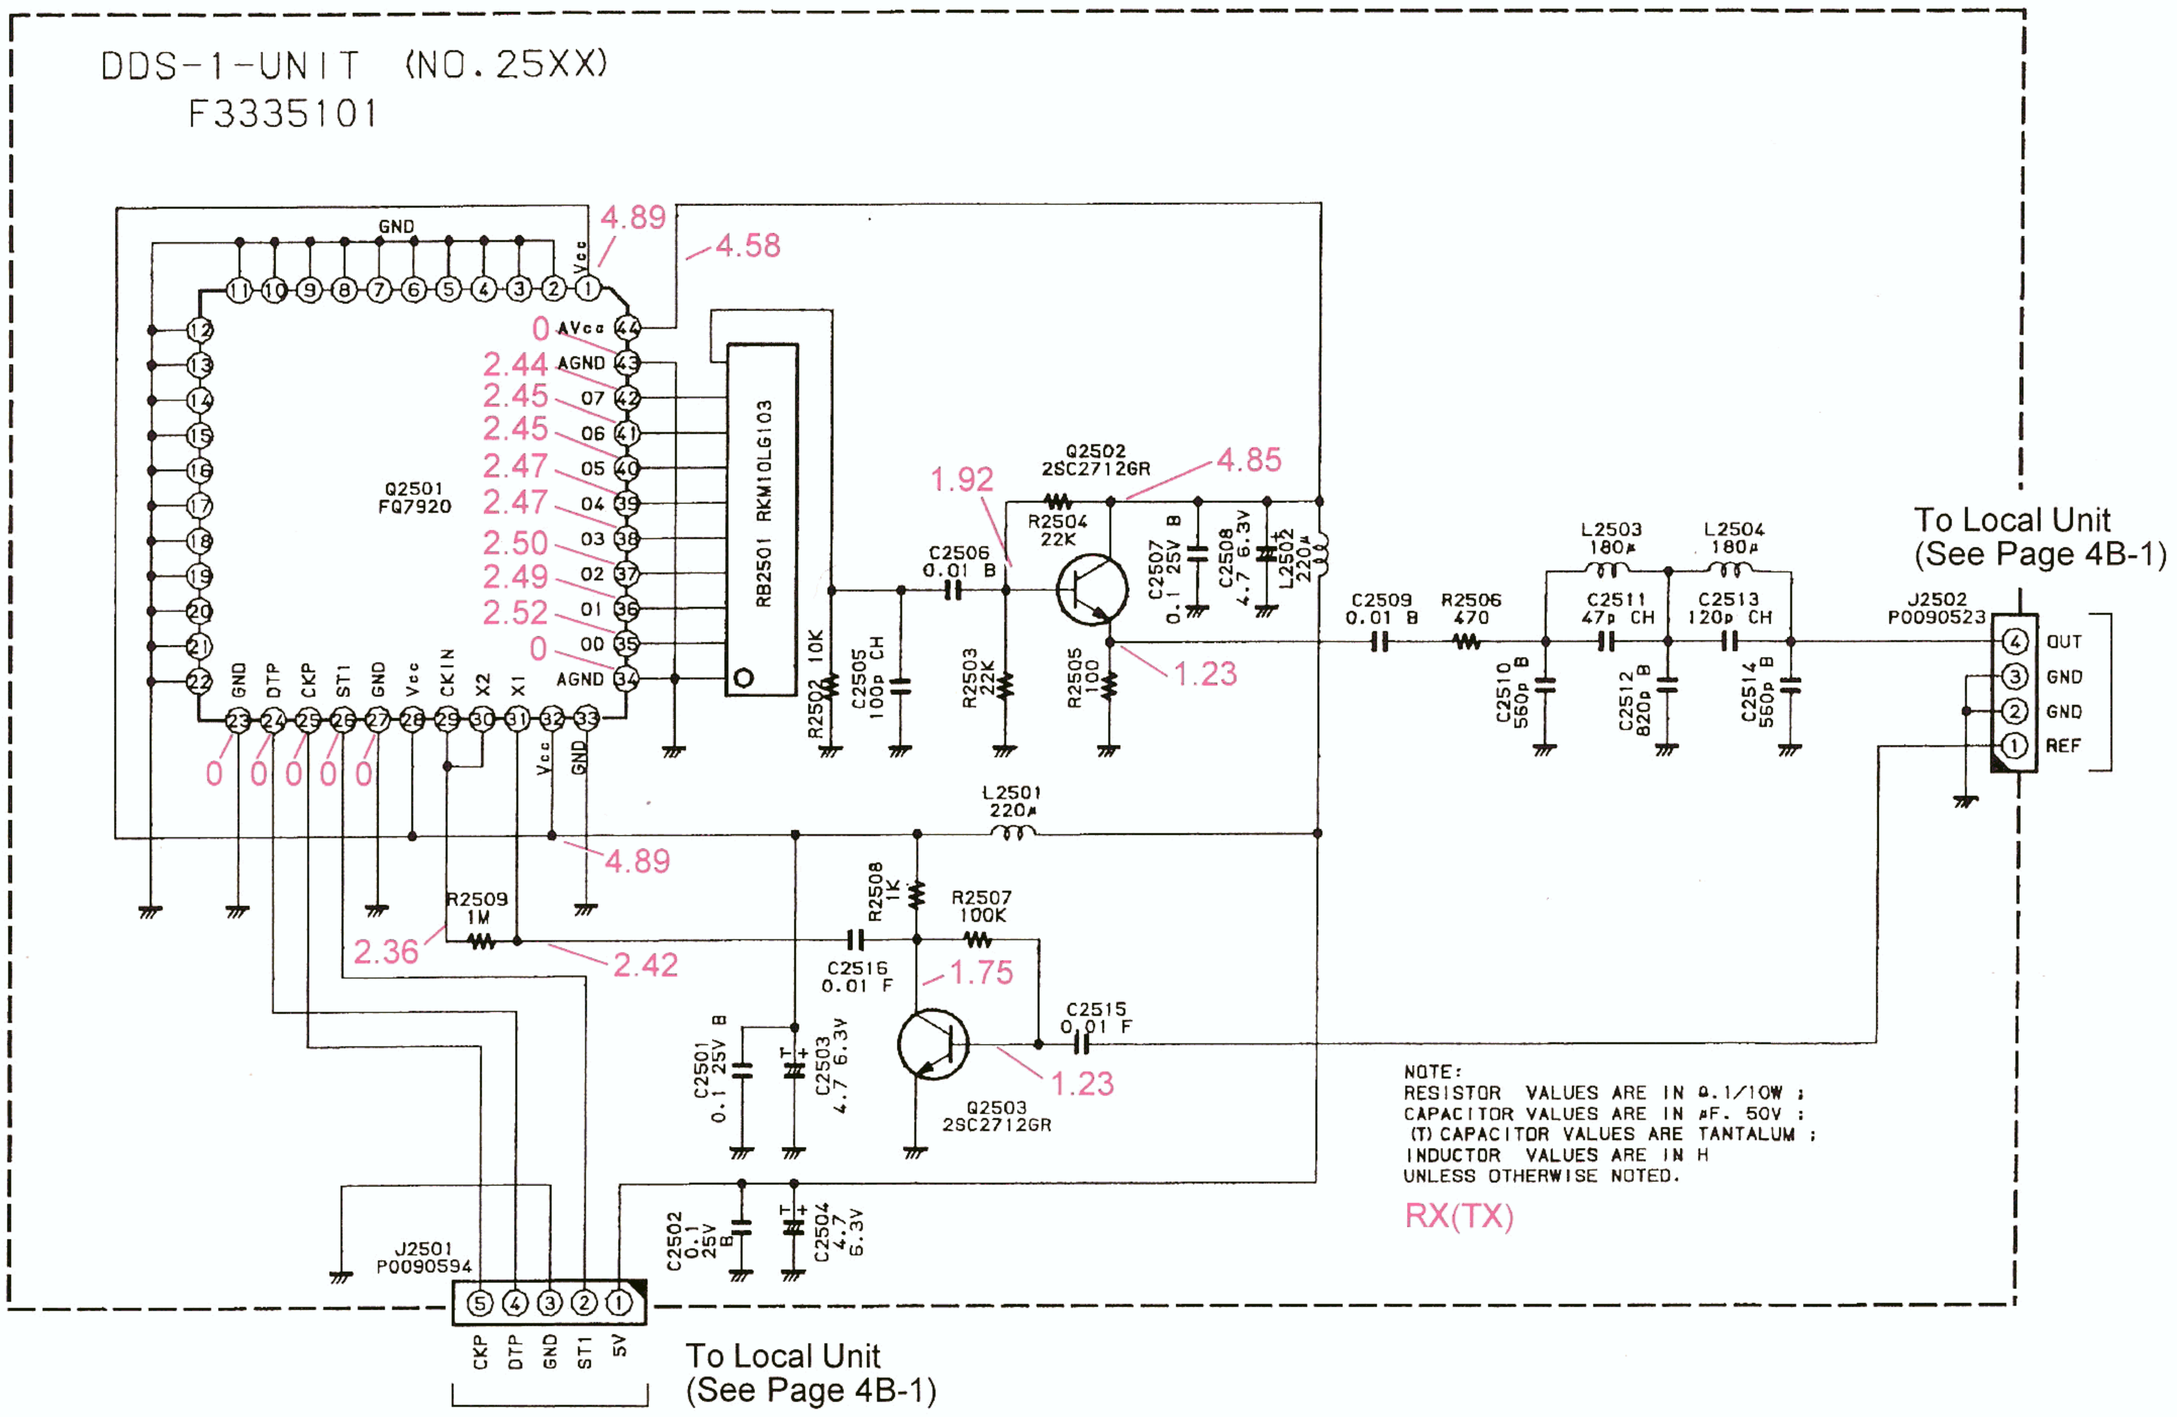


Parts Layout

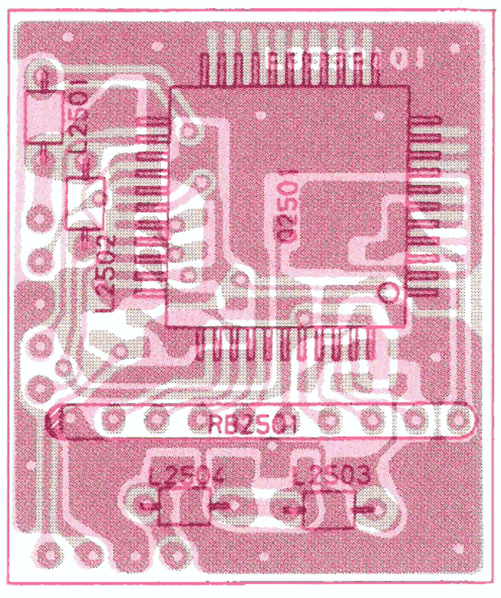


Component Side

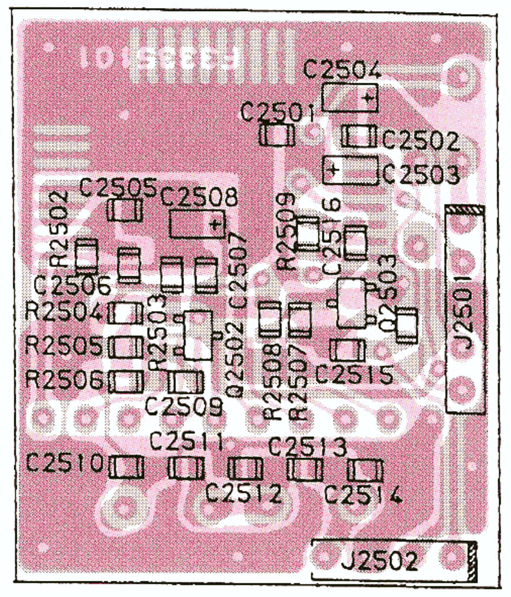

Connector Side

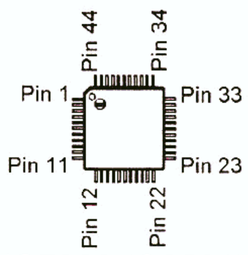


FQ7920 (Q2501)

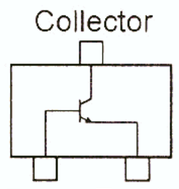


2SC2712GR (LG)
(Q2502,2503)

DDS-1 Unit (Lot. 11~)


Circuit Diagram

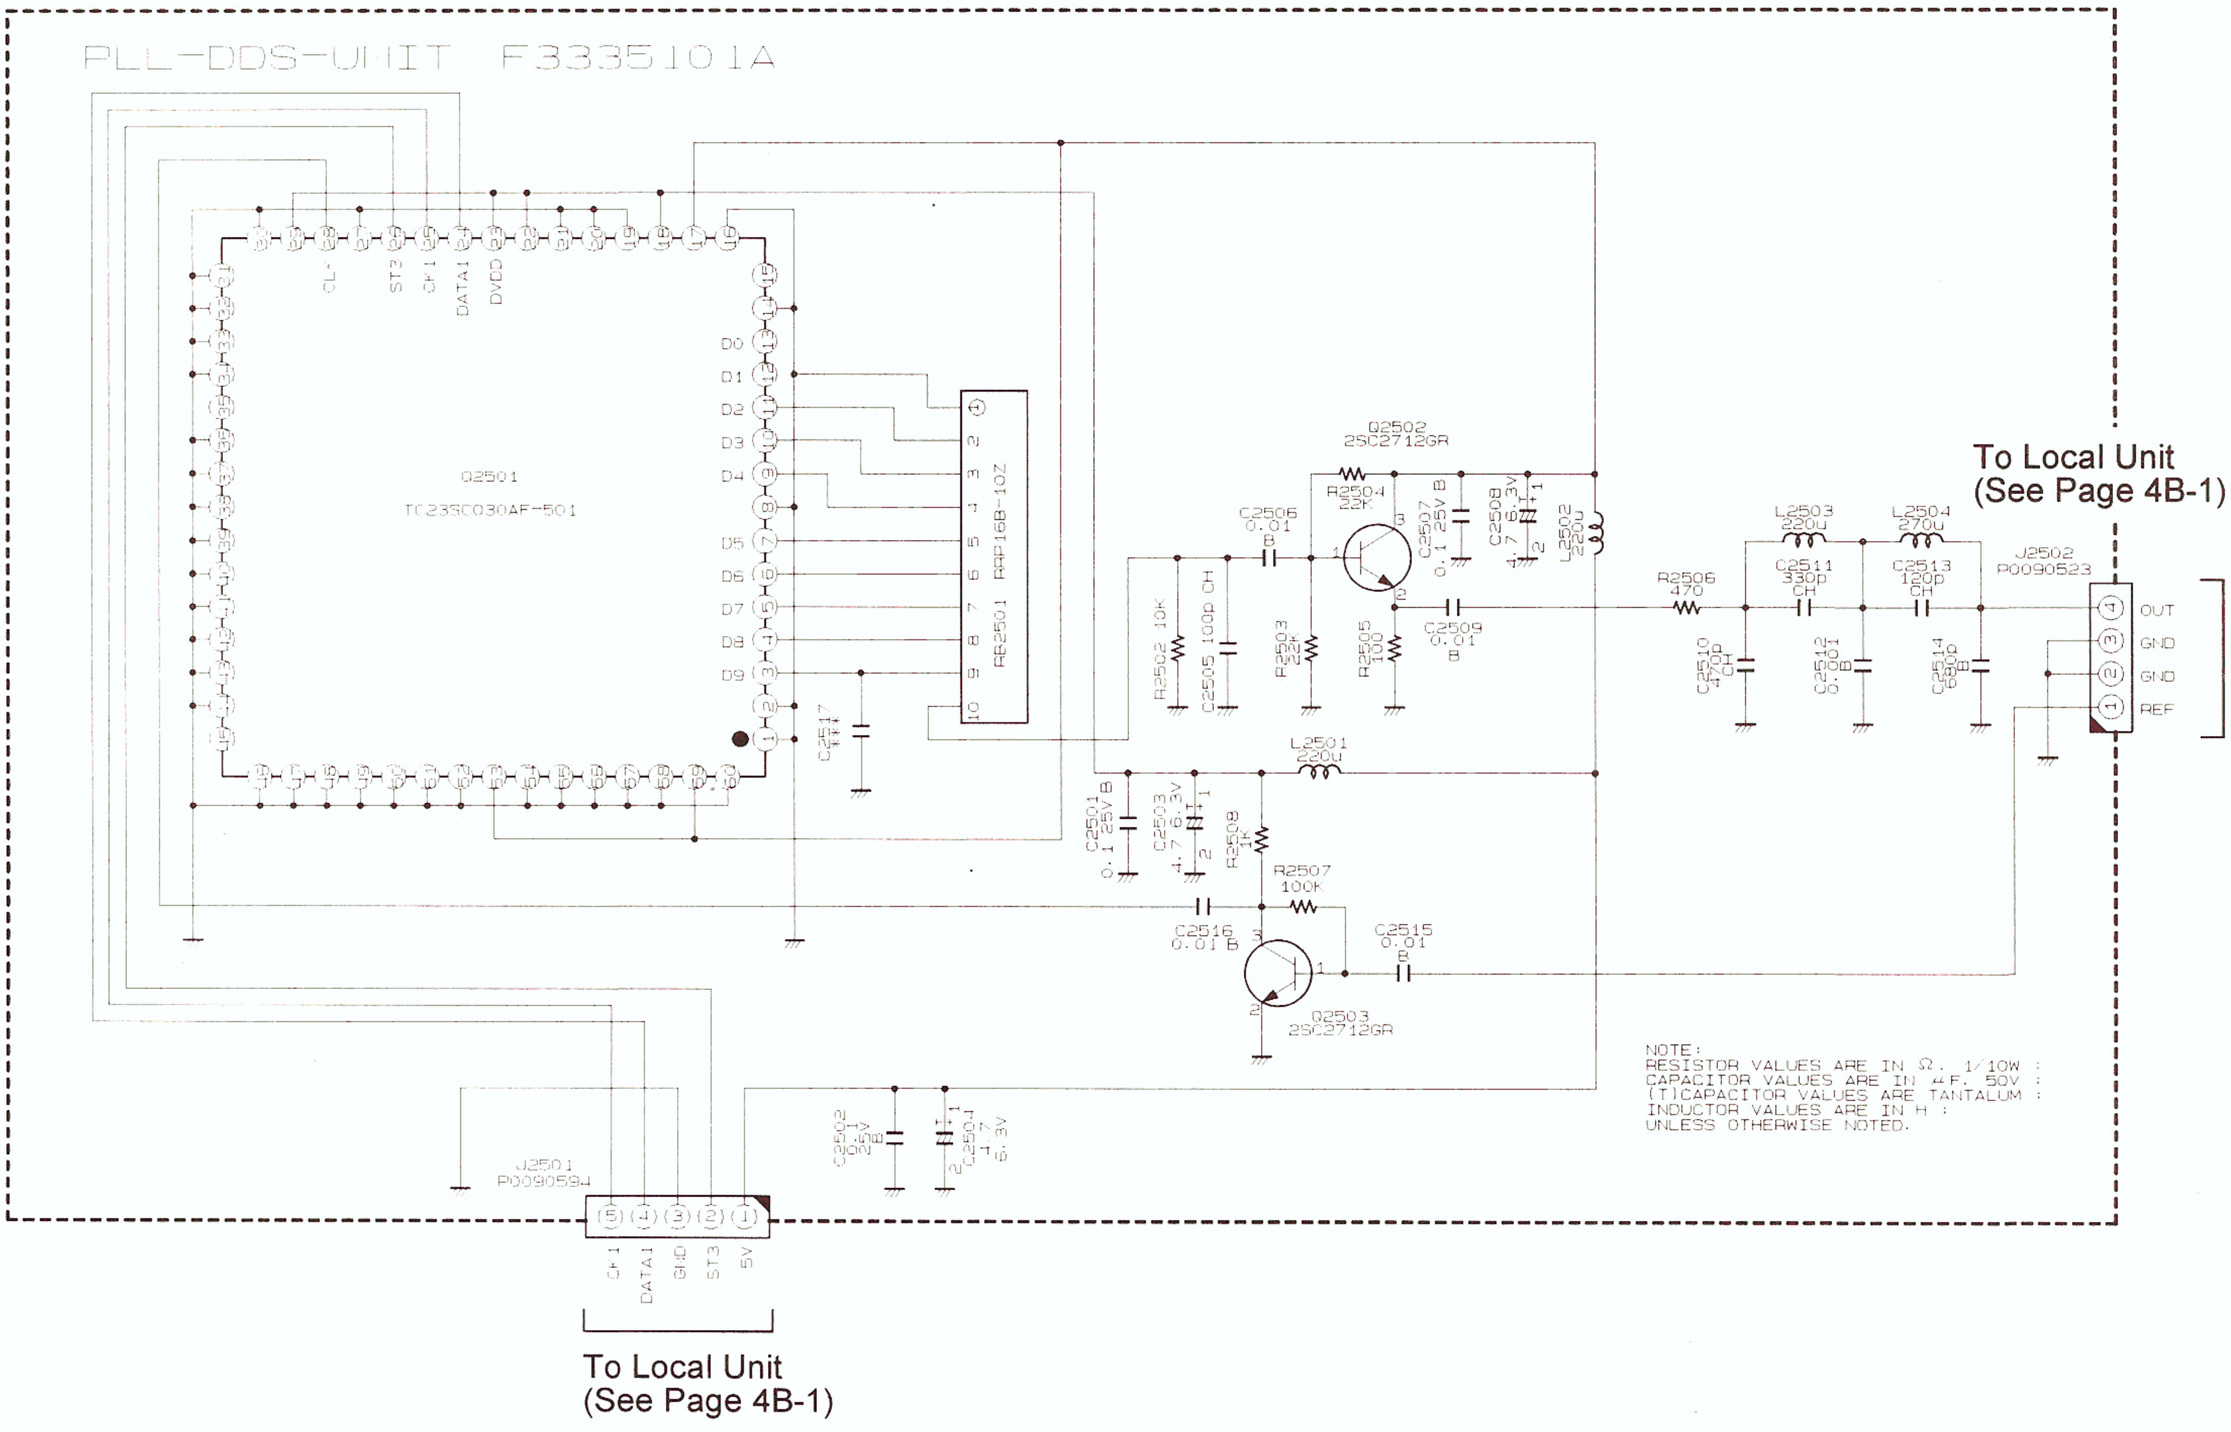


Parts Layout

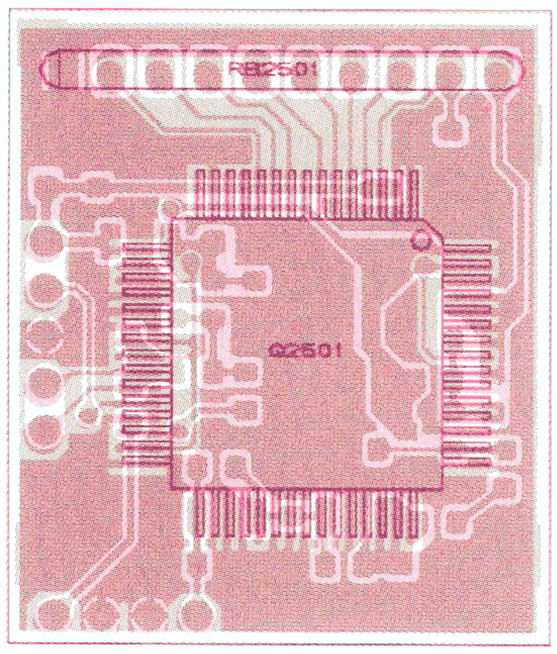


Compornent Side

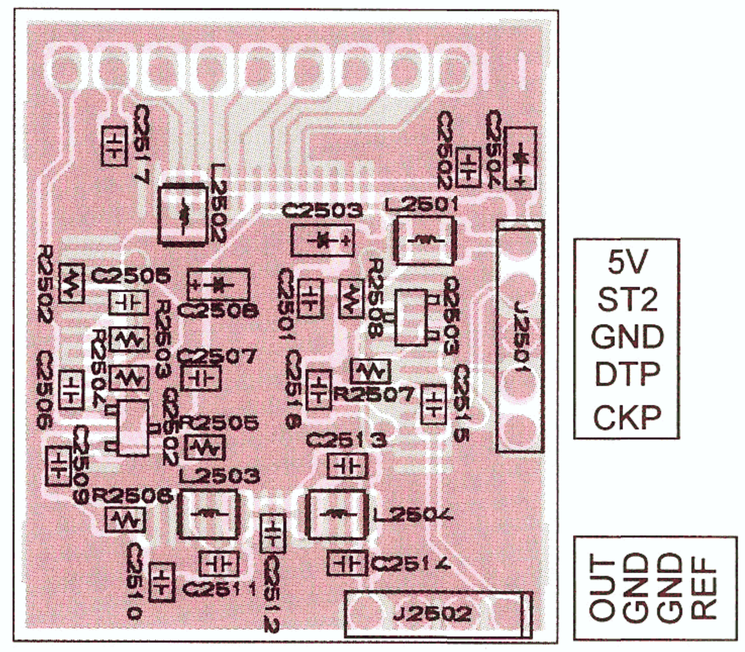

Connector Side

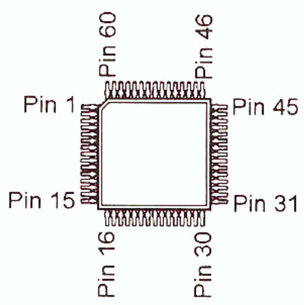


TC23SC030AF-501
(Q2501)

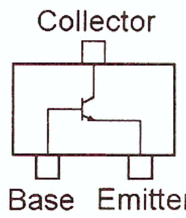


2SC2712GR (LG)
(Q2502, 2503)


Circuit Diagram

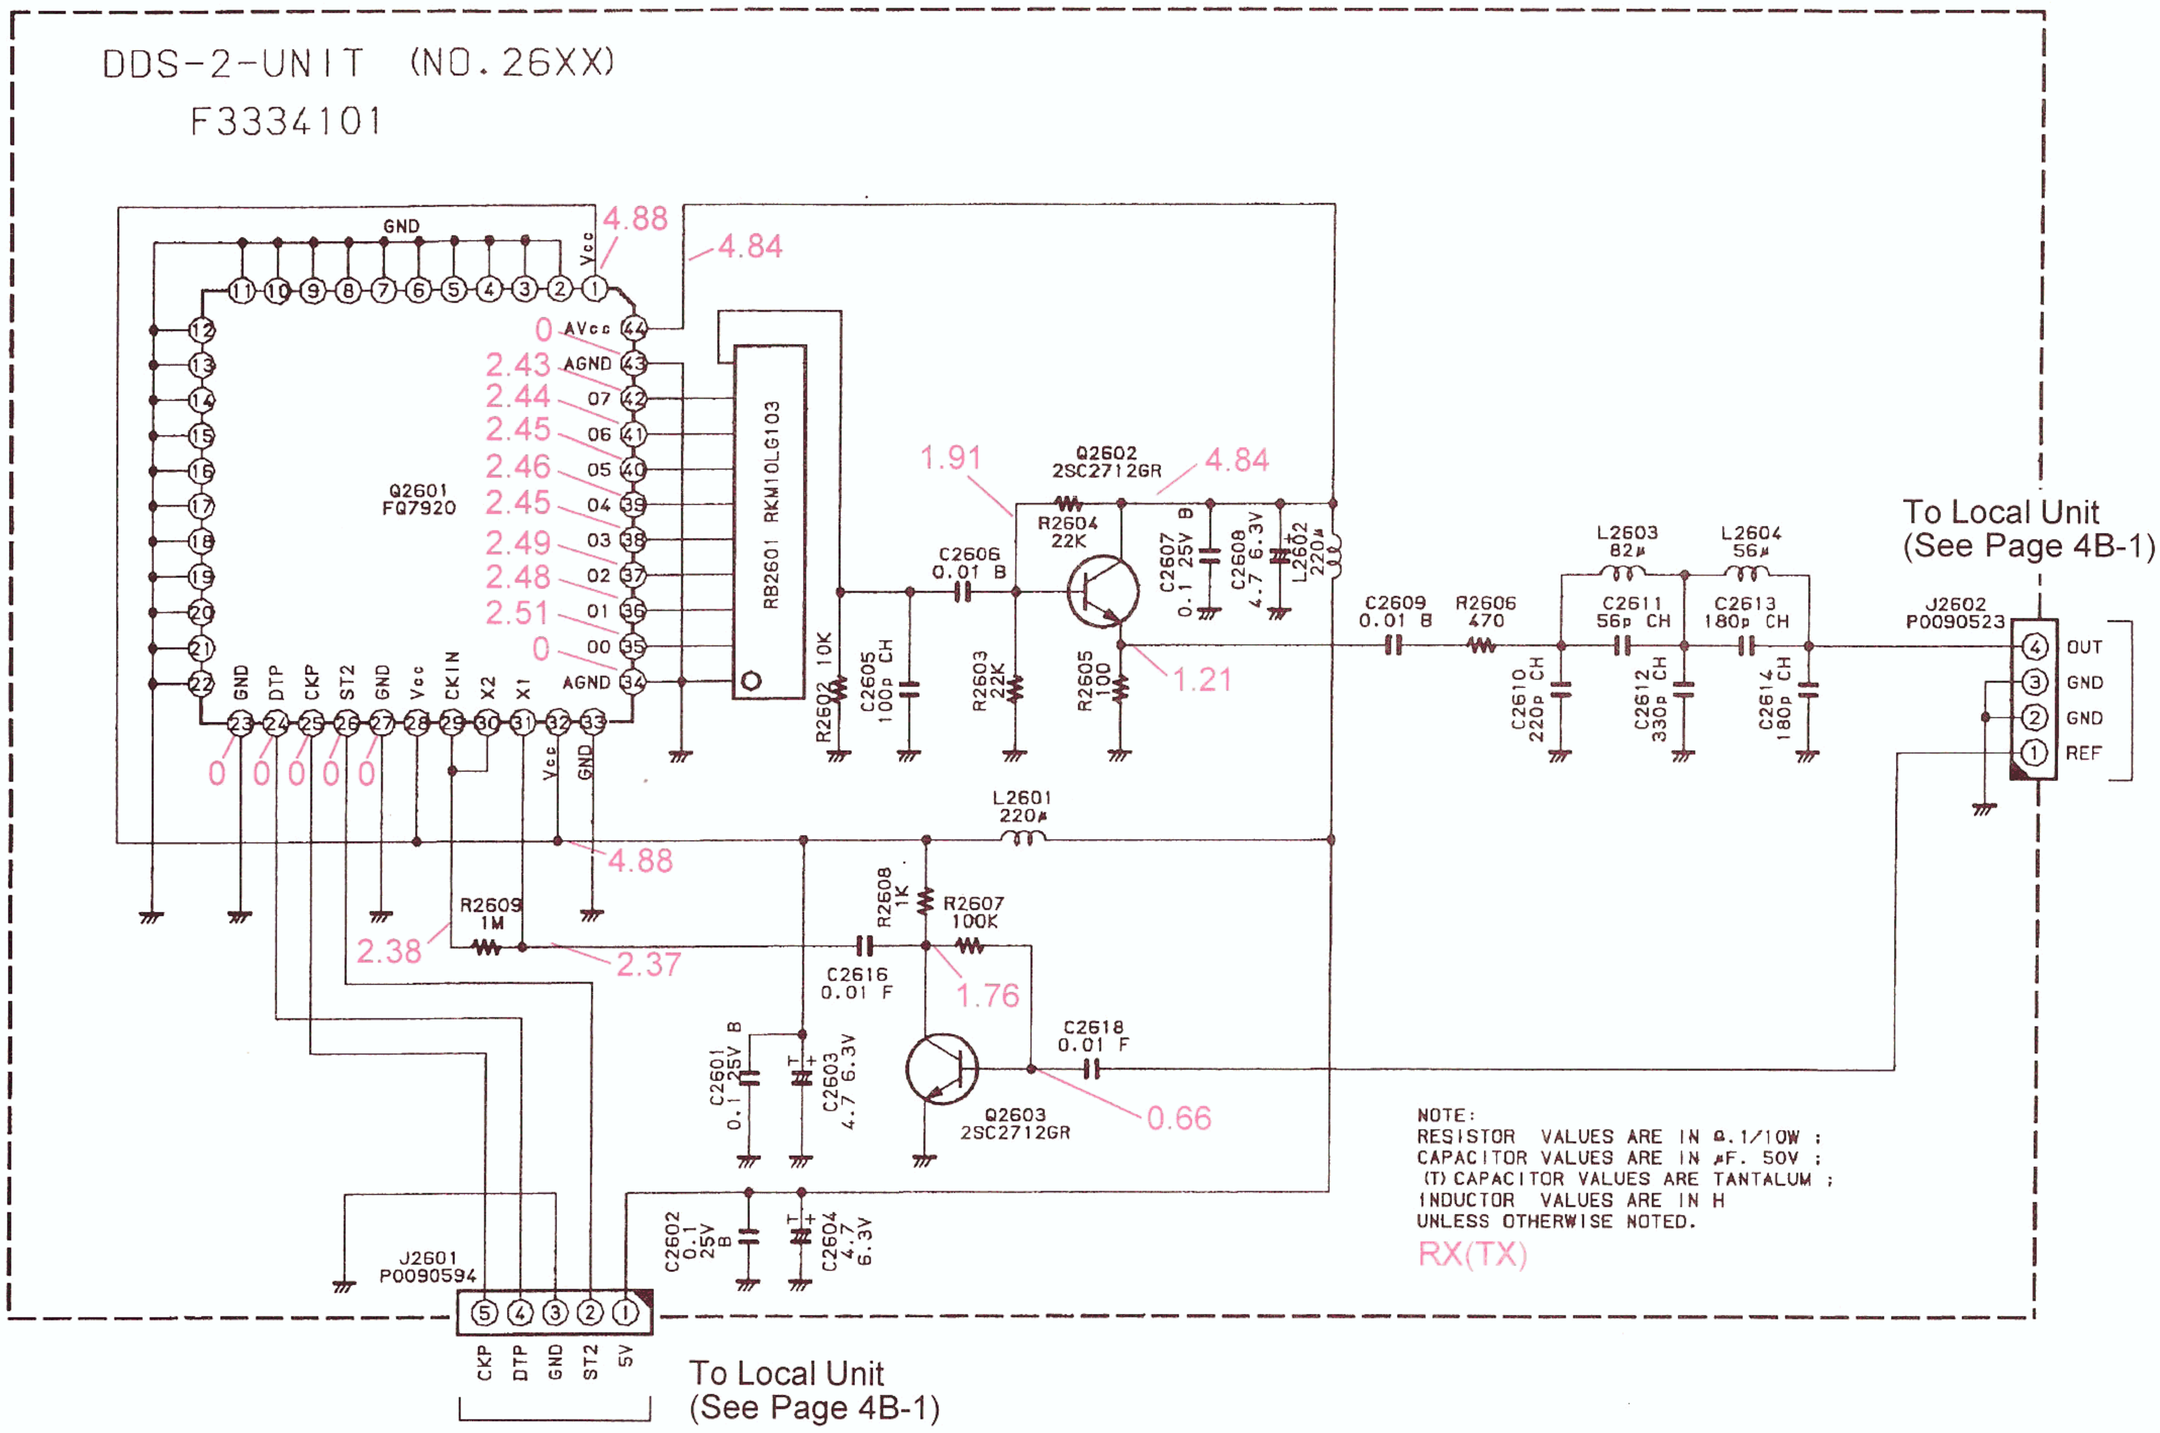


Parts Layout

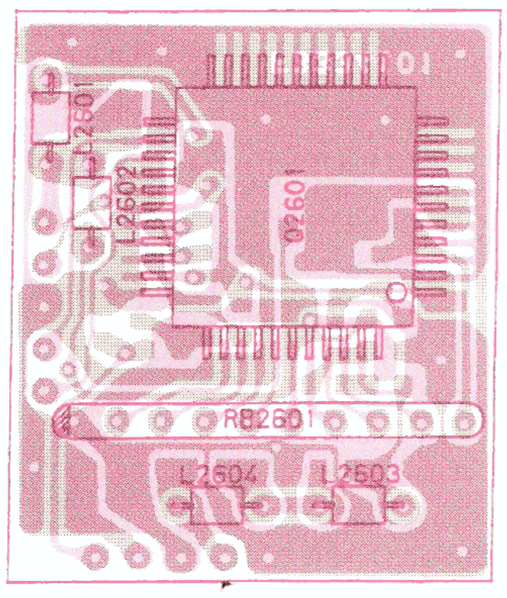


Component Side

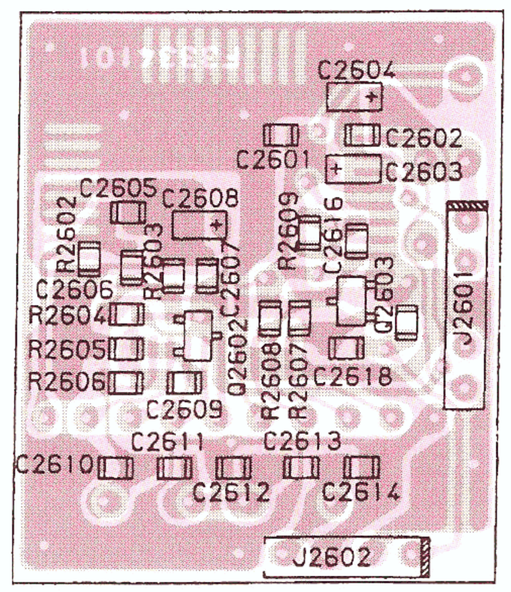

Connector Side

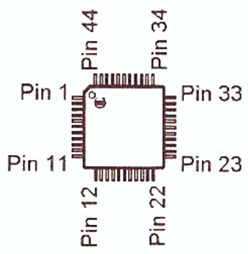


FQ7920 (Q2601)

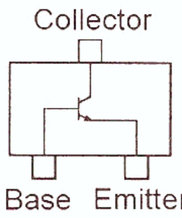


2SC2712GR (LG)
(Q2602,2603)


Circuit Diagram

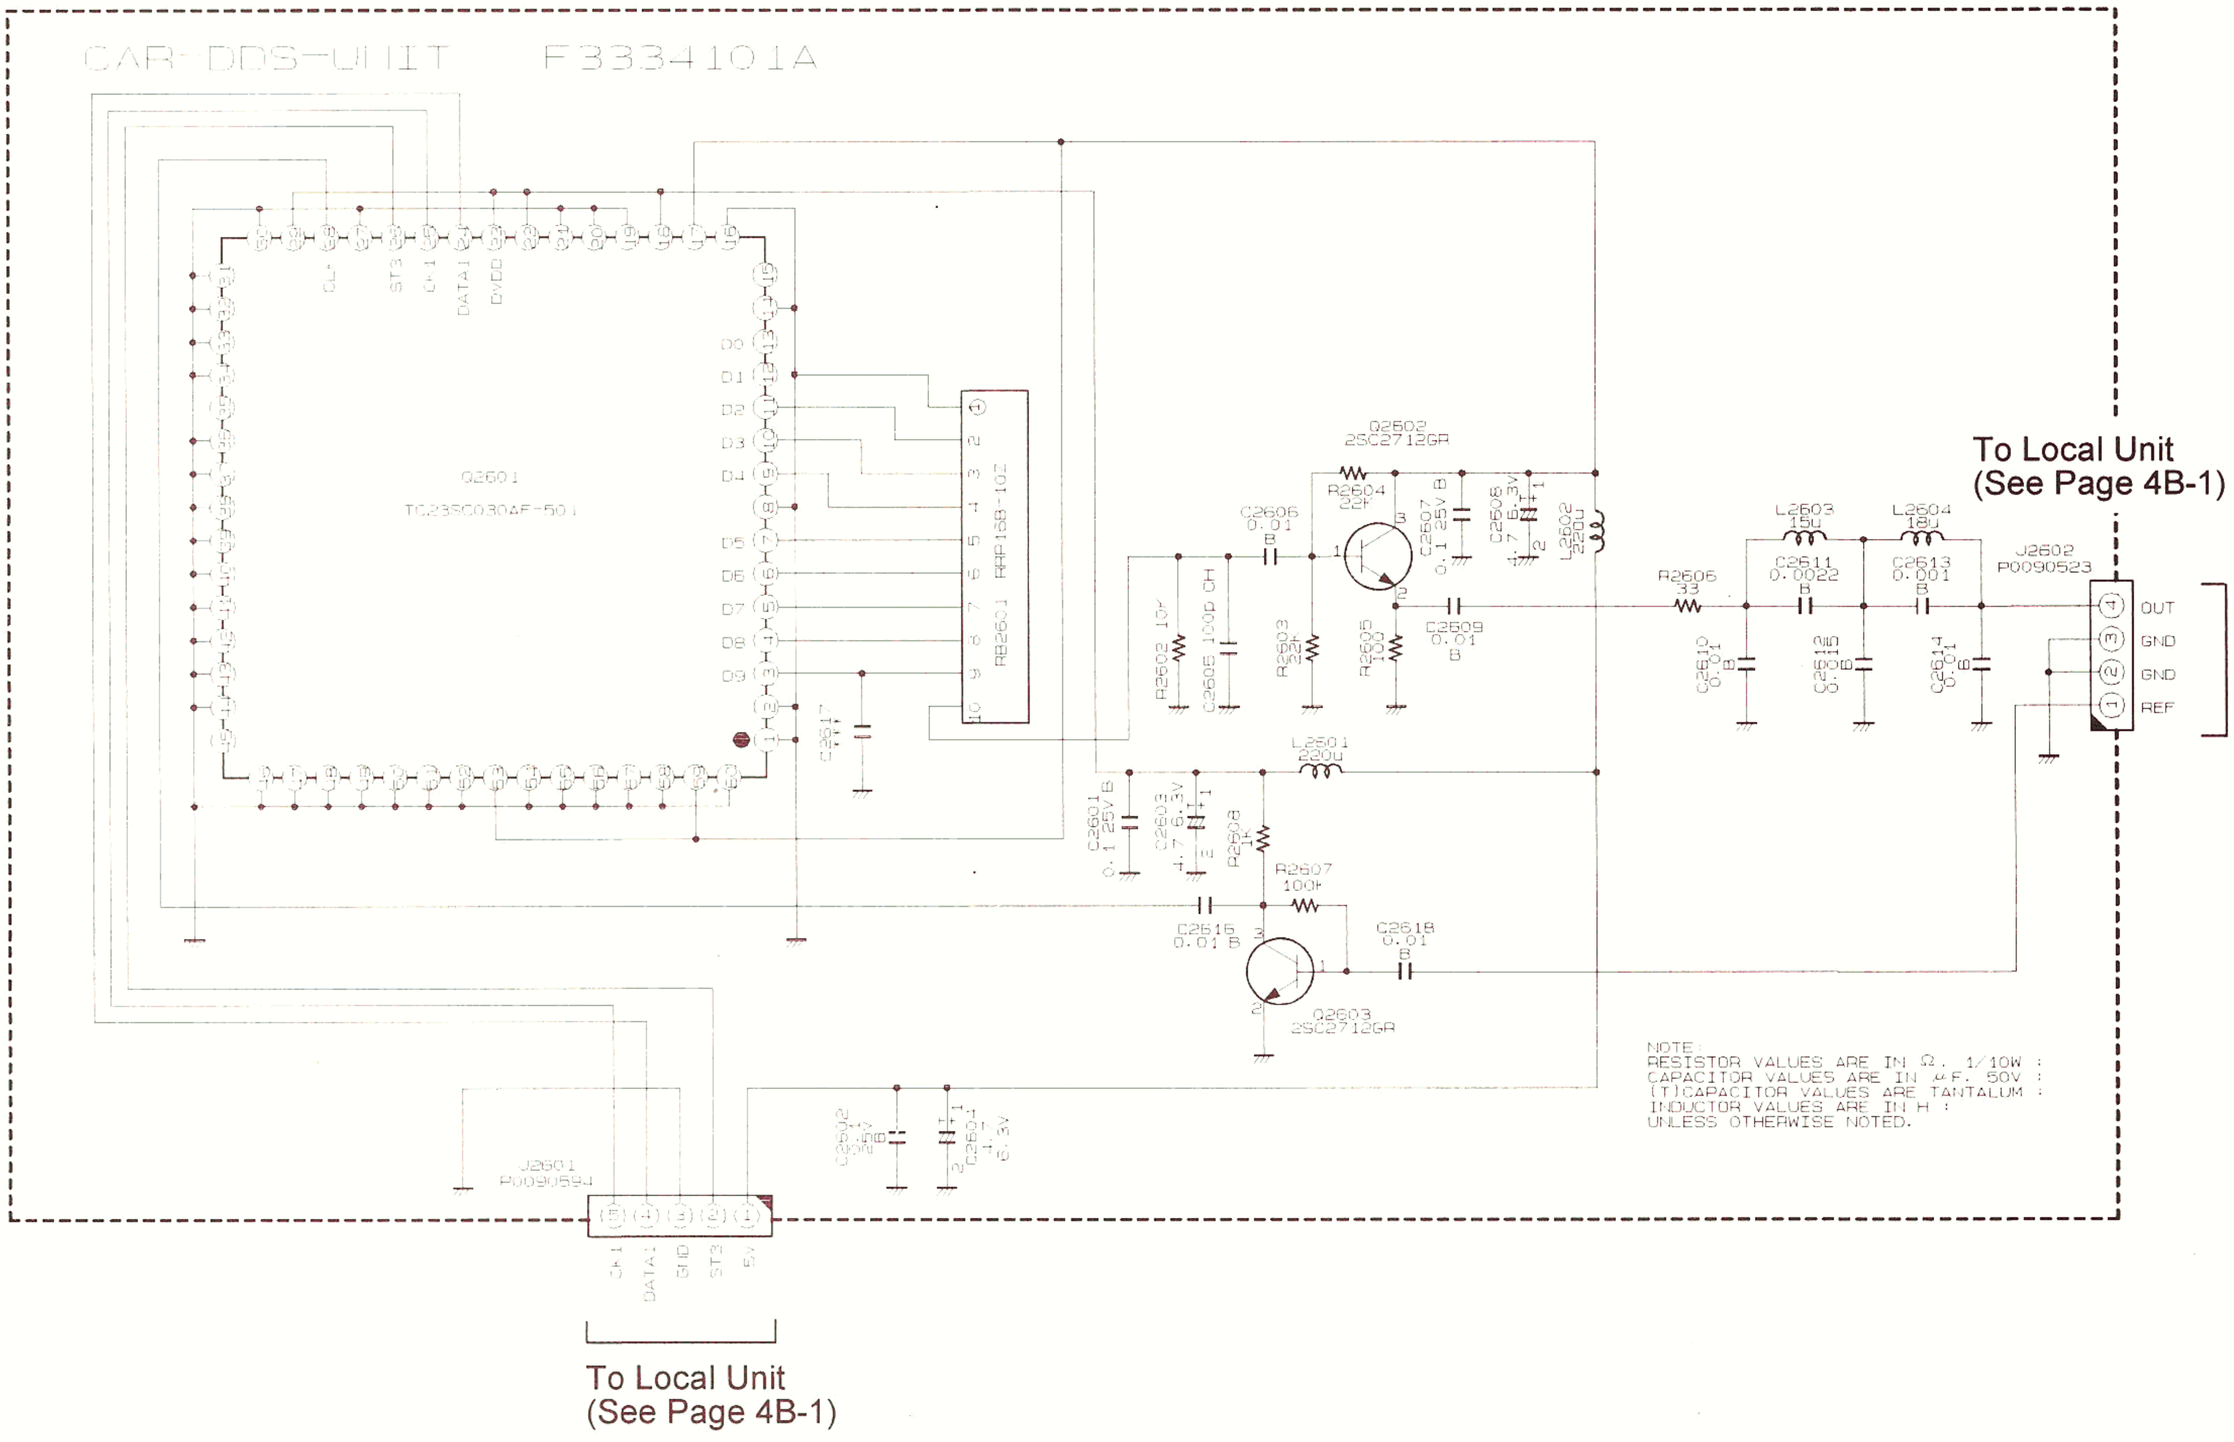


Parts Layout

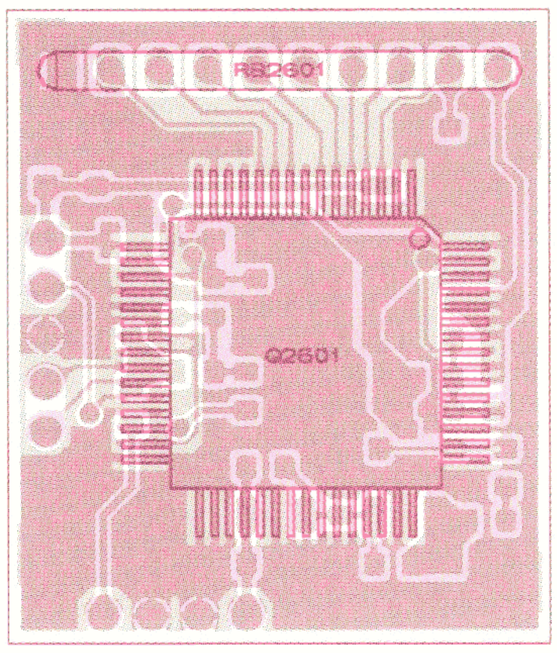


Component Side

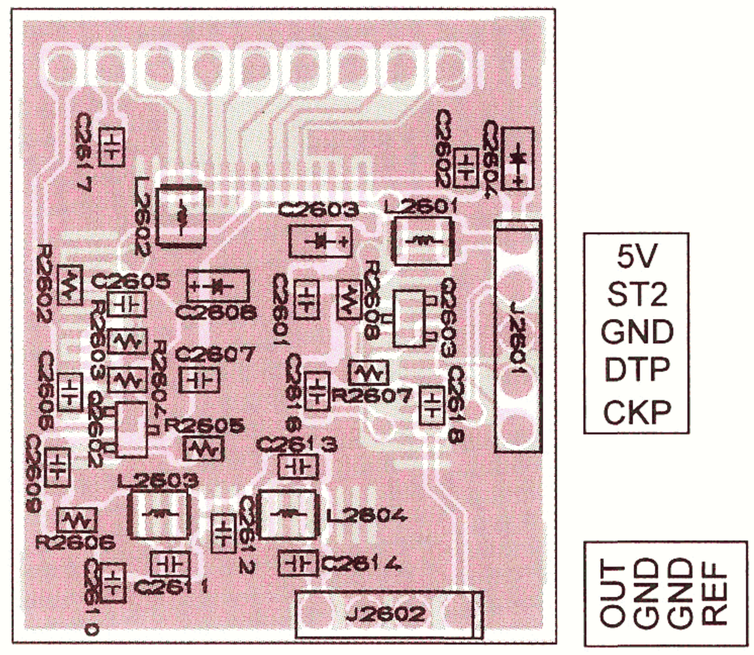

Connector Side

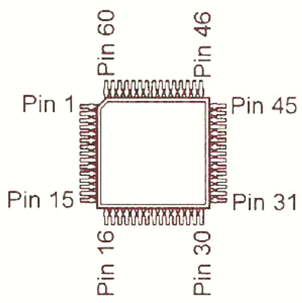


TC23SC030AF-501
(Q2601)

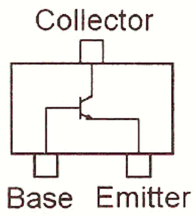

2SC2712GR (LG)
(Q2602,2603)


OSC Unit

Circuit Diagram

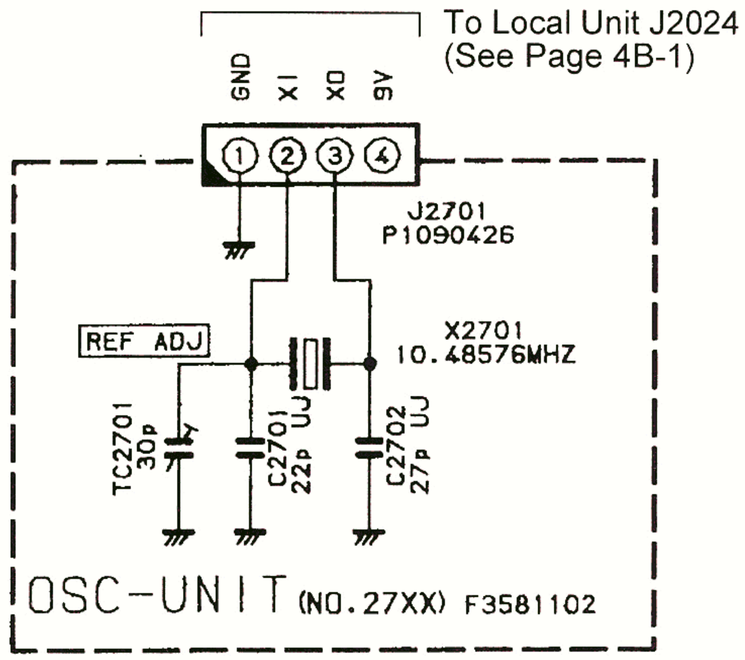


NOTE:
CAPACITOR VALUES ARE IN μF. 50V ;
UNLESS OTHERWISE NOTED.

Parts Layout

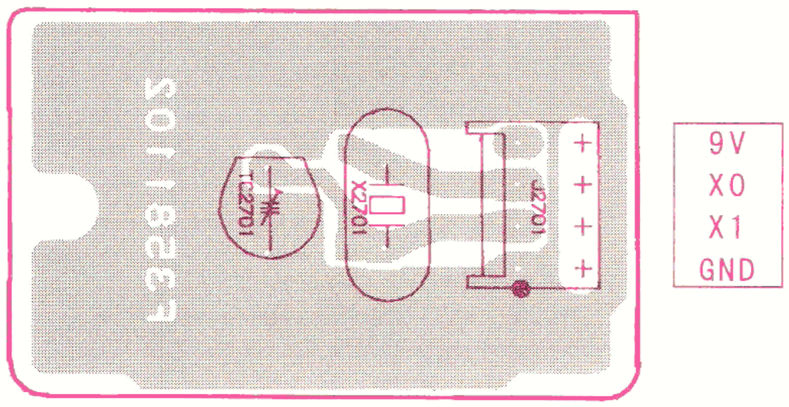


Component Side

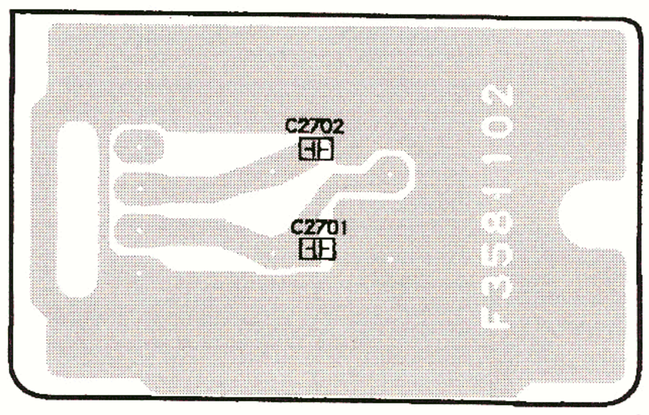

Chip Side

Parts List

REF.	DESCRIPTION	VALUE	WV	TOL.	MFGR'S DESIG	YAESU P/N	VERS.	LOT.	LAY ADR
			*** OSC UNIT ***						
	PCB with Components					CA1583001			
	Printed Circuit Board					F3581102			
C 2701	CHIP CAP.	22pF	50V	UJ	GRM40UJ220J50PT	K22170319			
C 2702	CHIP CAP.	27pF	50V	UJ	GRM40UJ270J50PT	K22170321			
J 2701	CONNECTOR				5124-04BHPB	P1090426			
TC2701	TRIMMER CAP.	30pF			VCT51F	K91000093			
X 2701	XTAL	10.48576MHz				H0102990			

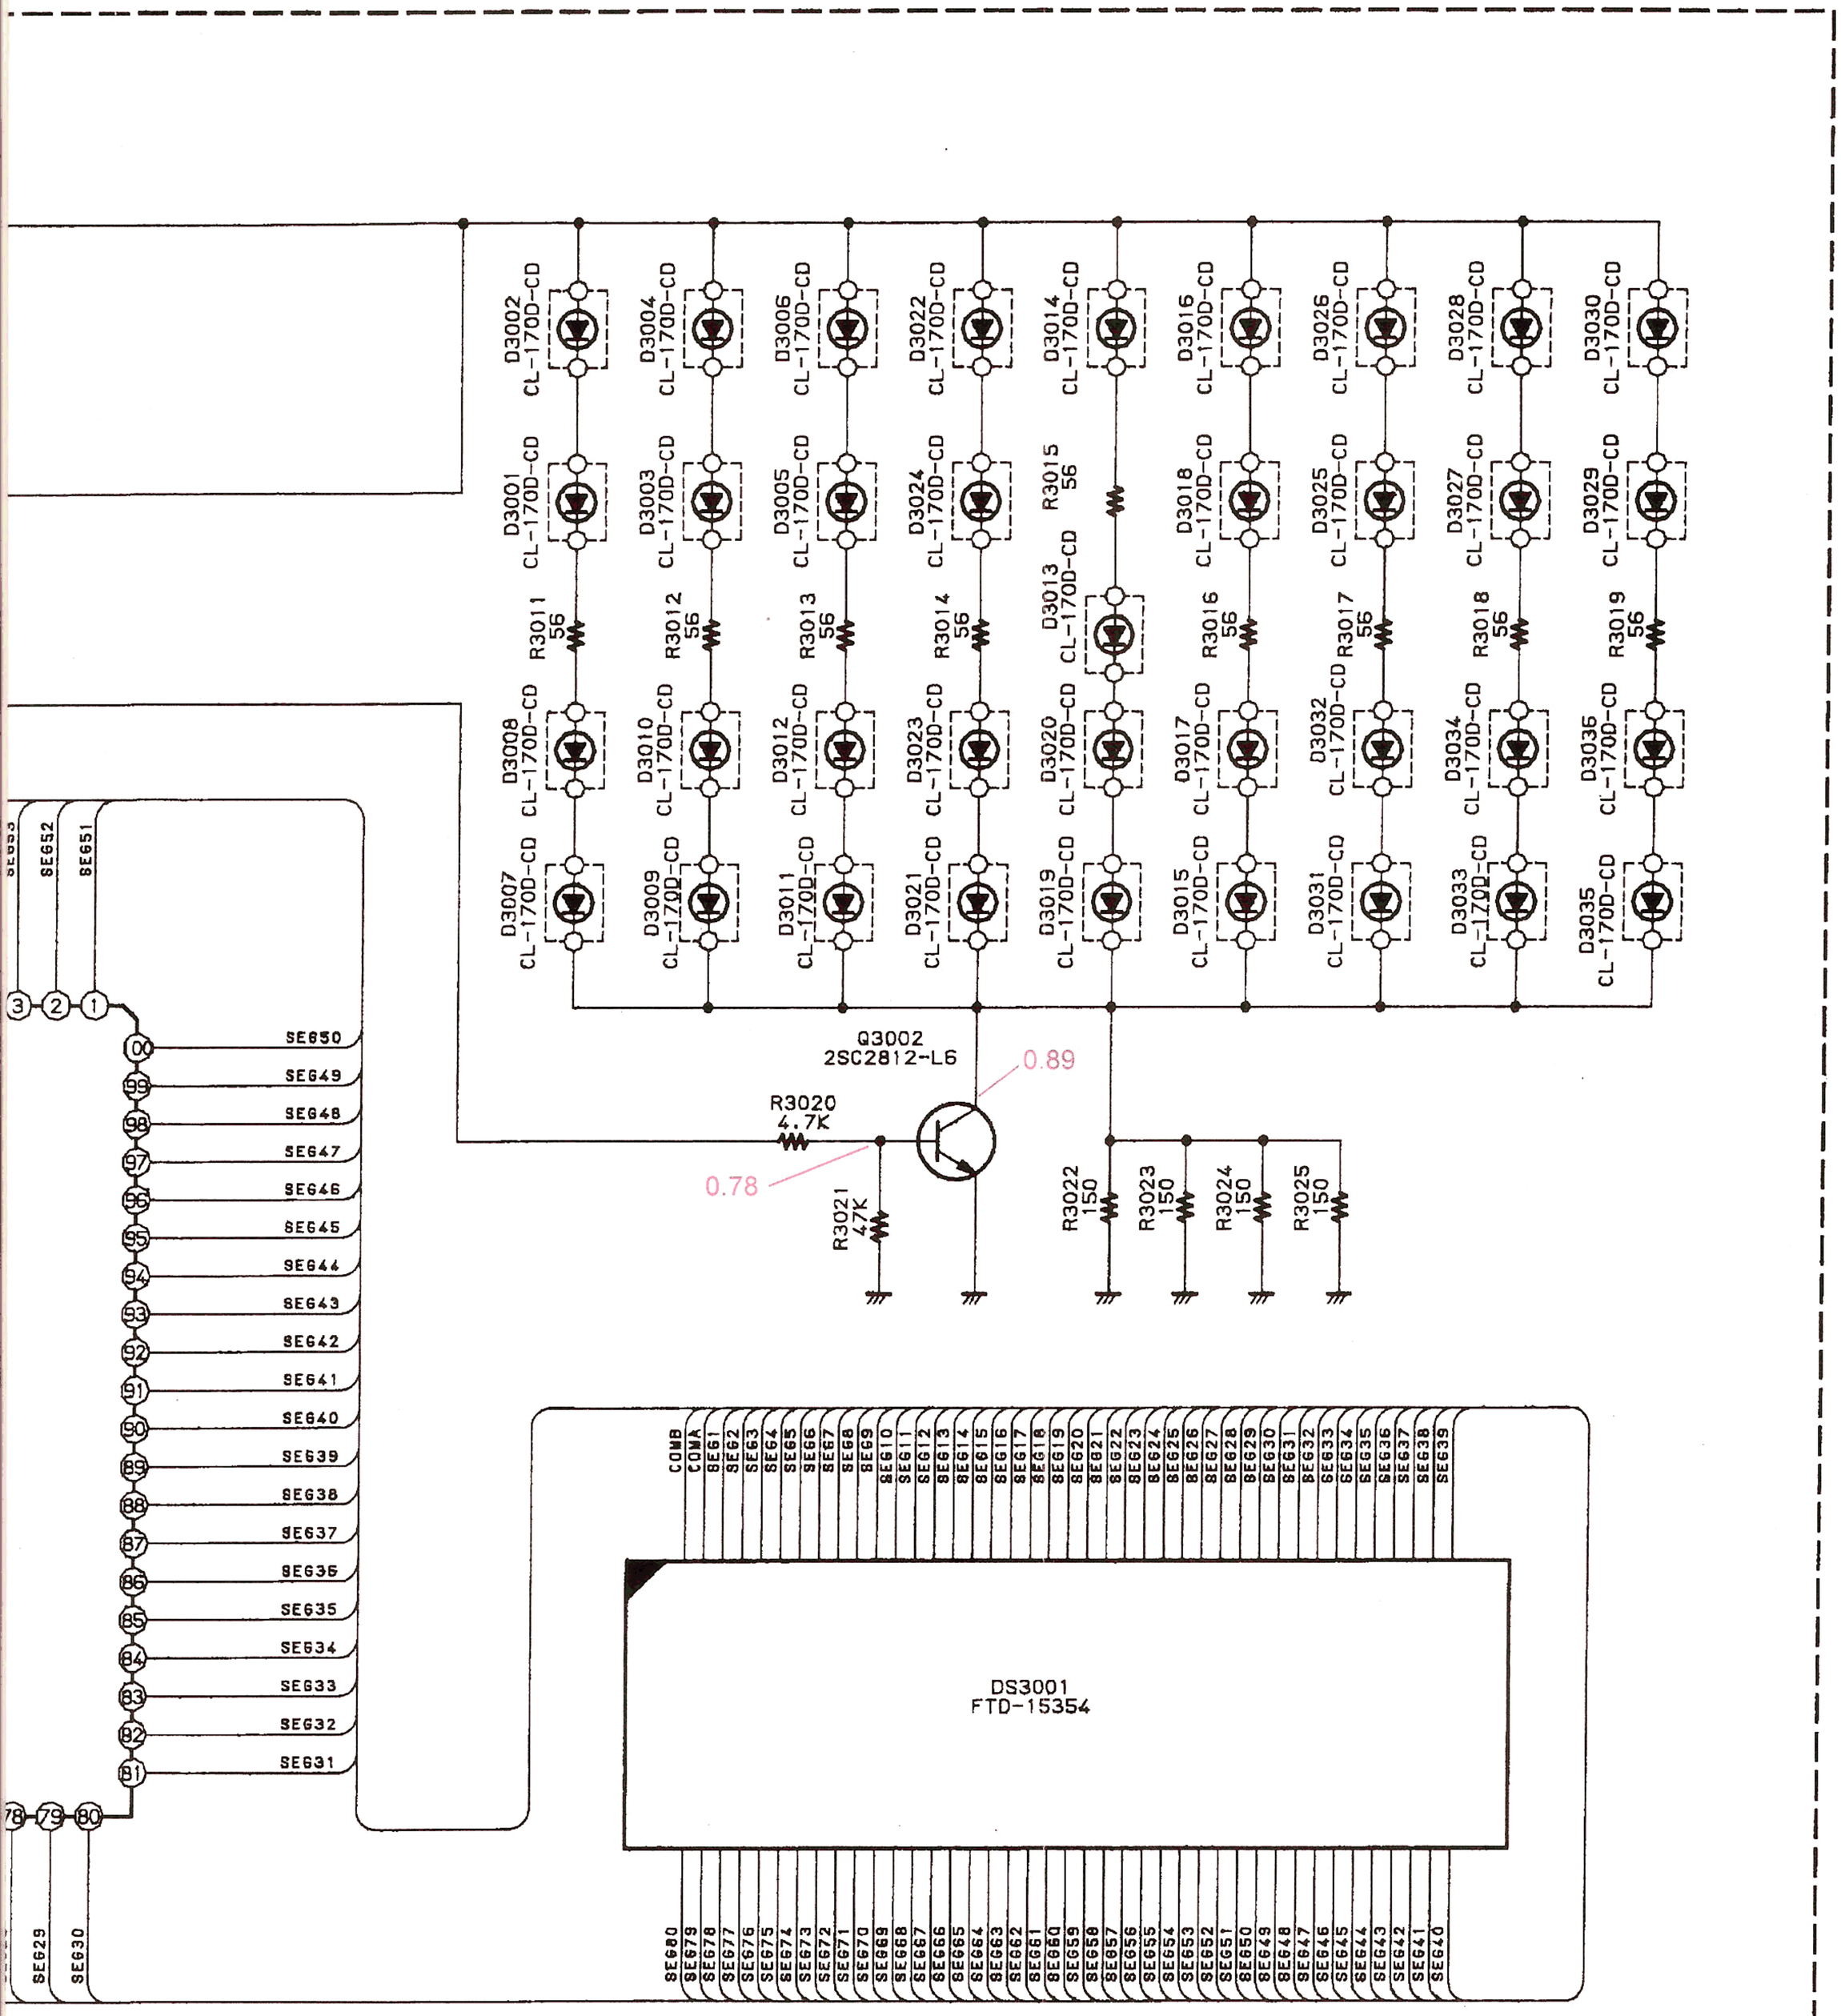

NOTE:
RESISTOR VALUES ARE IN Ω.1/10W ;
CAPACITOR VALUES ARE IN μF. 50V ;
UNLESS OTHERWISE NOTED.

DISPLAY-UNIT
F3582101


To Local Unit J2027
(See Page 4B-1)


JP3001
9206552

Q3001
MSM5265GS-V1K


D3037
1SS184

E

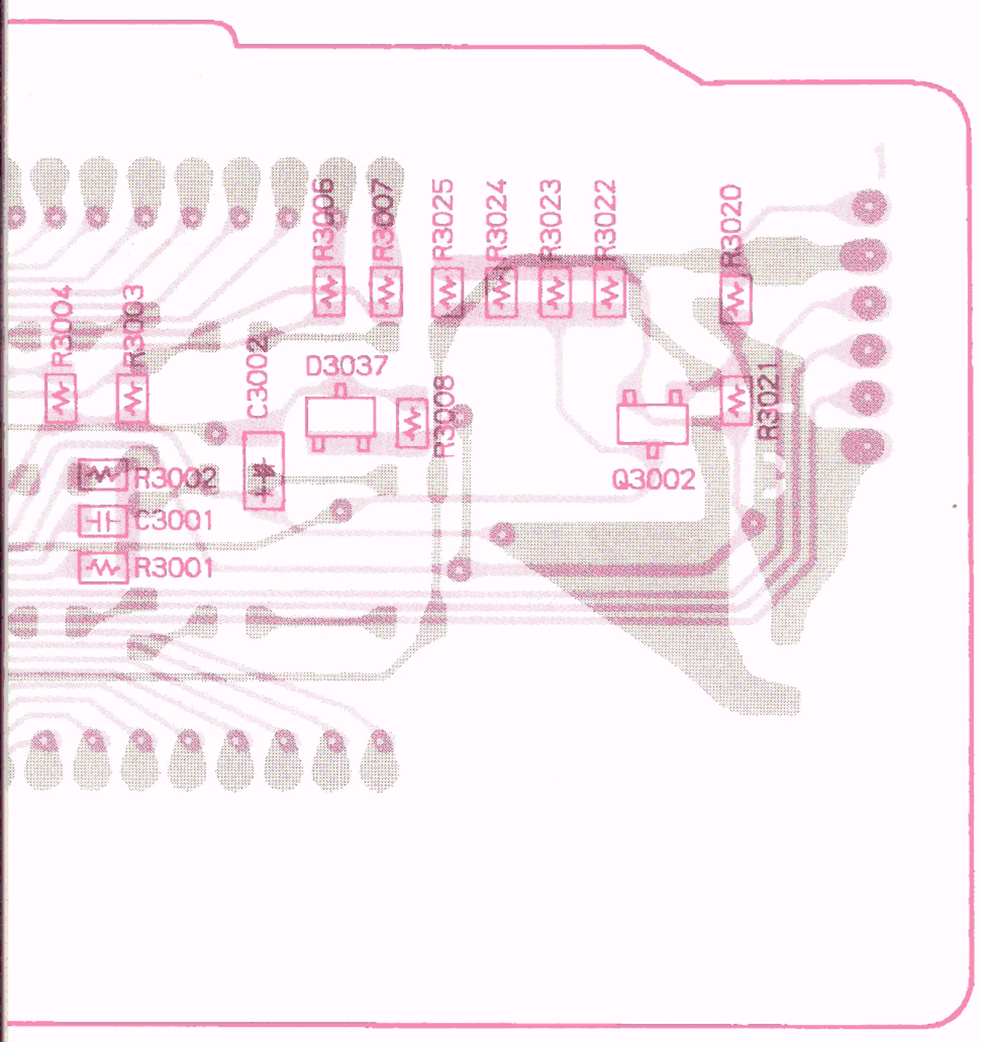


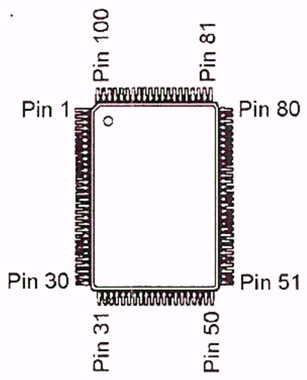


MSM5265GS
(Q3001)

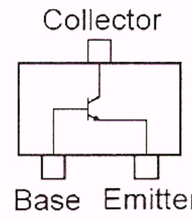


2SC2812 (L6)
(Q3002)

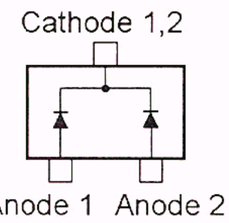


1SS184 (B3)
(D3037)

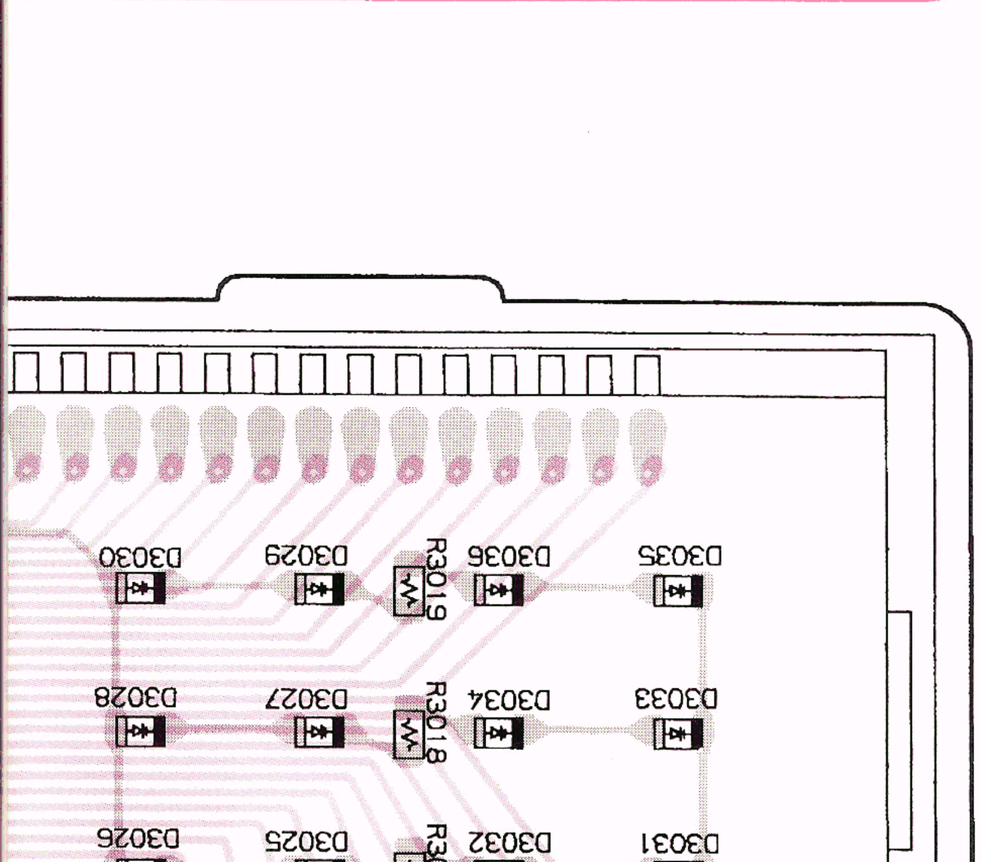

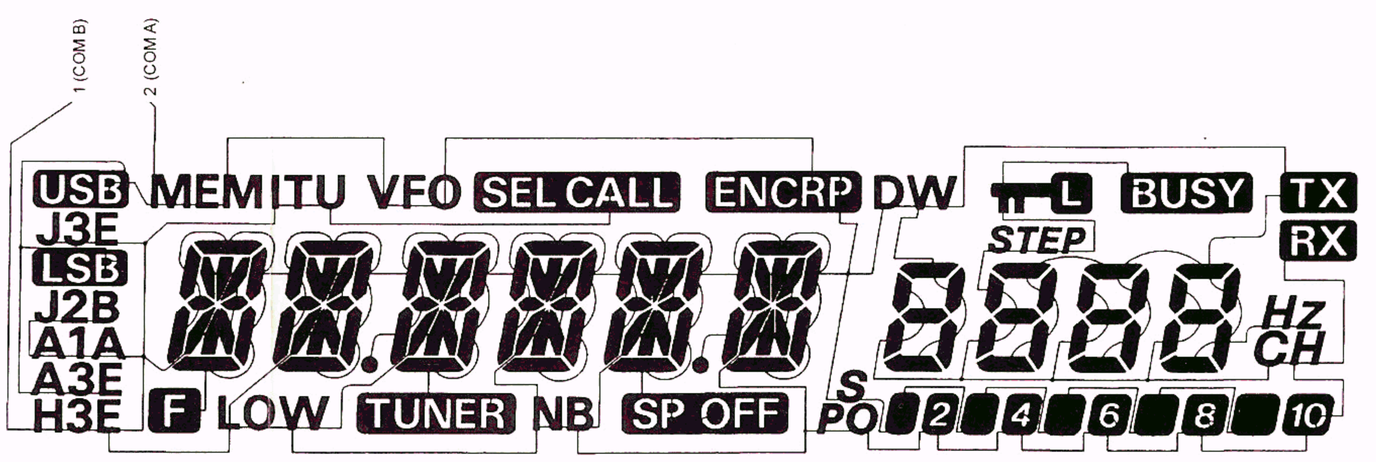

LCD Backplane Circuit Diagram

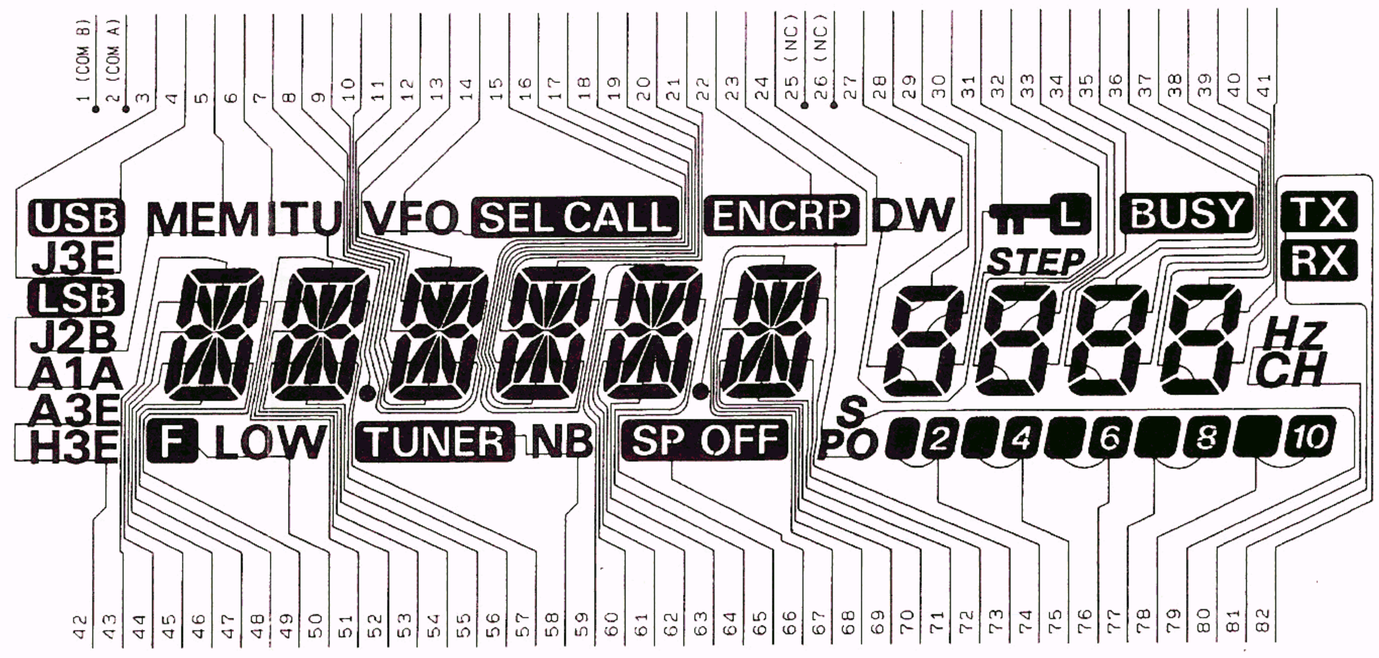


LCD Segmentation Circuit Diagram


A
B
C
D
1
2
3
4
Q3001
C3003
R3005
R3004
CPU Side
DS3001
DIM
9V
DTD
CKD
STD
GND
JP3001
C3006
C3005
C3004
R3010
R3009
D3006
D3005
R3013
D3012
D3011
D3018
D3017
D3024
D3023
R3016
R3014
D3004
D3003
R3012
D3010
D3009
D3016
D3015
D3022
D3021
D3002
D3001
R3011
D3008
D3007
D3014
R3015
D3013
D3020
D3019
LCD Side

LPF Unit

Circuit Diagram

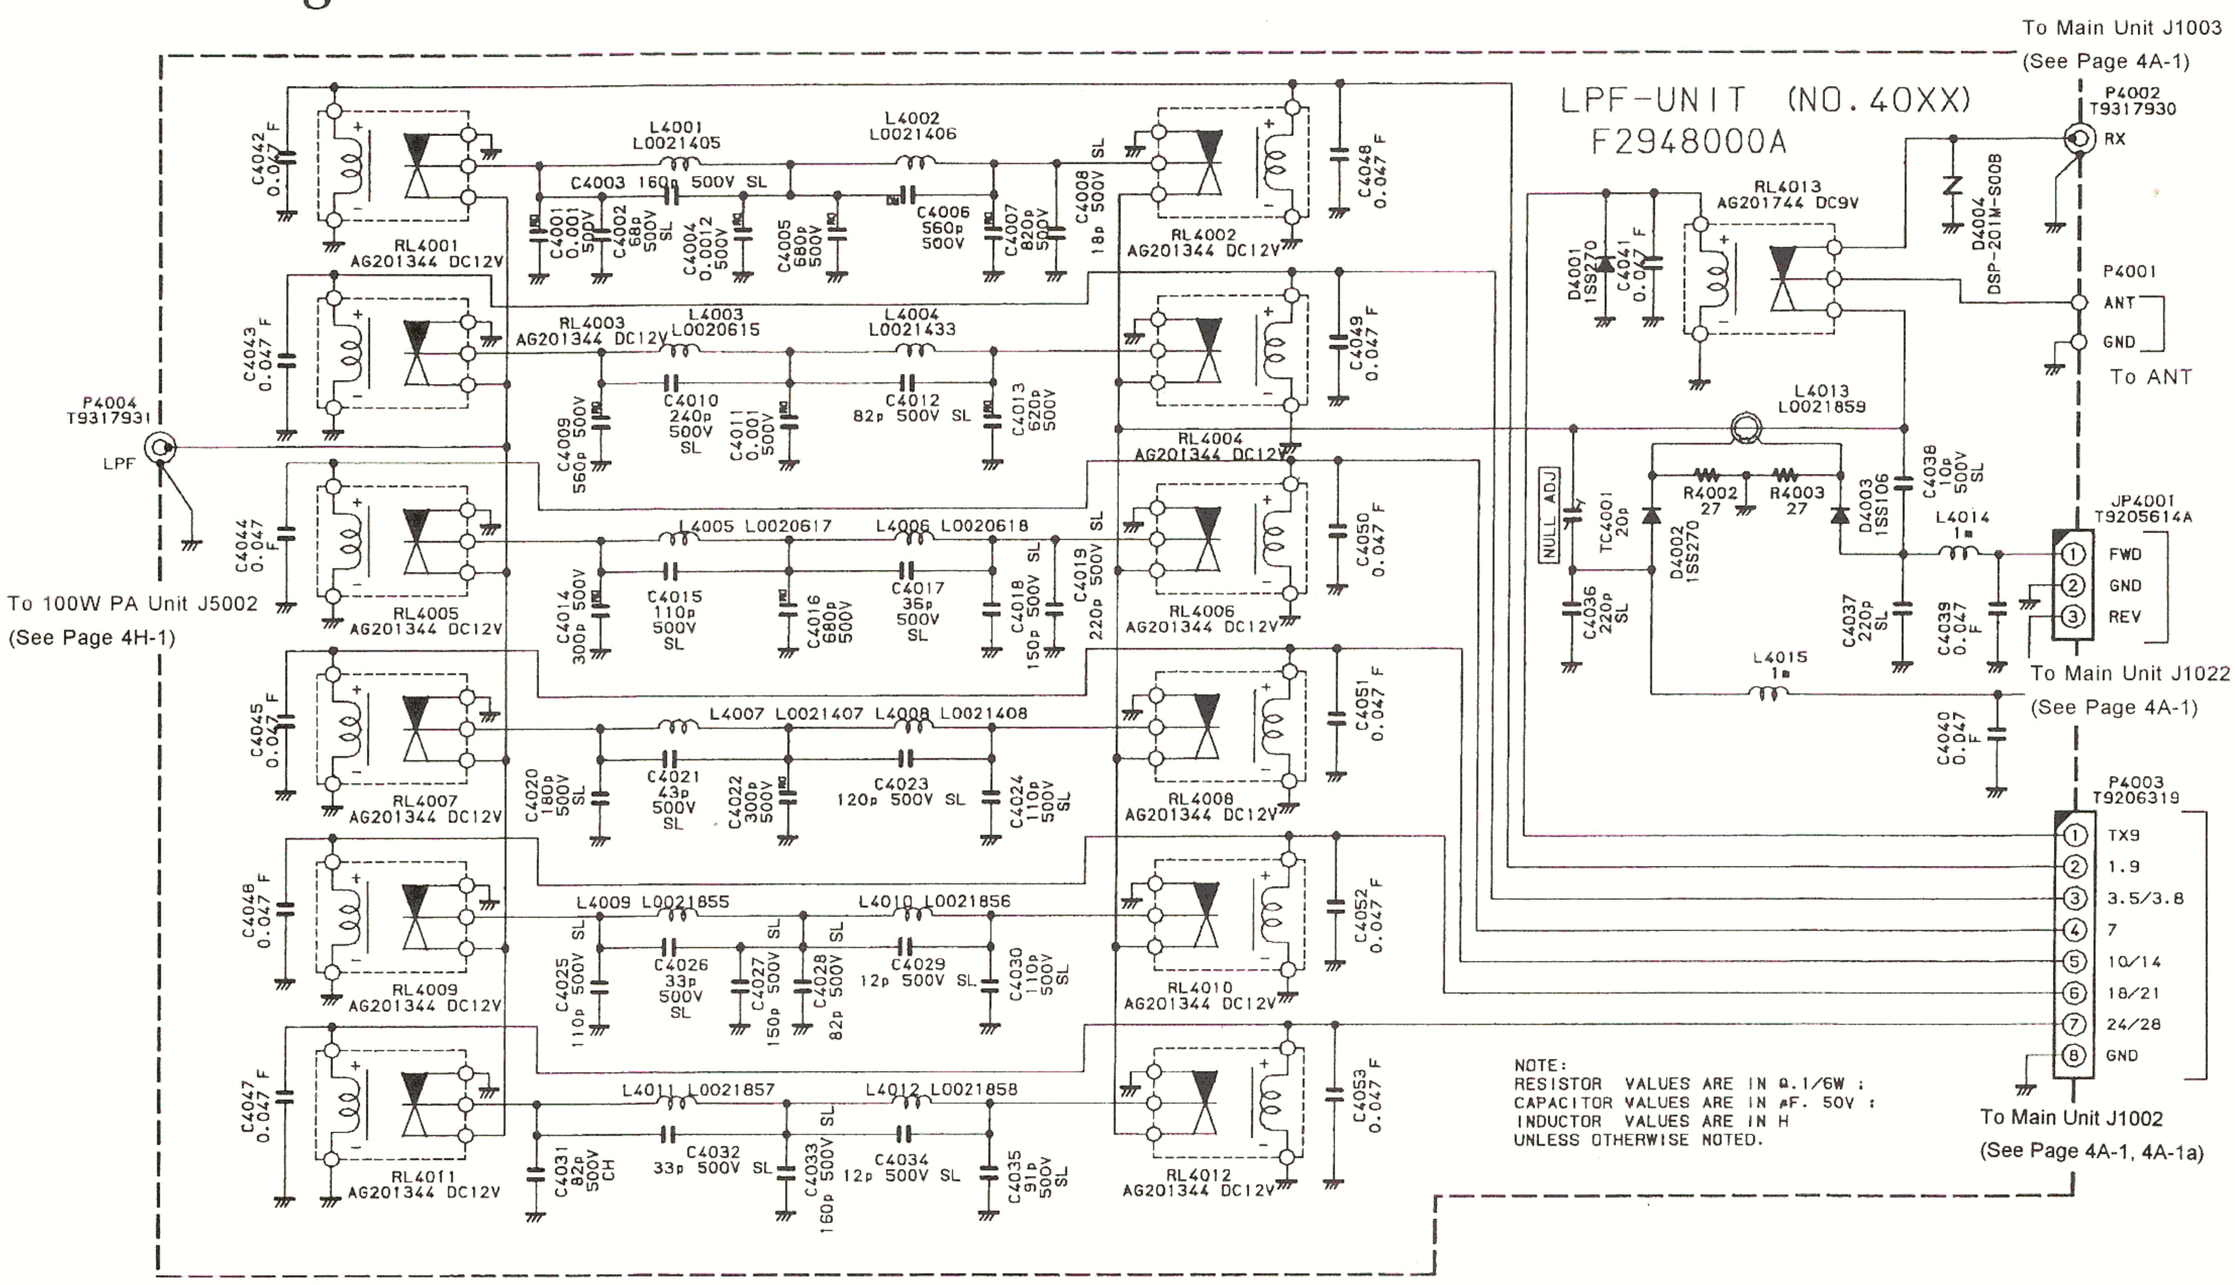


Parts Layout

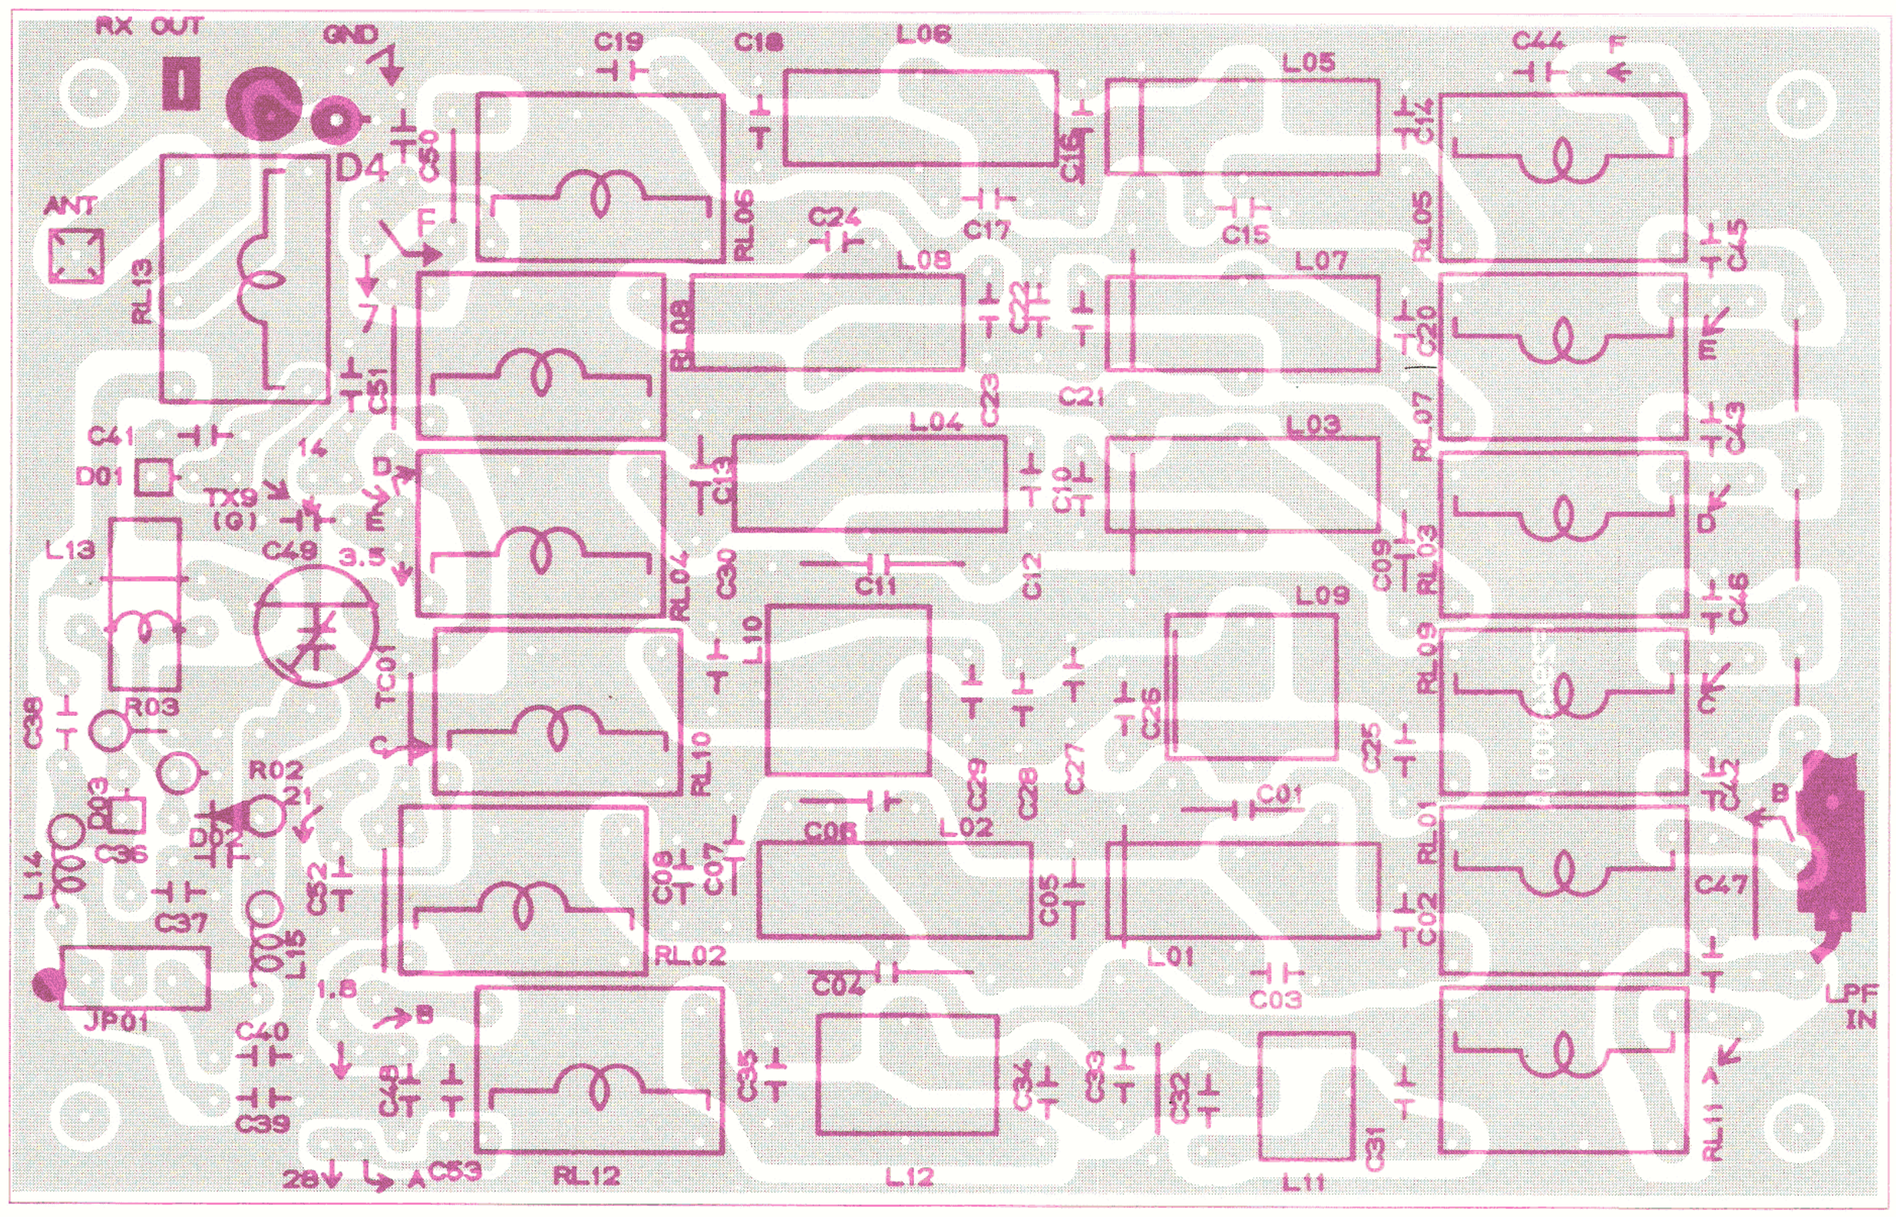


Component Side


Parts Layout

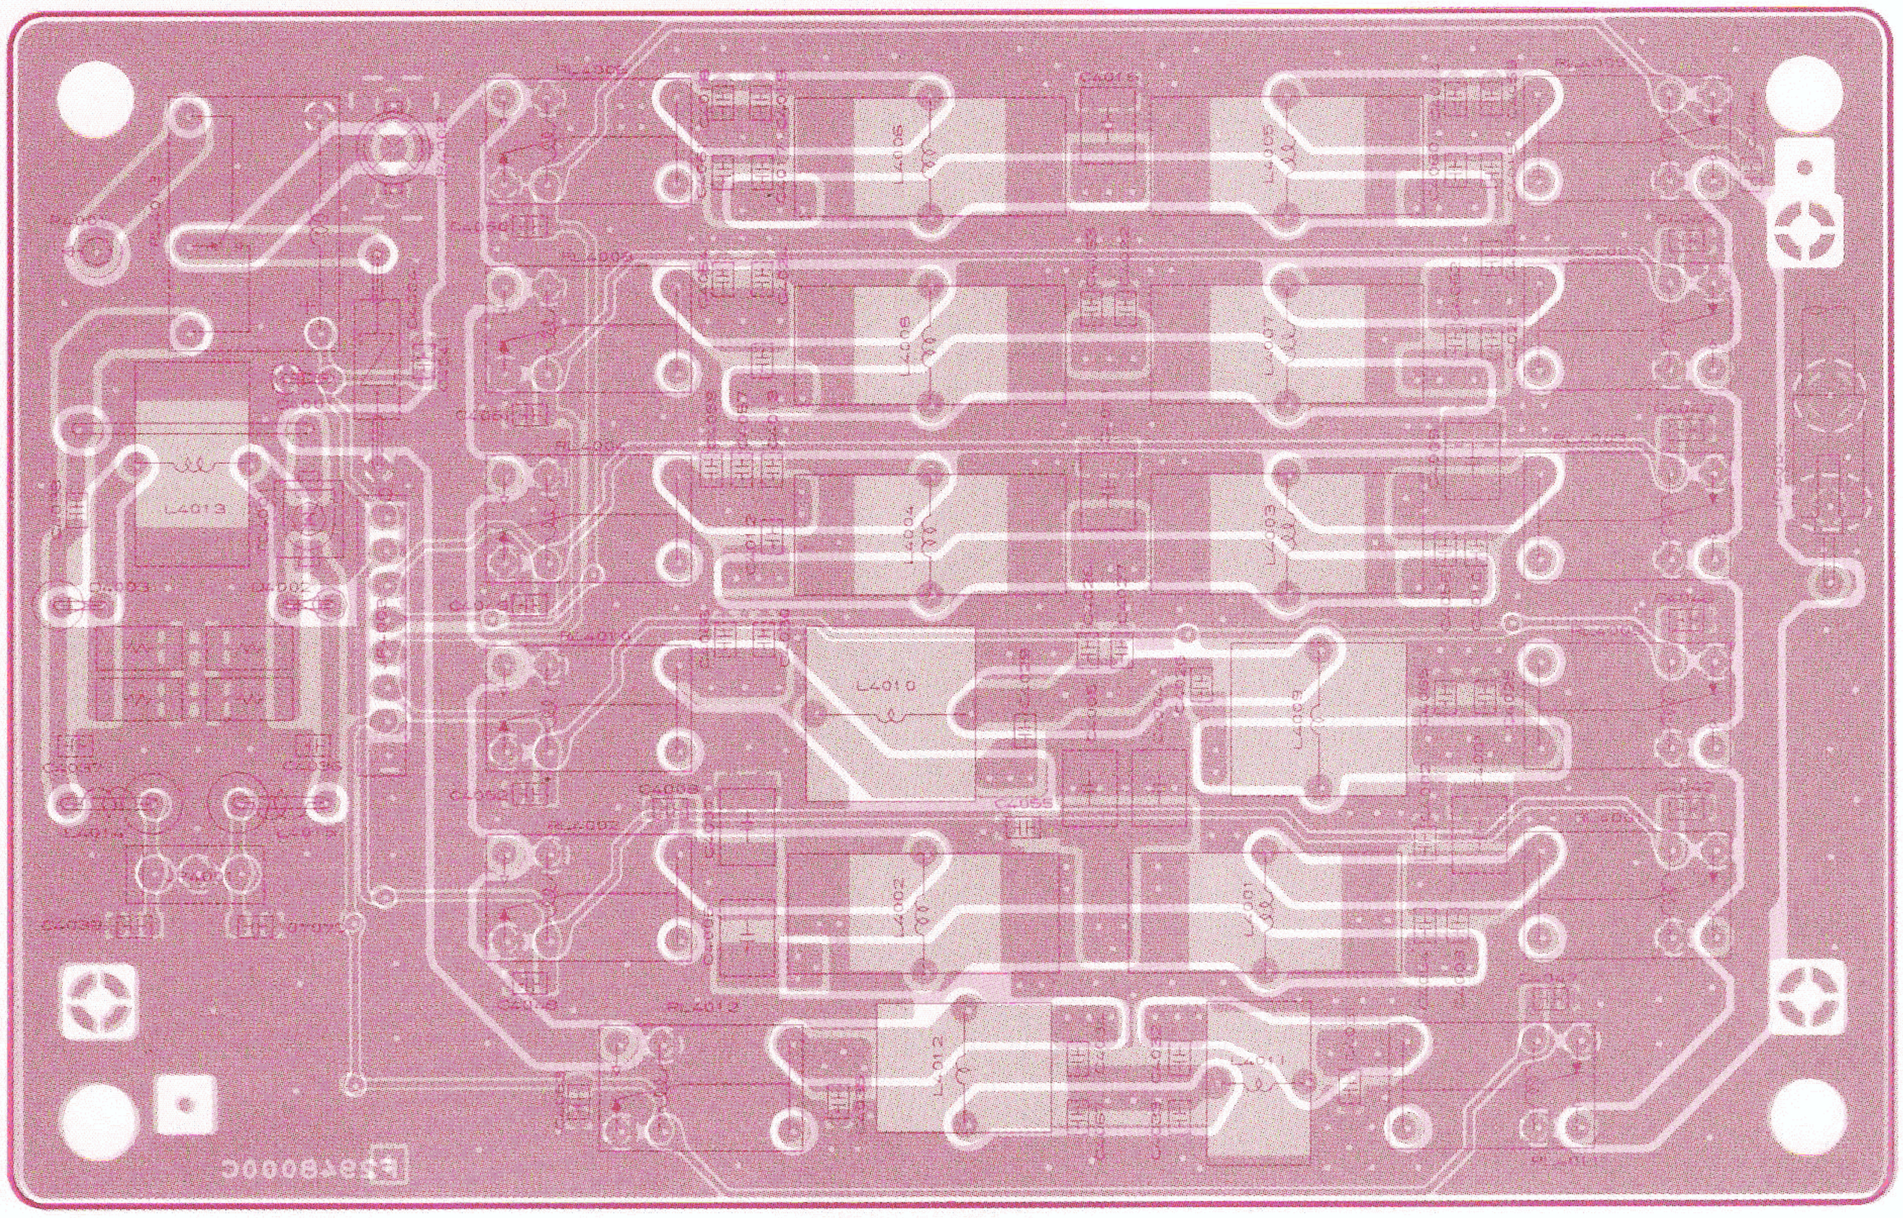


Component Side

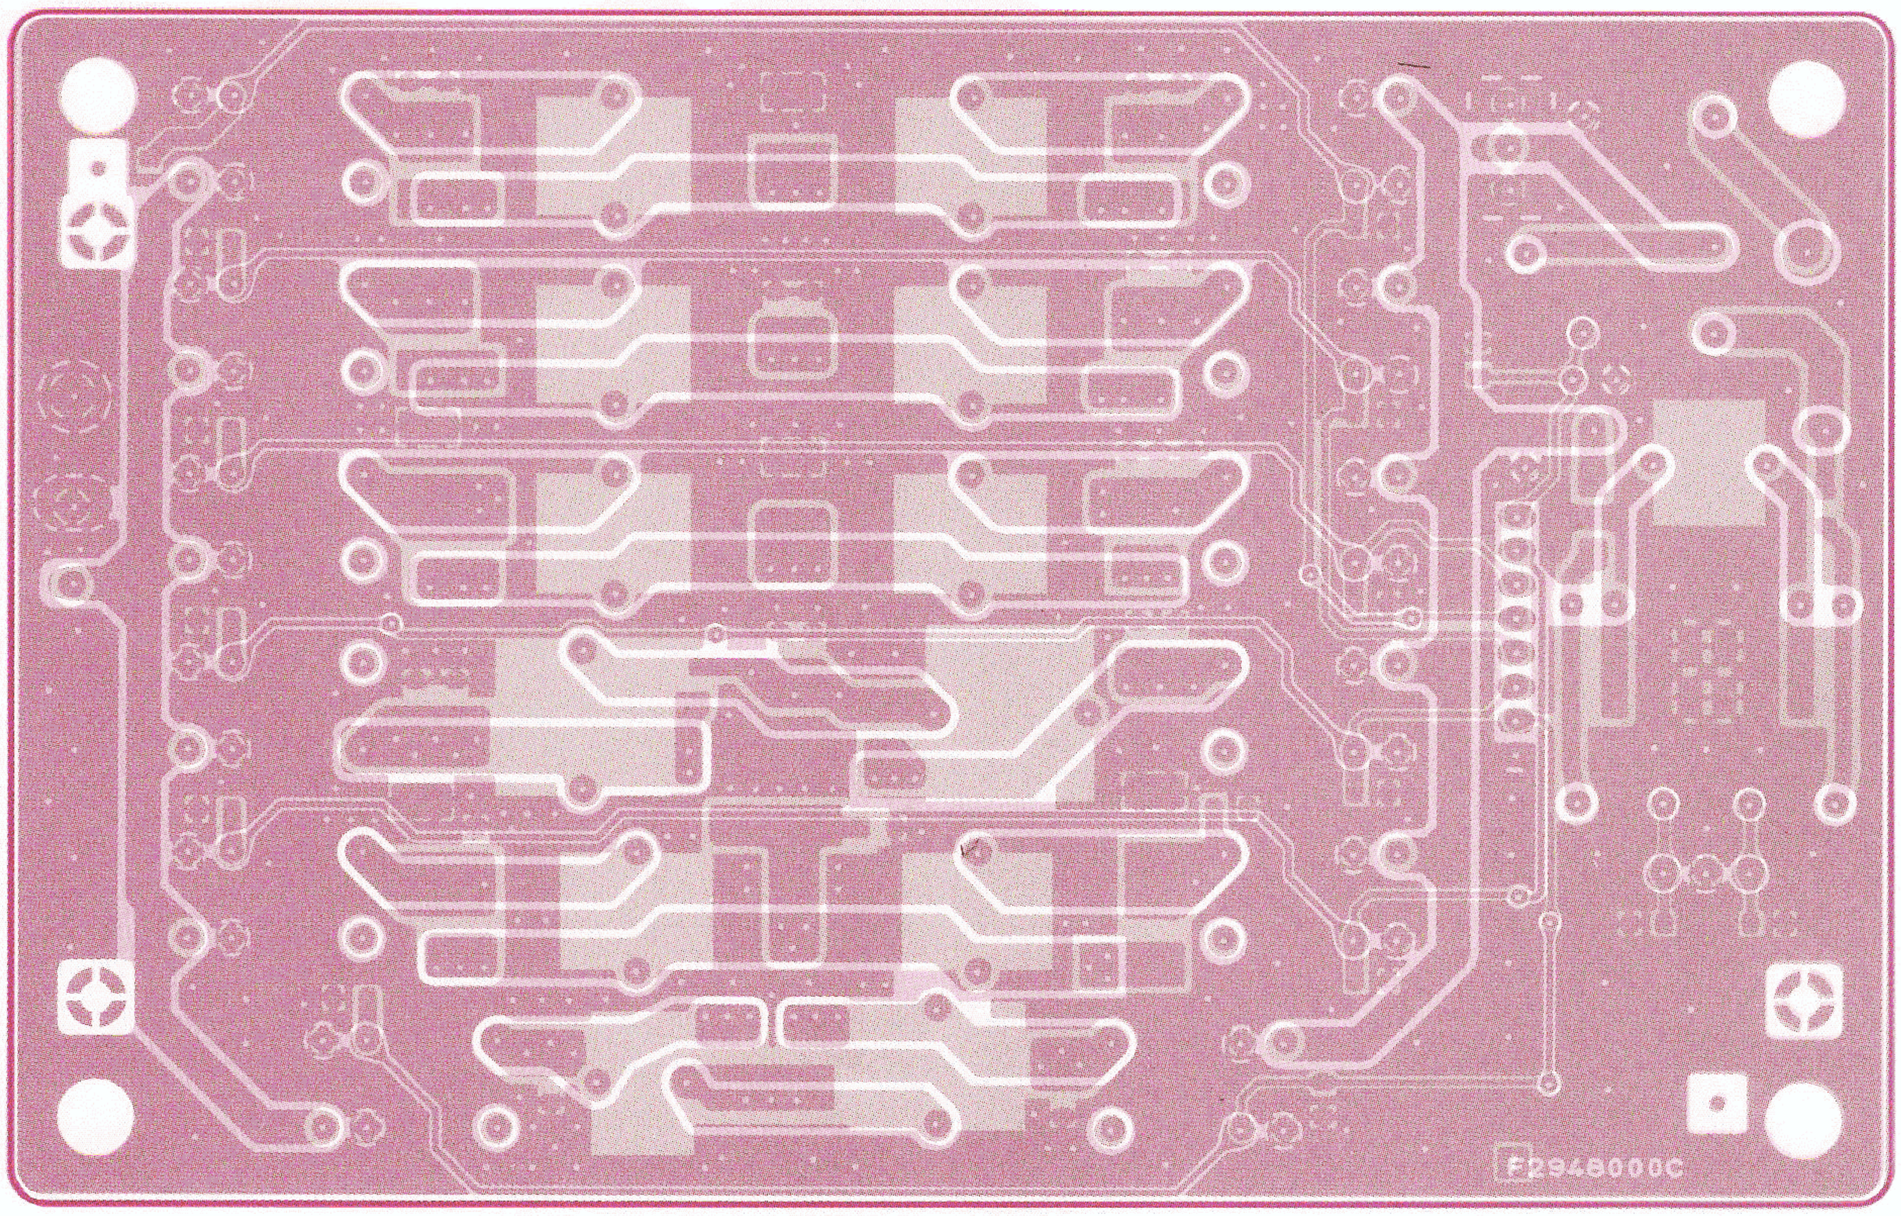


Solder Side

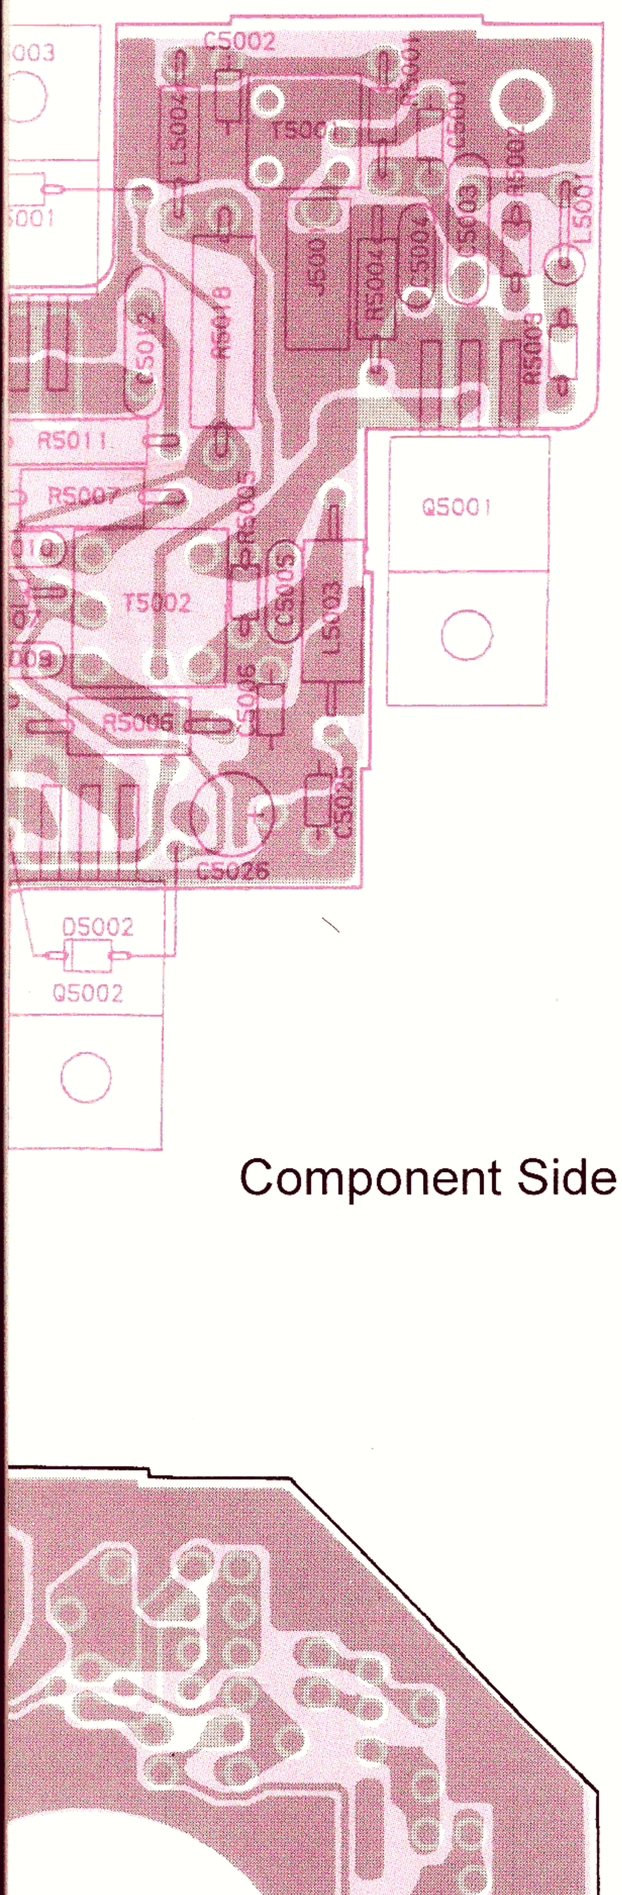


Component Side

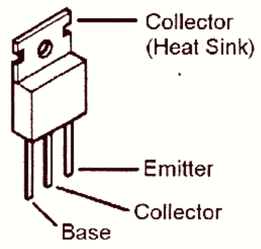


2SC2166
(Q5001)

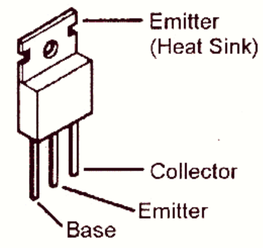


2SC3133
(Q5002,5003)

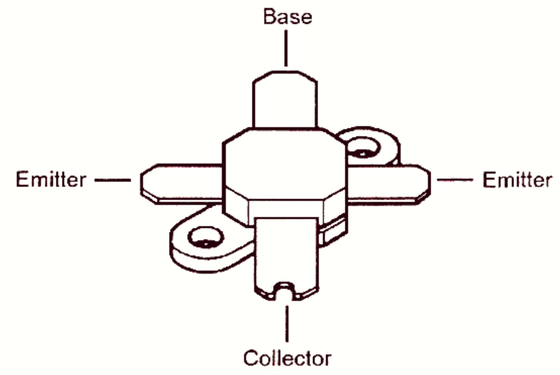


2SC3240
(Q5004,5005)

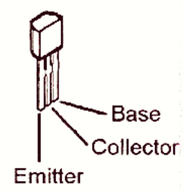





BA1A4M
(Q5006)

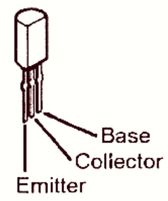


2SA1283D
(Q5007)
2SC2001
(Q5011)

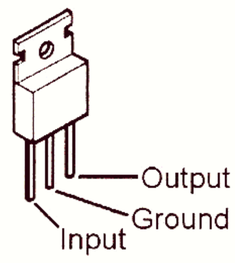

μPC7808H
(Q5008)

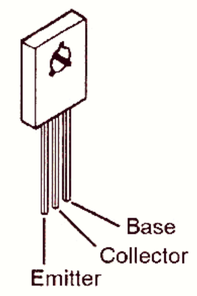



2SD882Q
(Q5009)

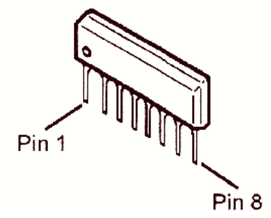


M5218AL
(Q5010)

Parts Layout

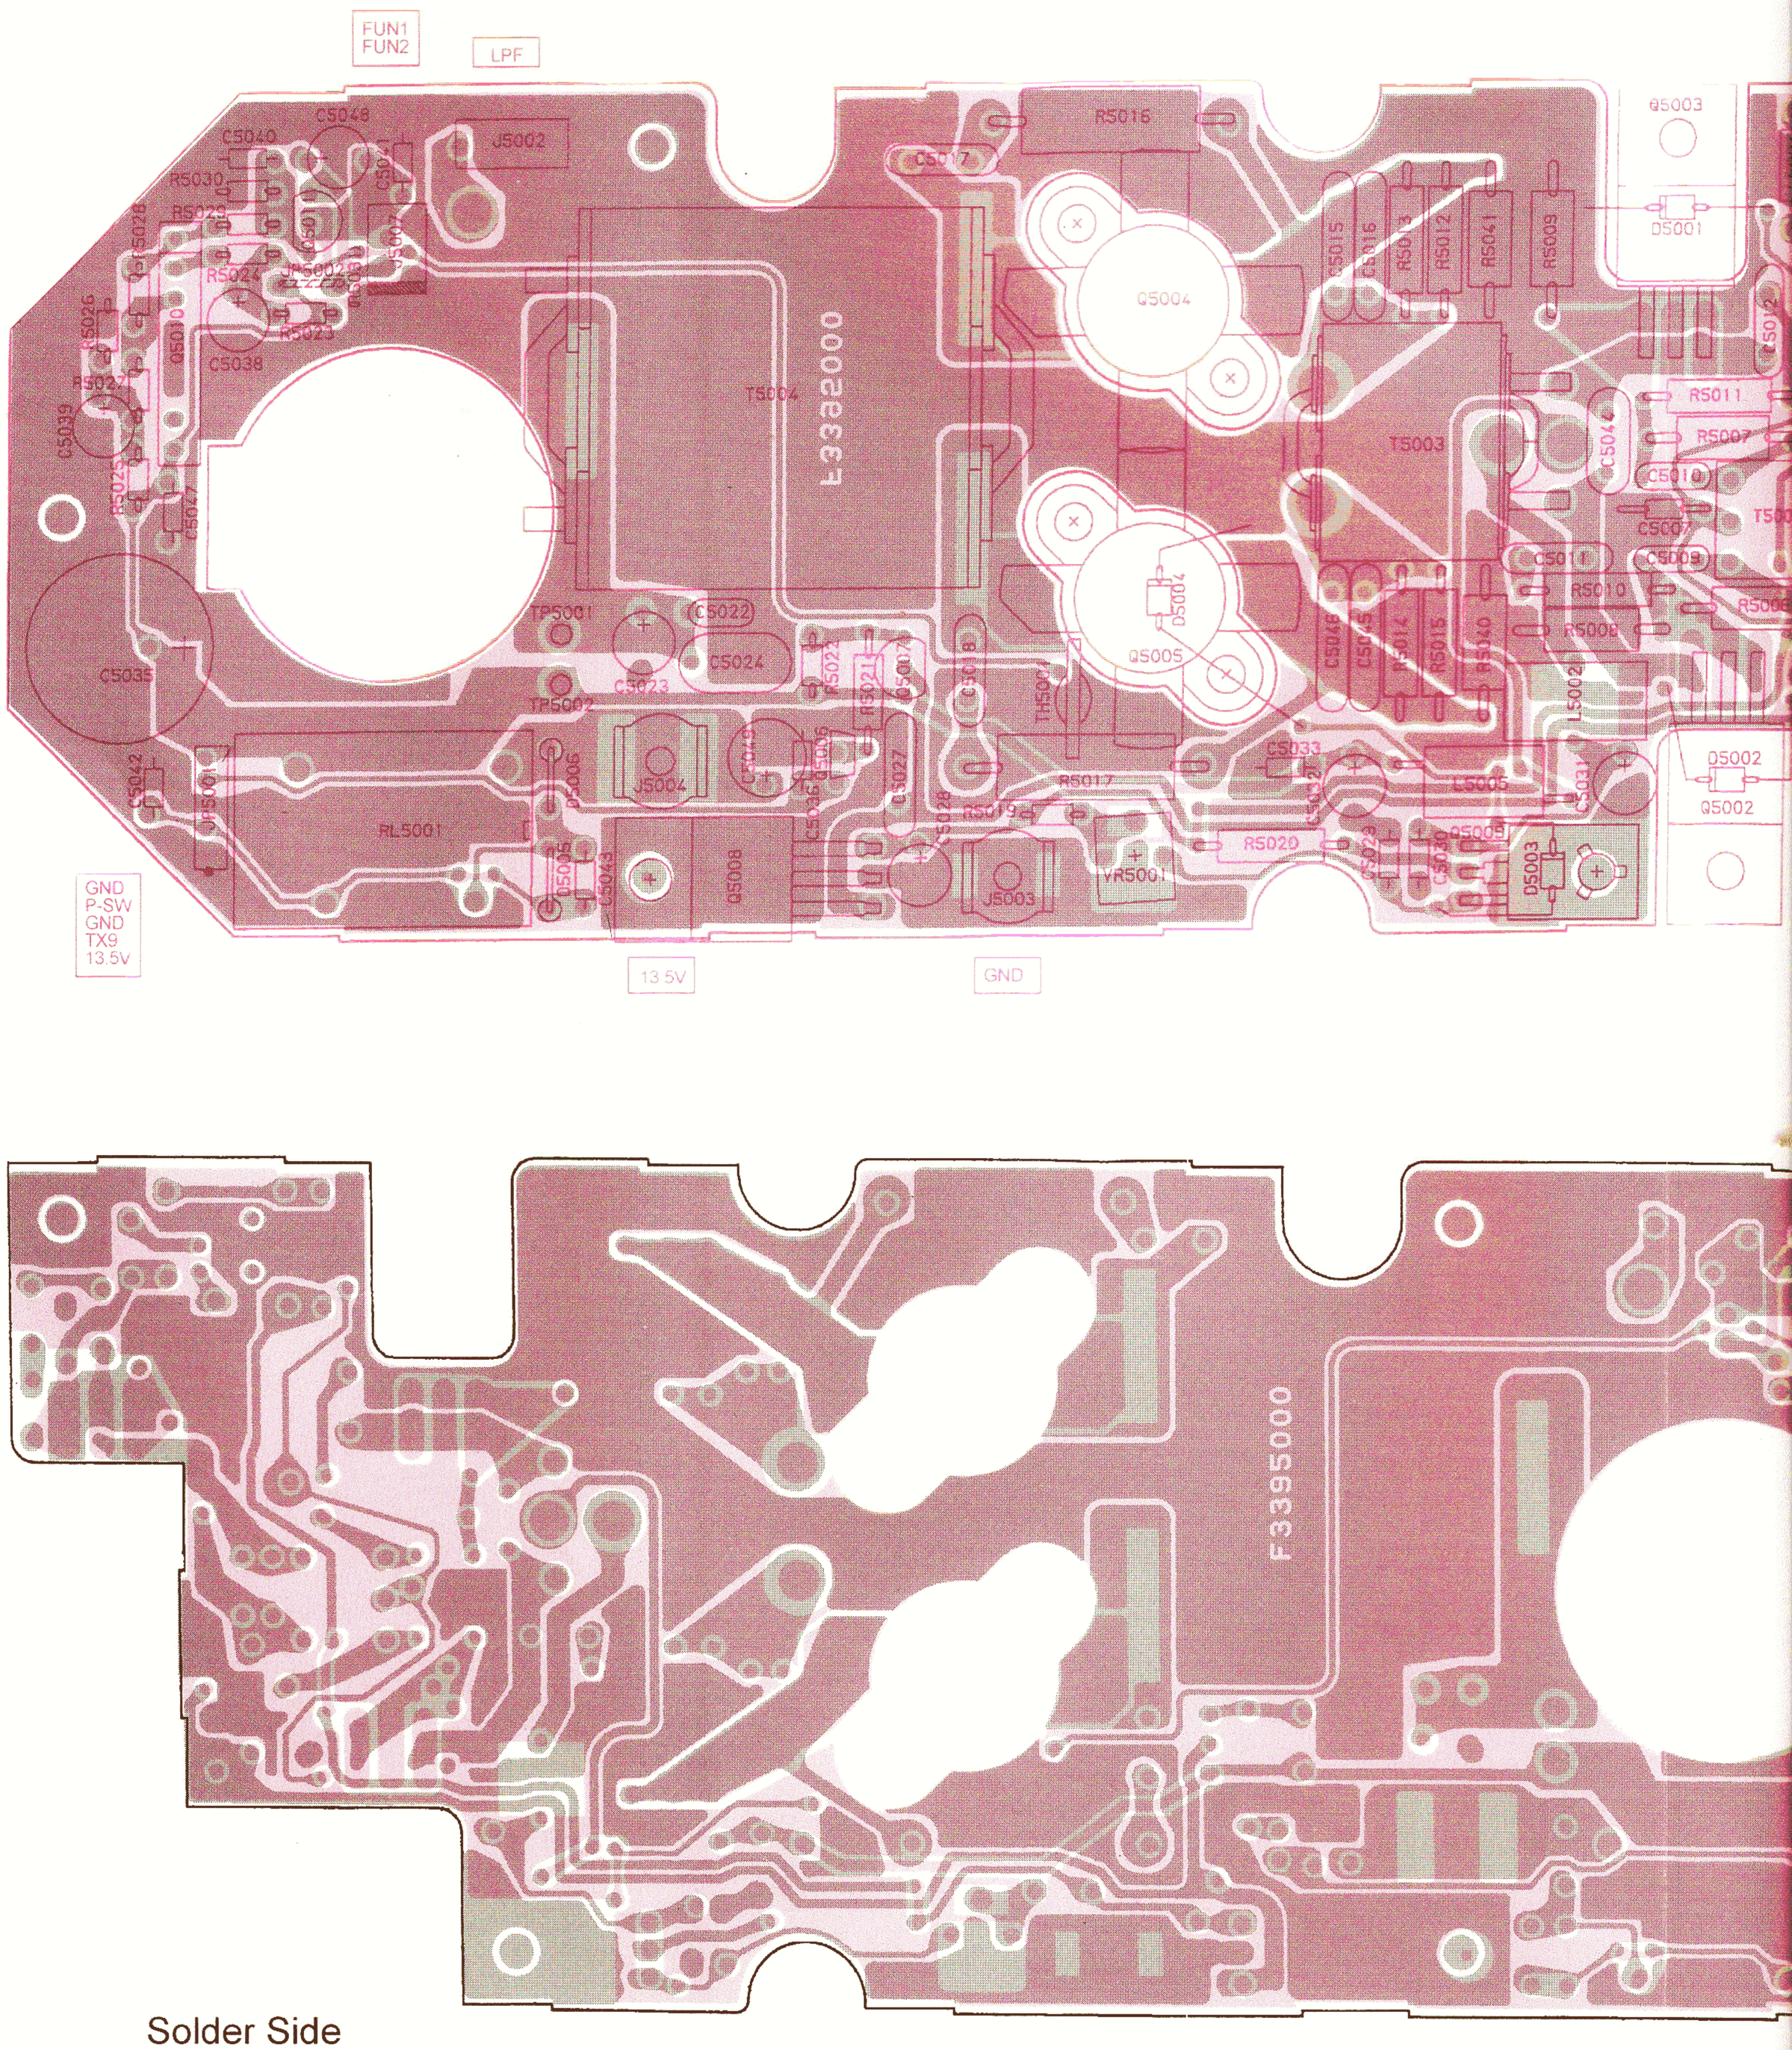

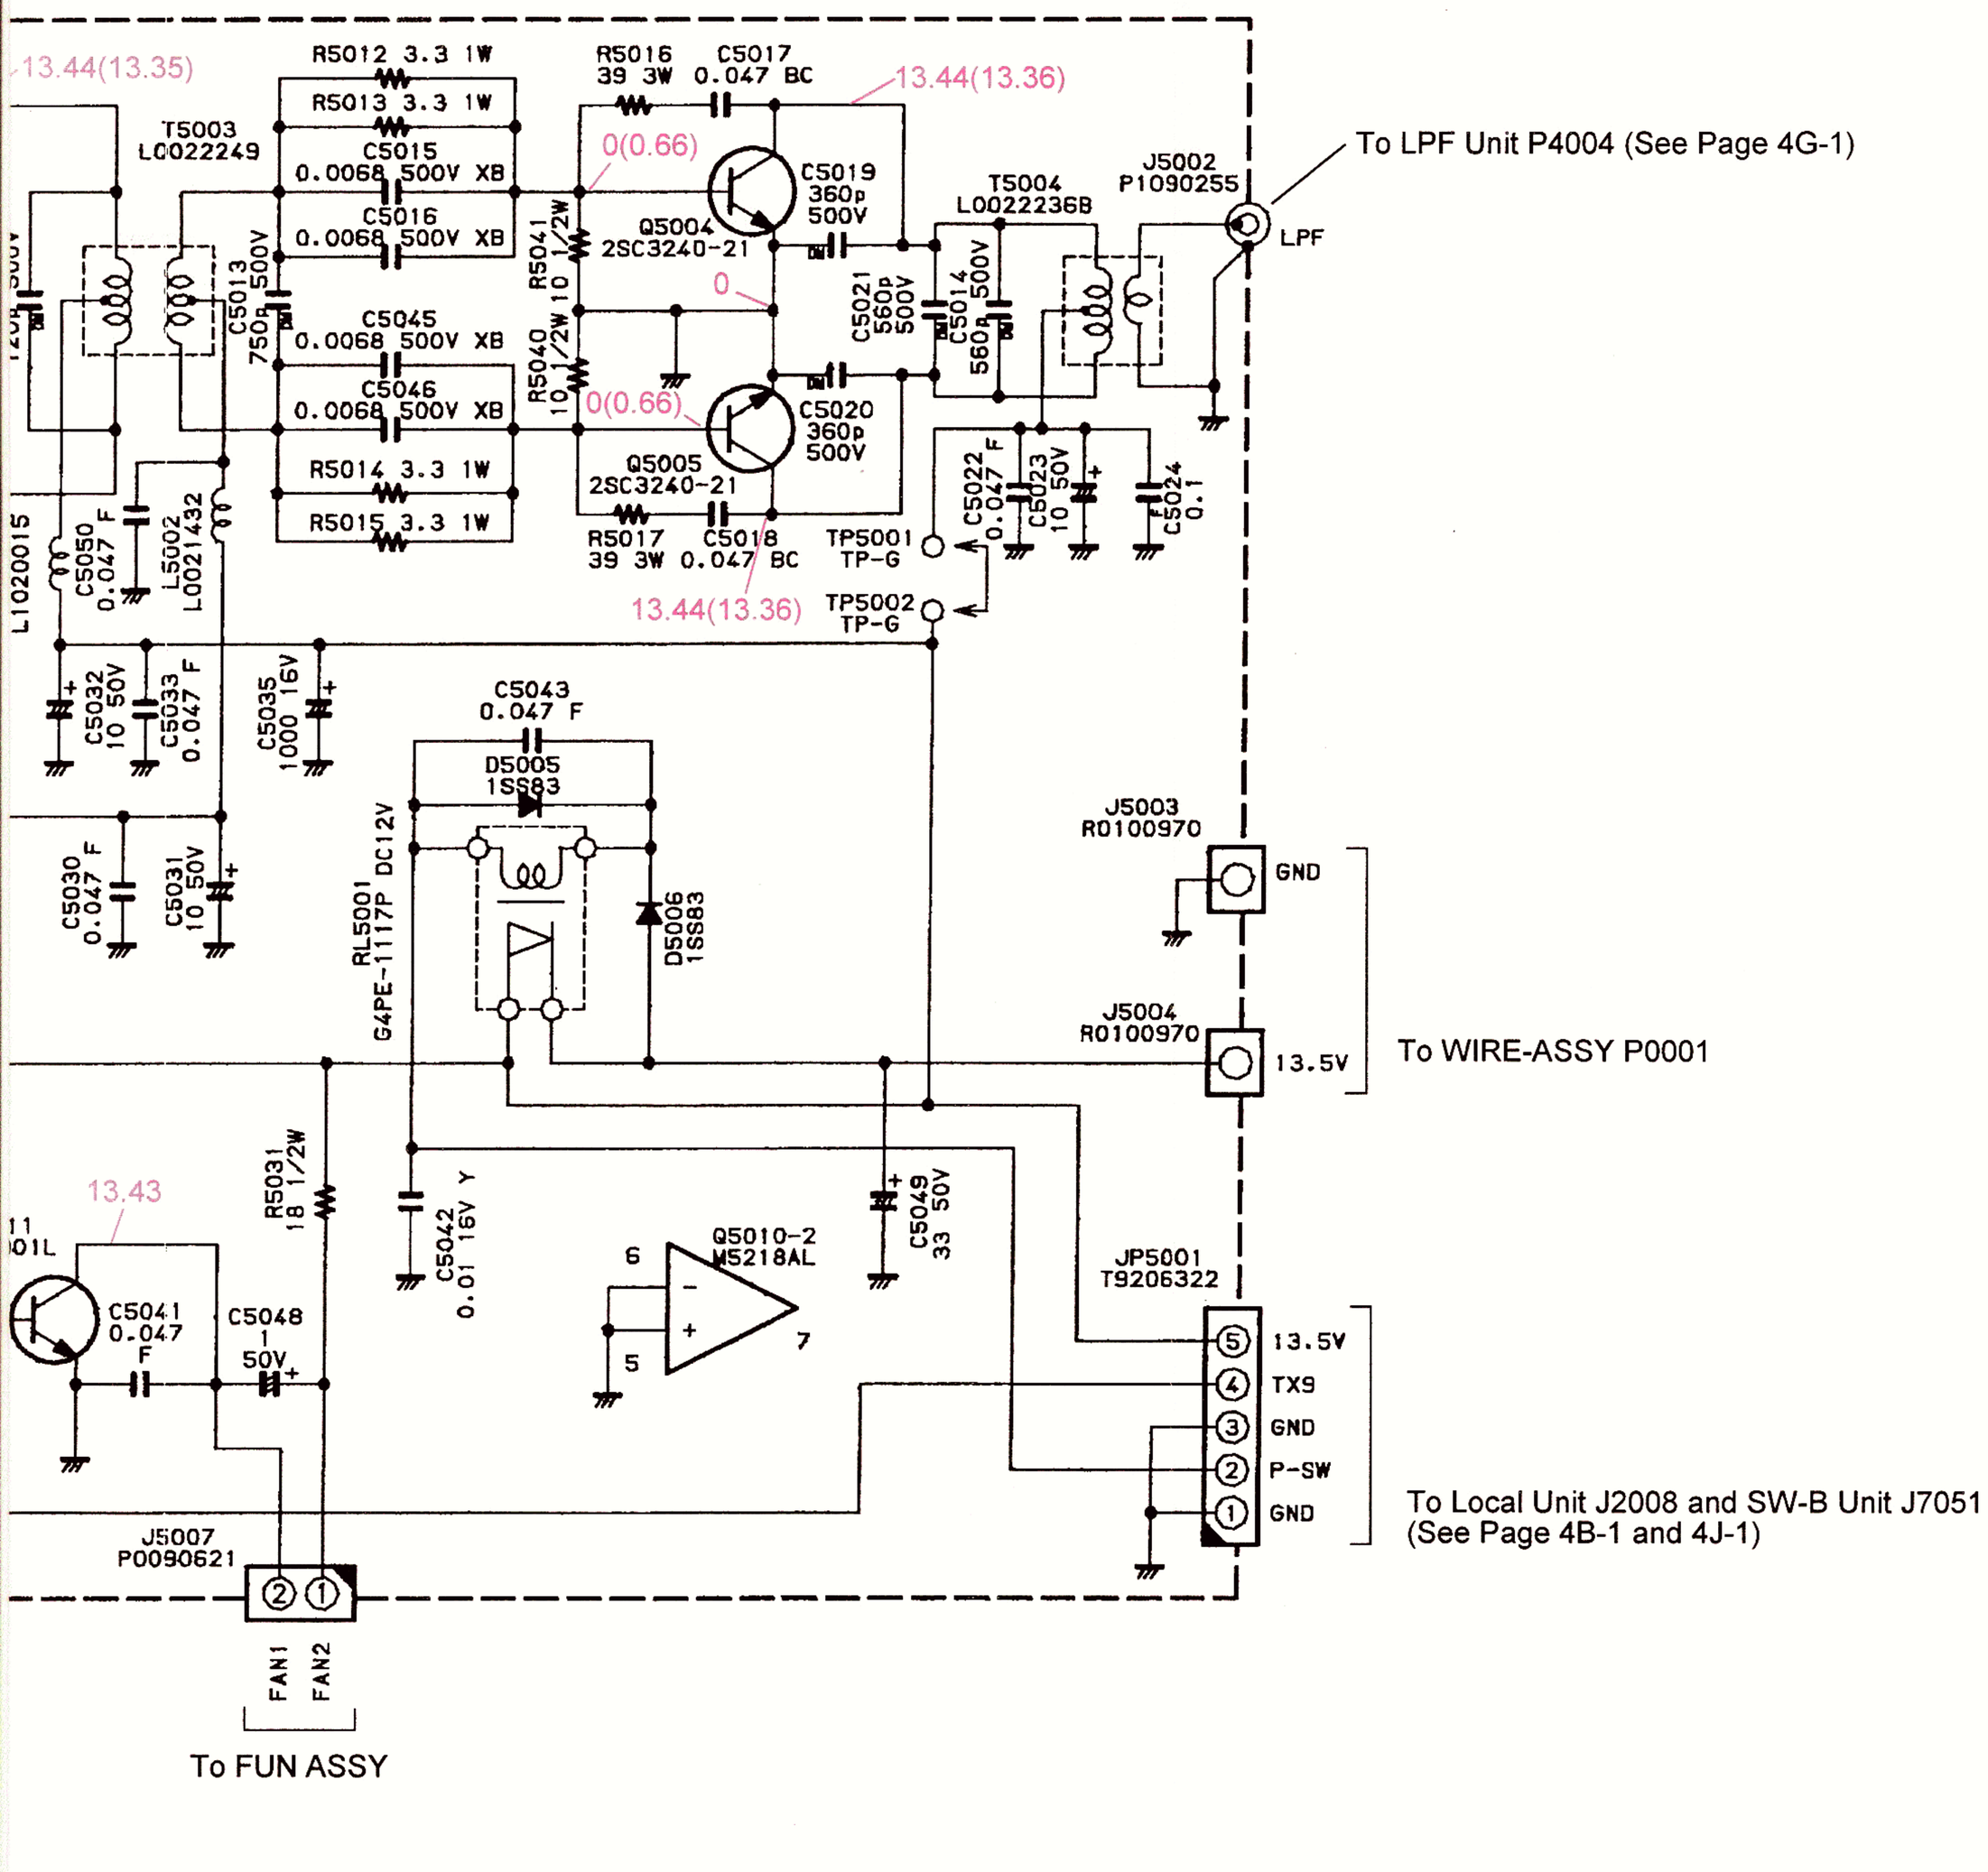
13.44(13.35)
R5012 3.3 1W
R5013 3.3 1W
T5003
L0022249
C5015
0.0068 500V XB
C5016
0.0068 500V XB
C5013
750p 500V
C5045
0.0068 500V XB
C5046
0.0068 500V XB
R5014 3.3 1W
R5015 3.3 1W
R5016
39 3W
C5017
0.047 BC
13.44(13.36)
0(0.66)
Q5004
2SC3240-21
C5019
360p
500V
R5041
10 1/2W
0
R5040
10 1/2W
0(0.66)
Q5005
2SC3240-21
C5020
360p
500V
R5017
39 3W
C5018
0.047 BC
13.44(13.36)
C5021
560p
500V
T5004
L0022236B
C5014
560p 500V
J5002
P1090255
LPF
To LPF Unit P4004 (See Page 4G-1)
C5022
0.047 F
C5023
10 50V
C5024
0.1
TP5001
TP-G
TP5002
TP-G
L1020015
C5050
0.047 F
L5002
L0021432
C5032
10 50V
C5033
0.047 F
C5035
1000 16V
C5043
0.047 F
D5005
1SS83
RL5001
G4PE-1117P DC12V
D5006
1SS83
C5030
0.047 F
C5031
10 50V
J5003
R0100970
GND
J5004
R0100970
13.5V
To WIRE-ASSY P0001
13.43
R5031
18 1/2W
C5042
0.01 16V Y
Q5010-2
M5218AL
C5049
33 50V
C5041
0.047
F
C5048
1
50V
JP5001
T9206322
13.5V
TX9
GND
P-SW
GND
To Local Unit J2008 and SW-B Unit J7051
(See Page 4B-1 and 4J-1)
J5007
P0090621
FAN1
FAN2
To FUN ASSY

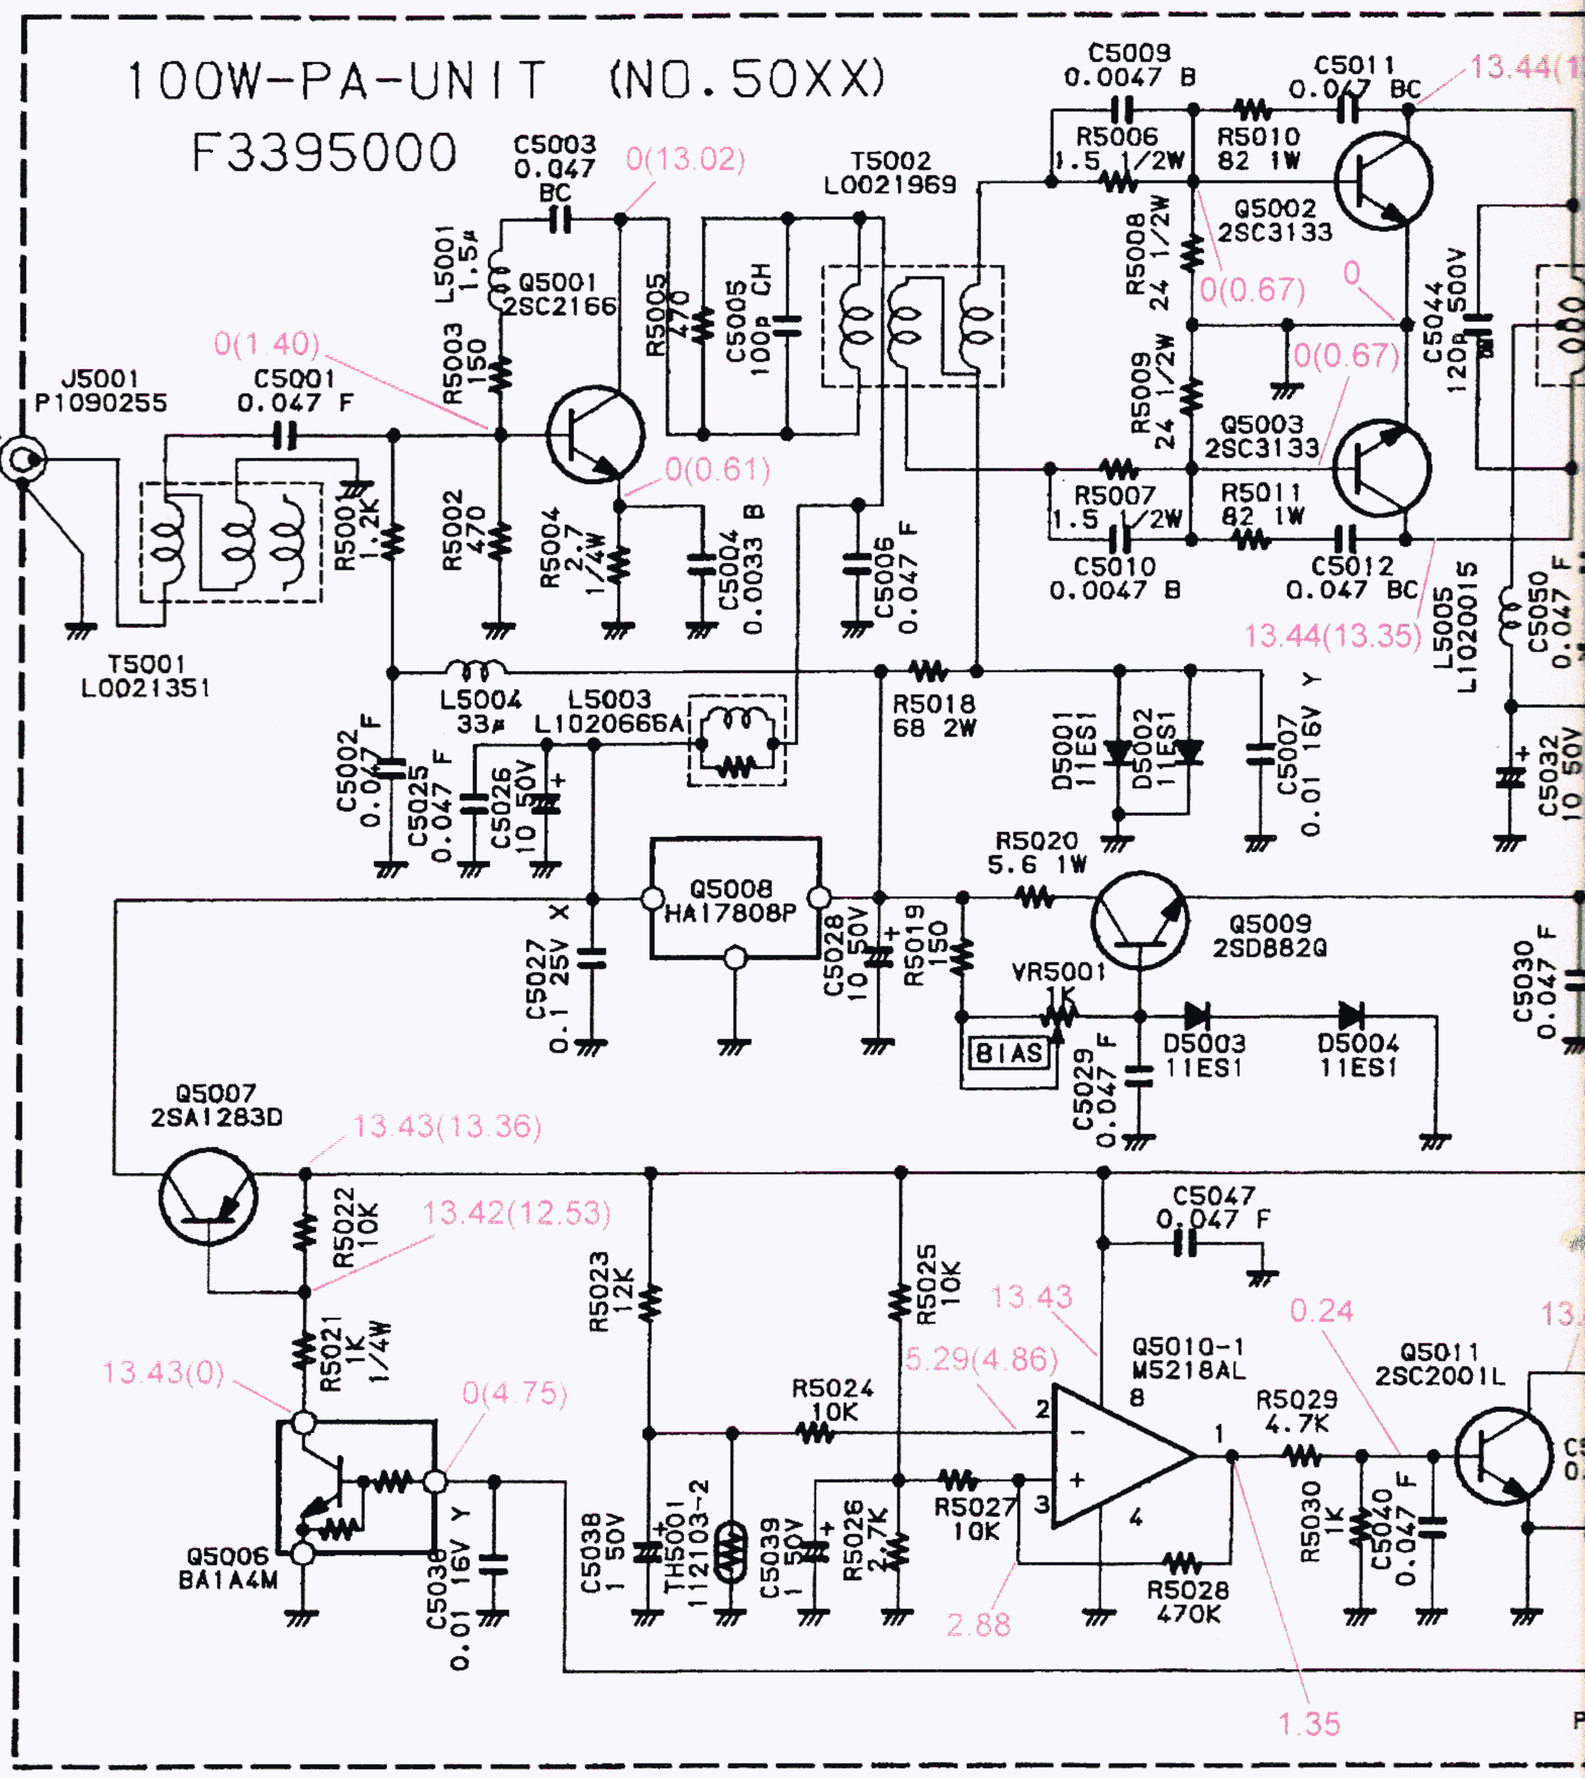


NOTE:
RESISTER VALUES ARE IN Ω.1/6W ;
CAPACITOR VALUES ARE IN μF. 50V ;
INDUCTOR VALUES ARE IN H
UNLESS OTHERWISE NOTED.


RX(TX)

SW-A Unit

Circuit Diagram

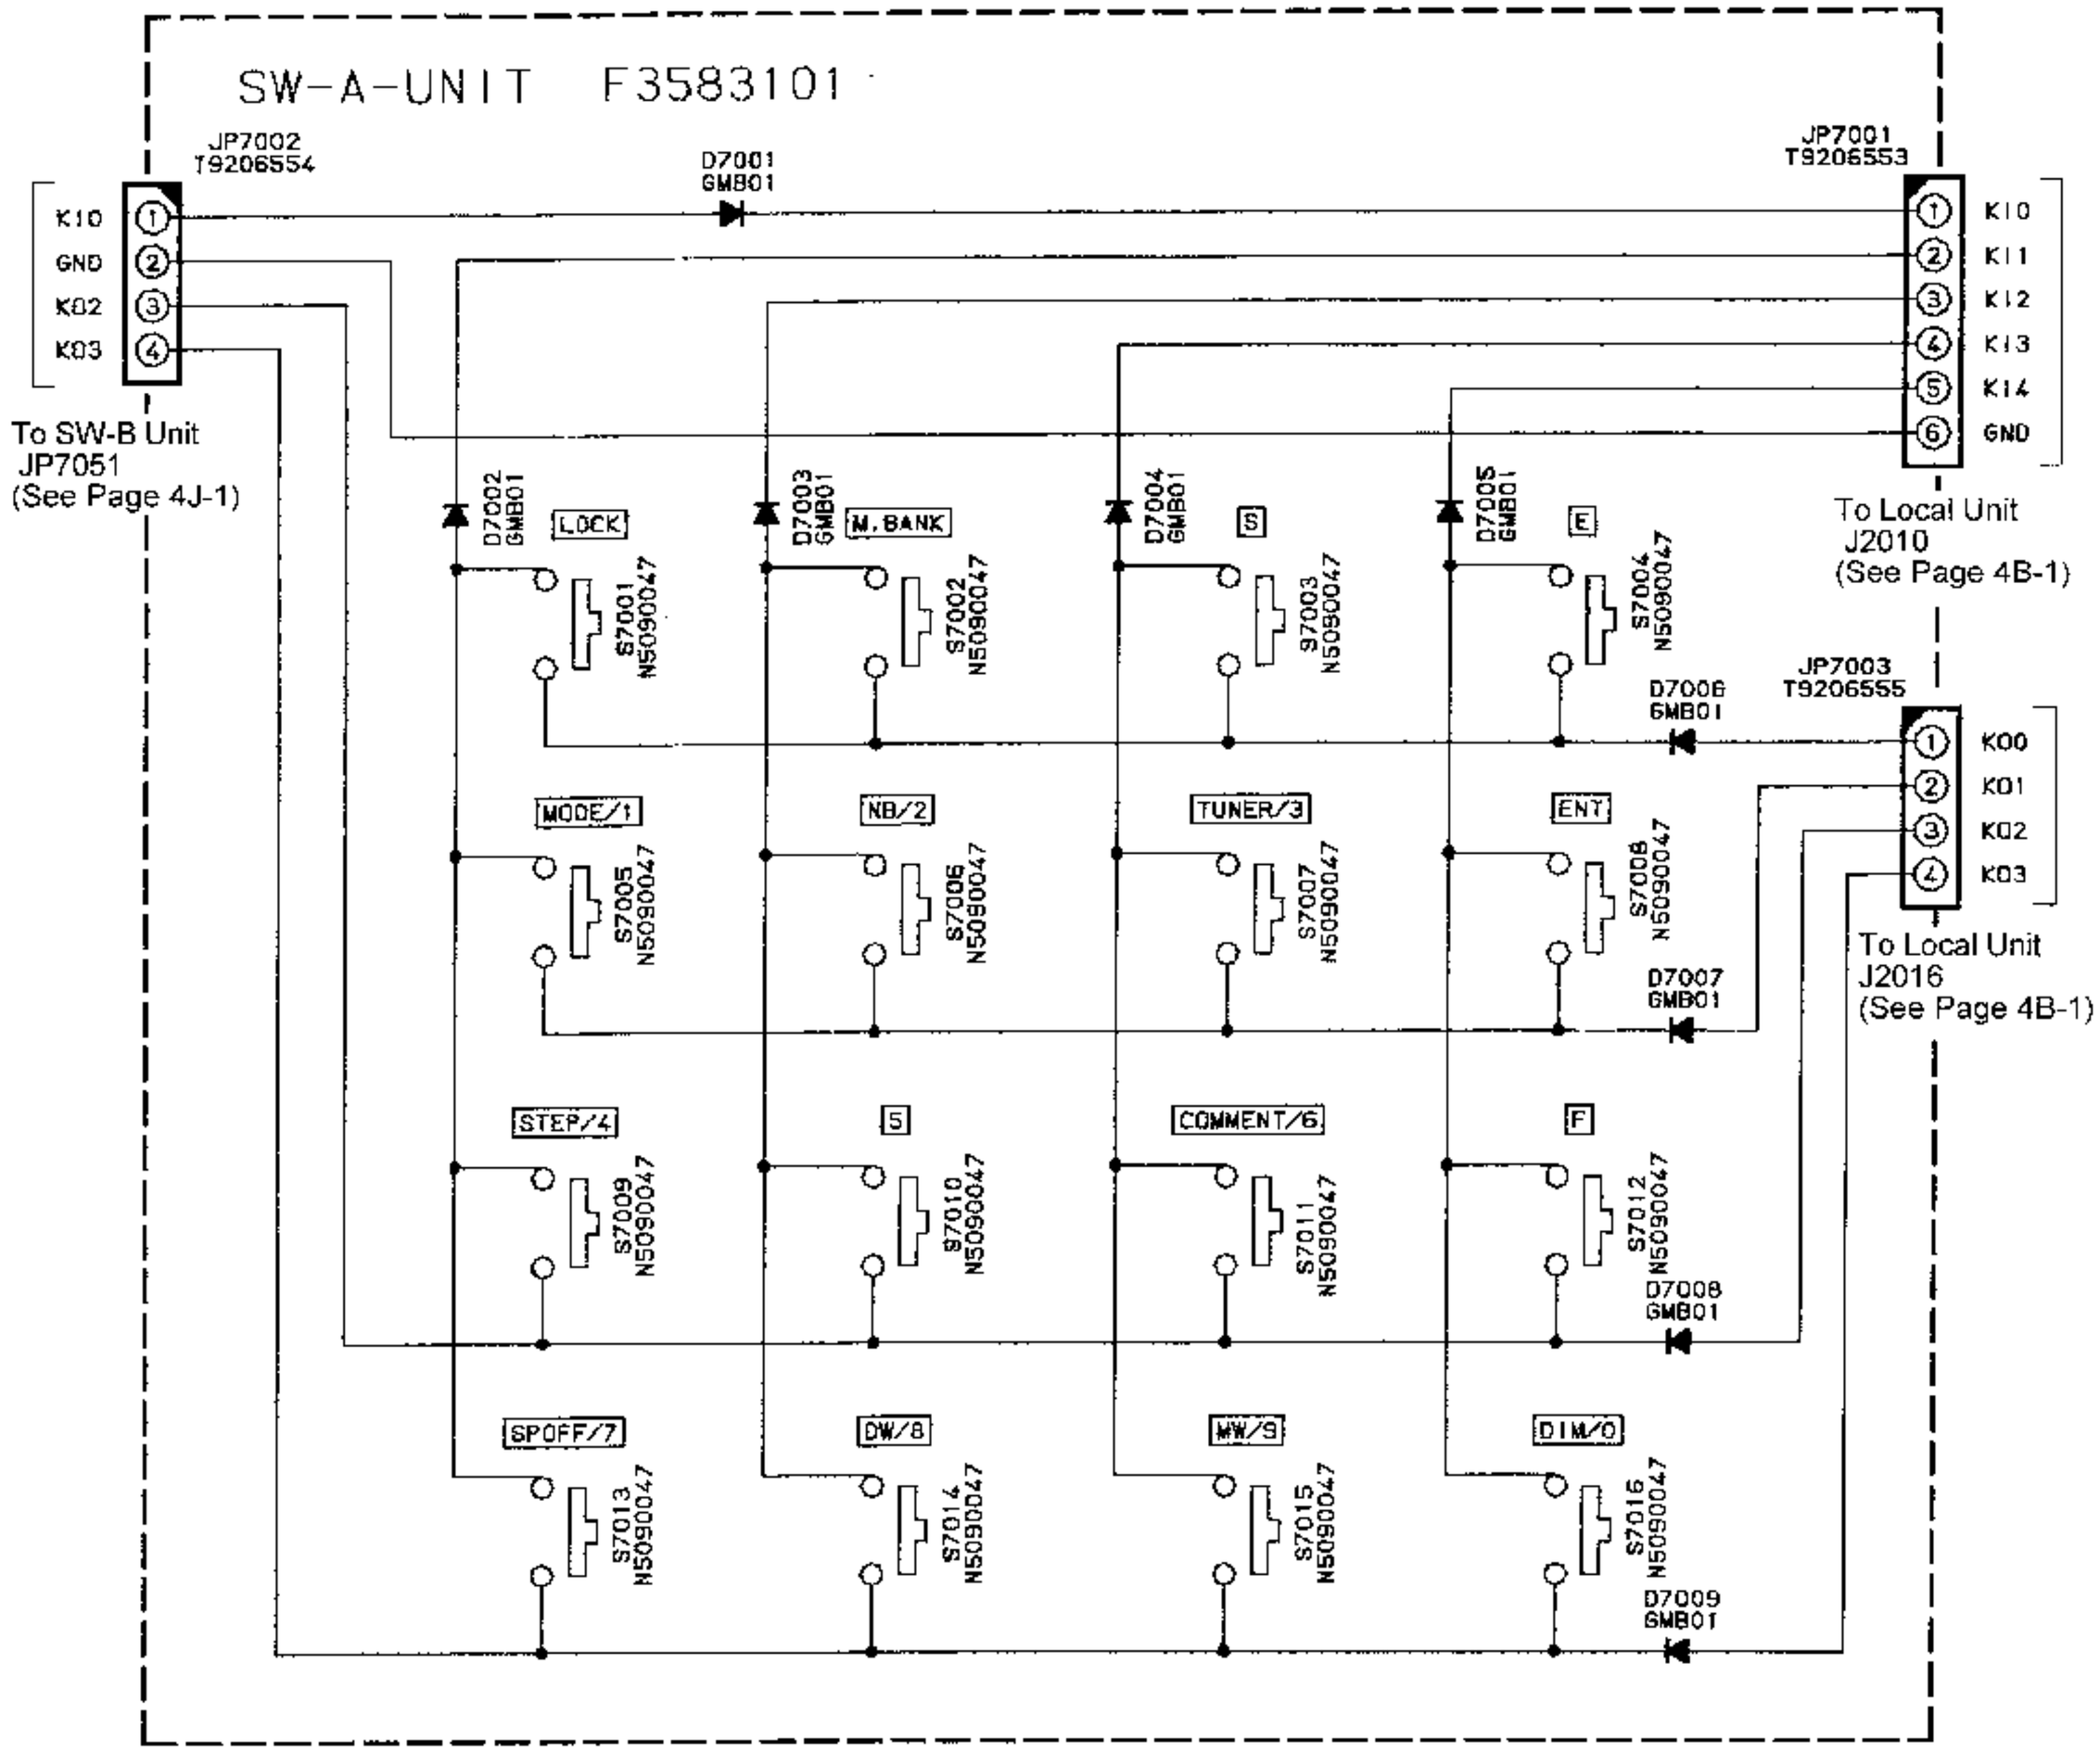


Parts Layout

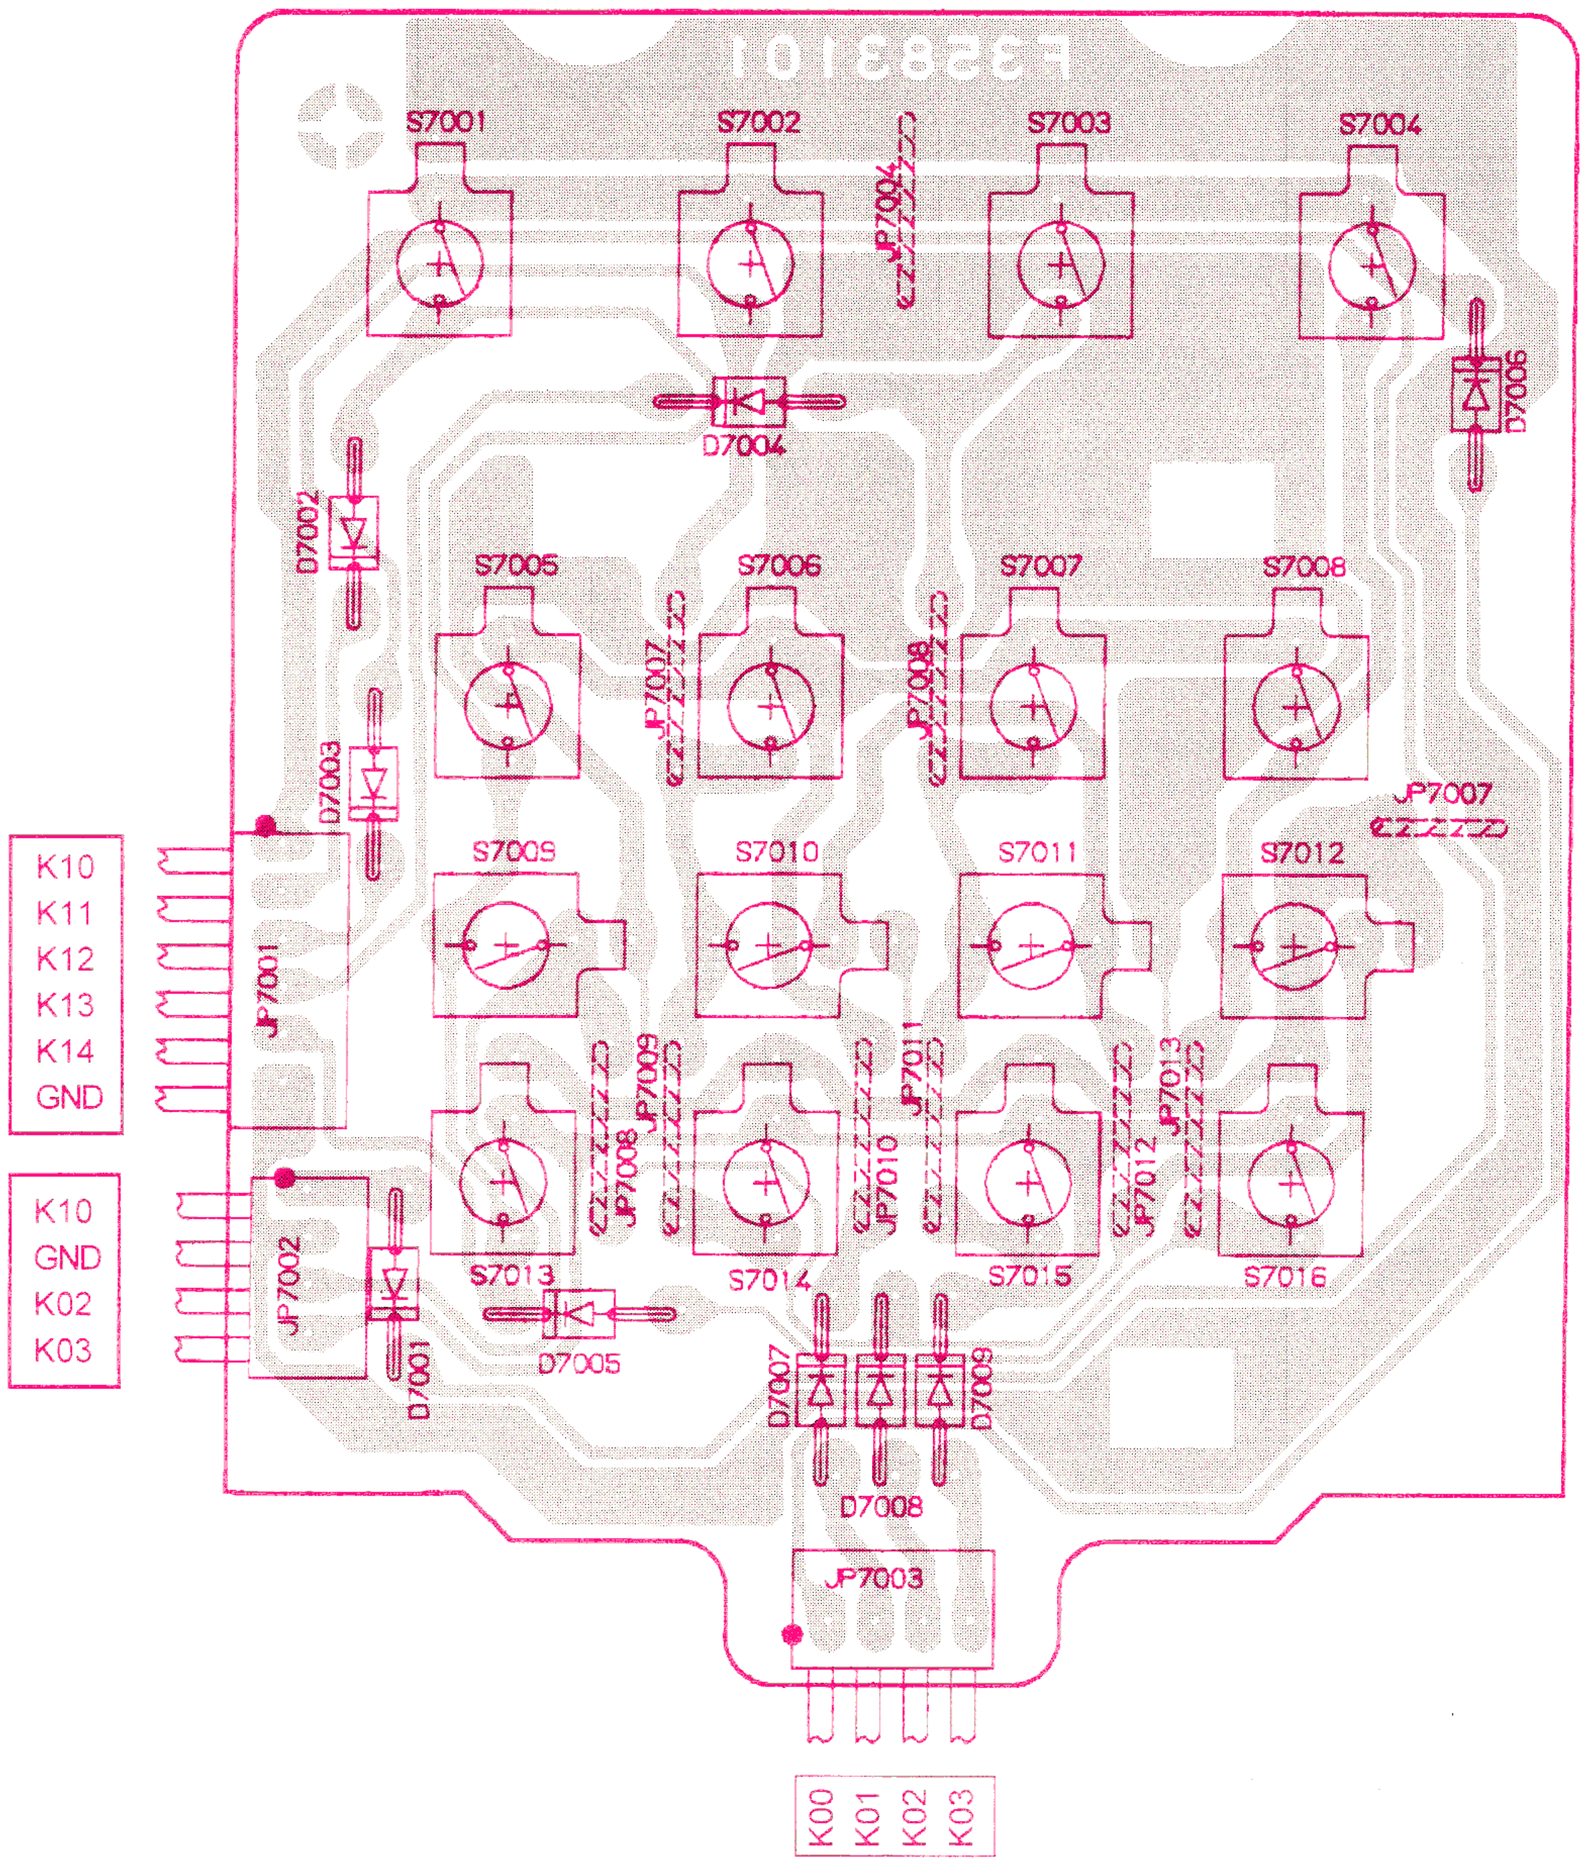


Component Side

Circuit Diagram

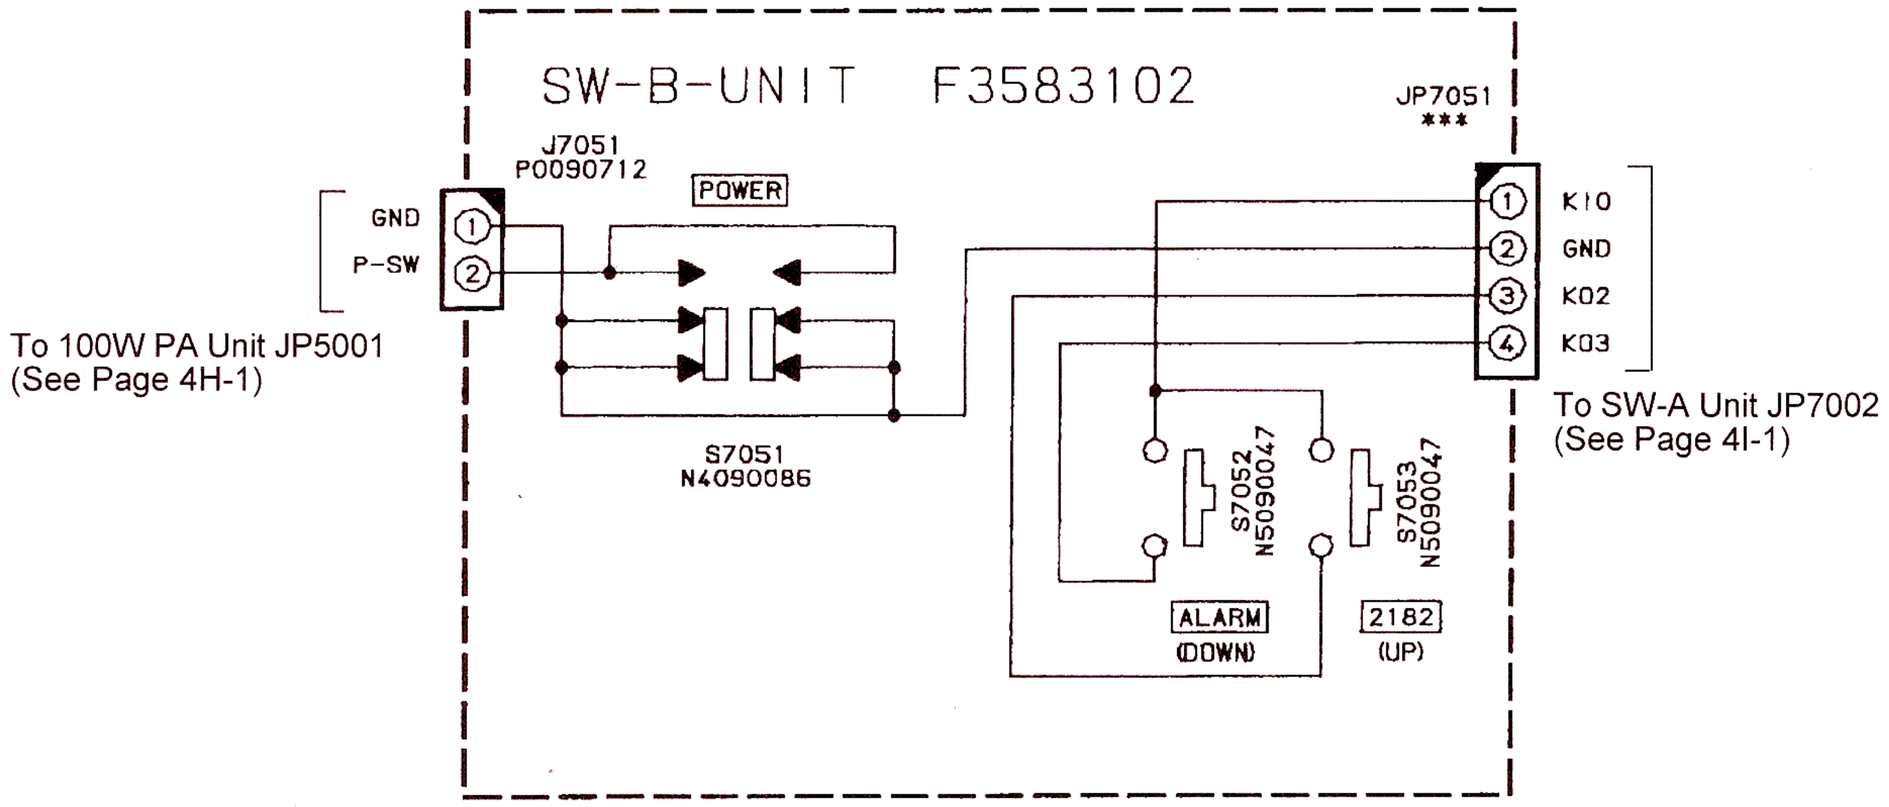

Parts Layout

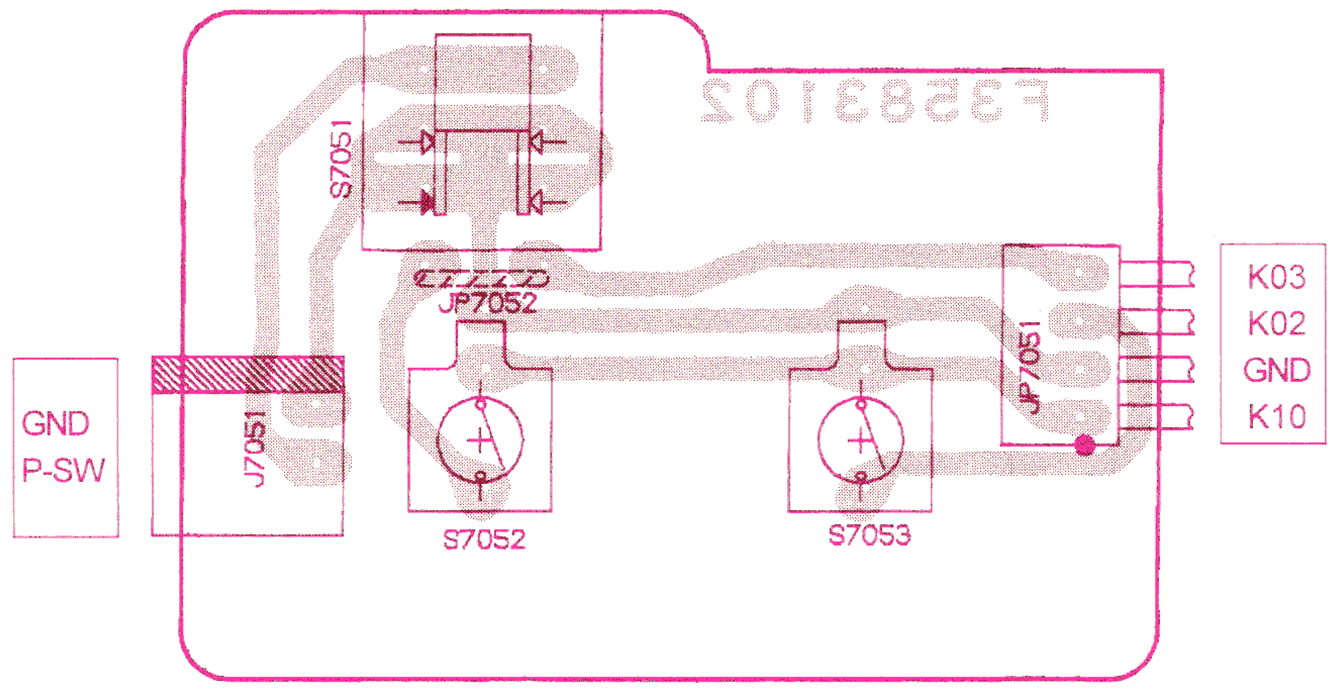


Component Side


Parts List

REF.	DESCRIPTION	VALUE	WV	TOL.	MFGR'S DESIG	YAESU P/N	VERS.	LOT.	LAY ADR
	*** SW-B UNIT ***								
	PCB with Components					CA1530001			
	Printed Circuit Board					F3583102			
J 7051	CONNECTOR				SC25-02WL	P0090712			
S 7051	PUSH SWITCH				SPH121A94	N4090086			
S 7052	TACT SWITCH				EVQ-333 H=9.5	N5090047			
S 7053	TACT SWITCH				EVQ-333 H=9.5	N5090047			


Circuit Diagram

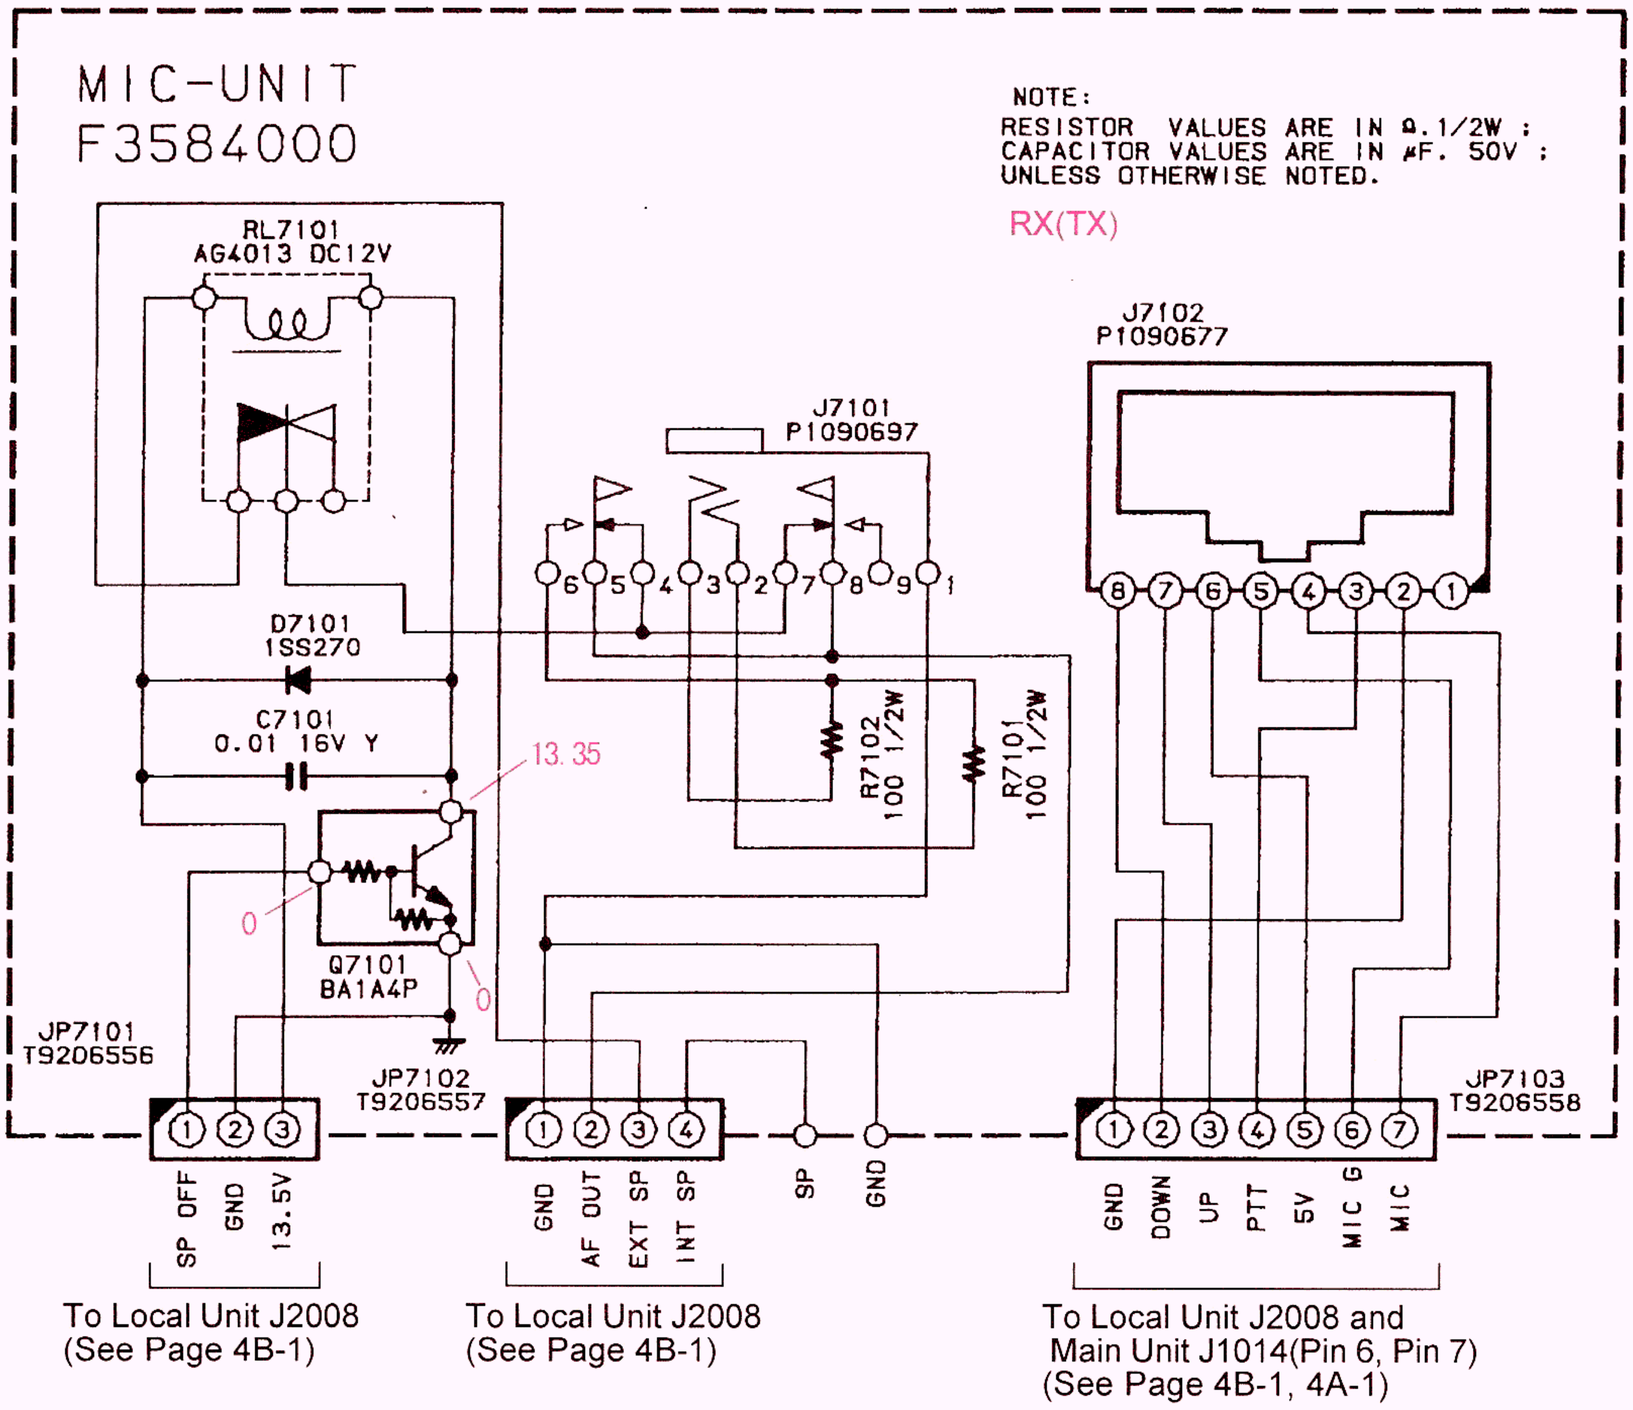

Parts Layout

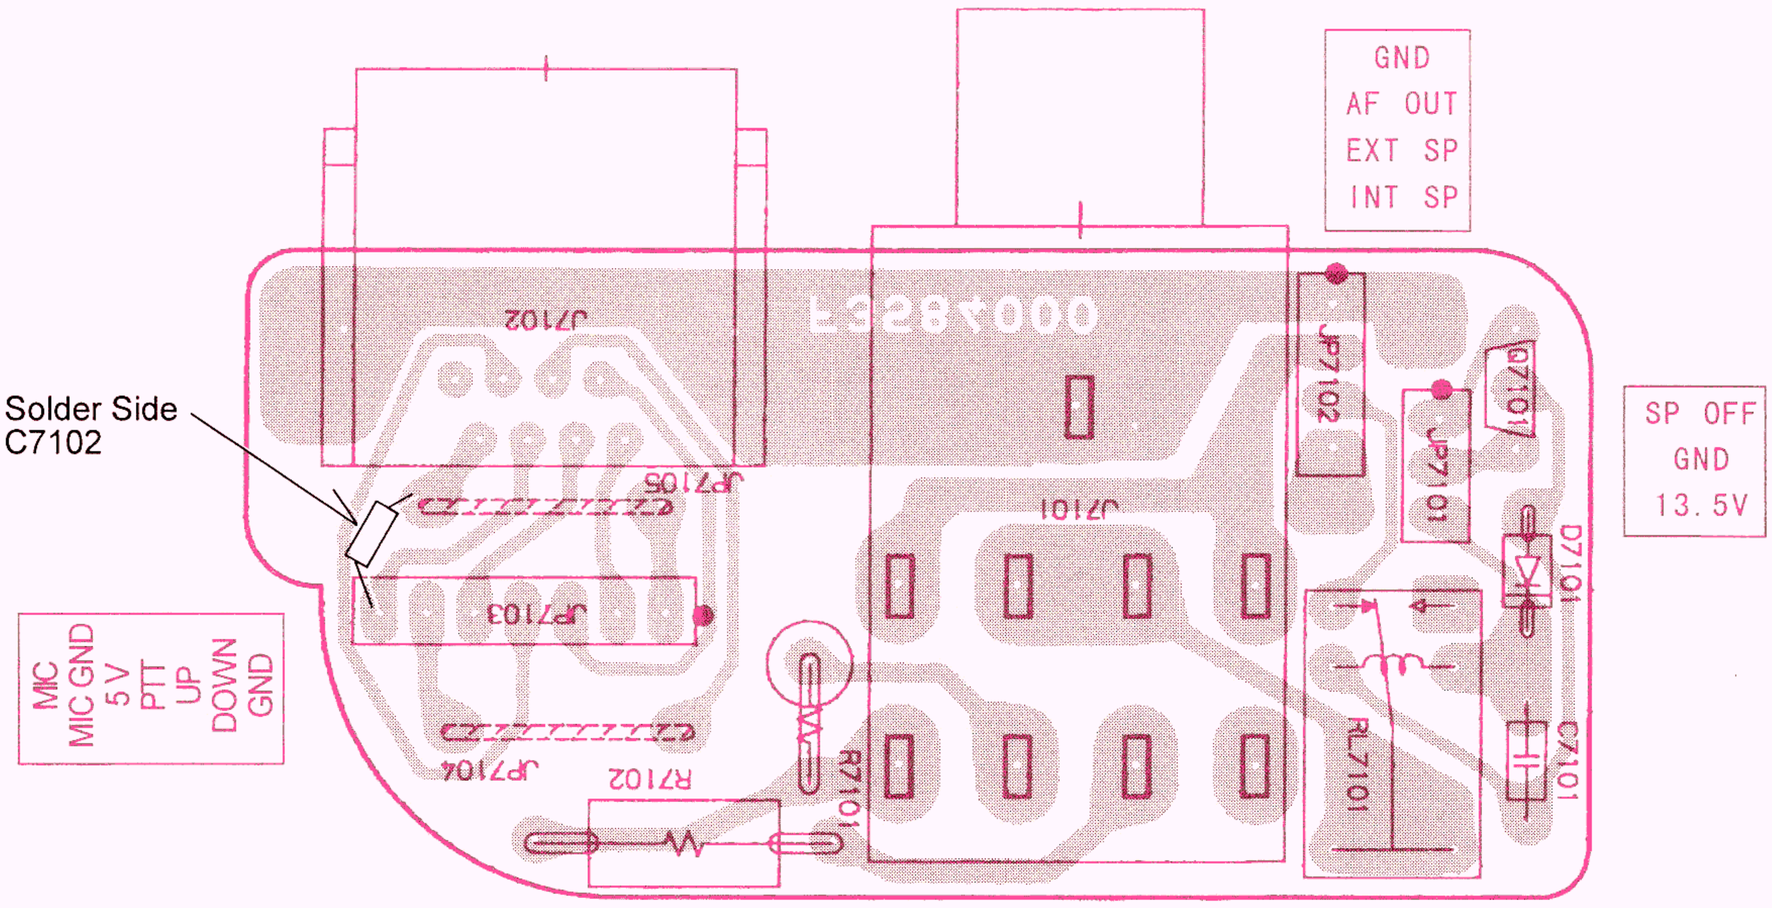


Component Side

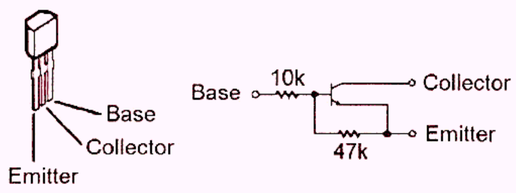


BA1A4P (Q7101)

Circuit Diagram

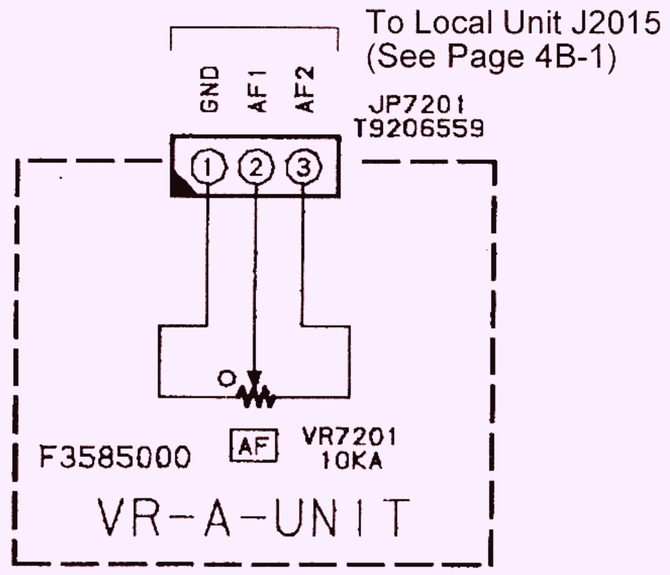

Parts Layout

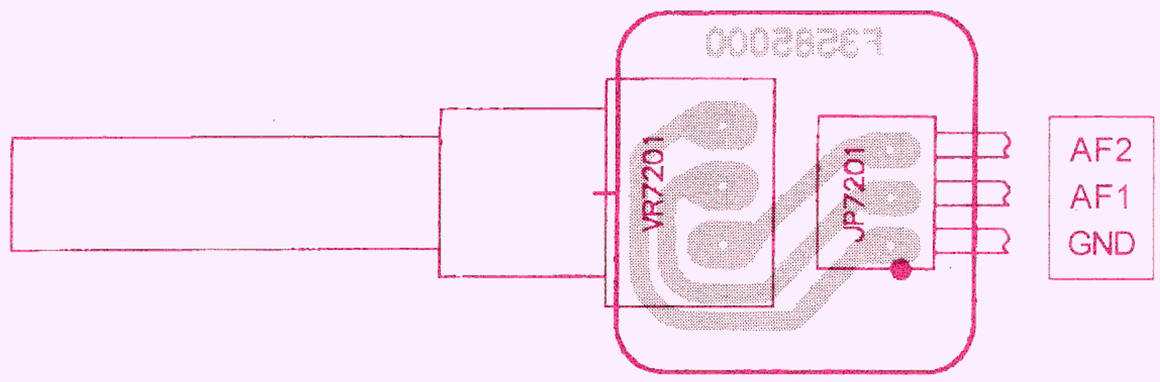


Component Side


Parts List

REF.	DESCRIPTION	VALUE	WV	TOL.	MFGR'S DESIG	YAESU P/N	VERS.	LOT.	LAY ADR
	*** VR-A UNIT ***								
	PCB with Components					CA1494001			
	Printed Circuit Board					F3585000			
JP7201	WIRE ASSY					T9206559			
VR7201	POT.	10KA			RK09711100TGA 10KA	J60800205			

Circuit Diagram

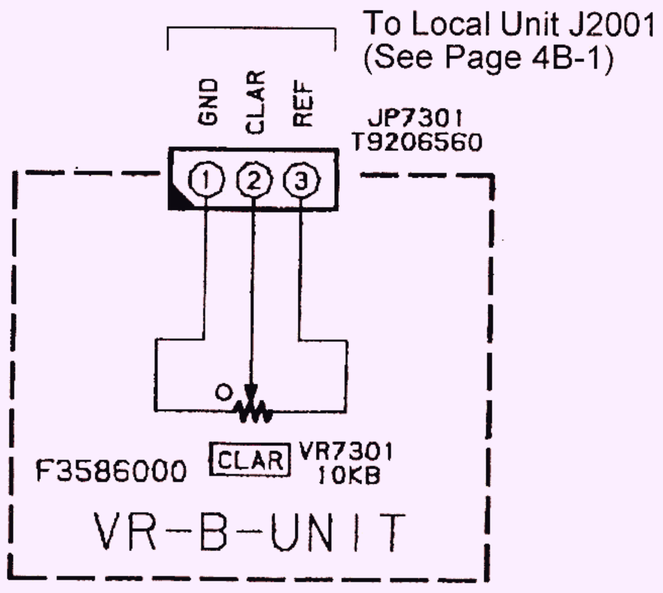

Parts Layout

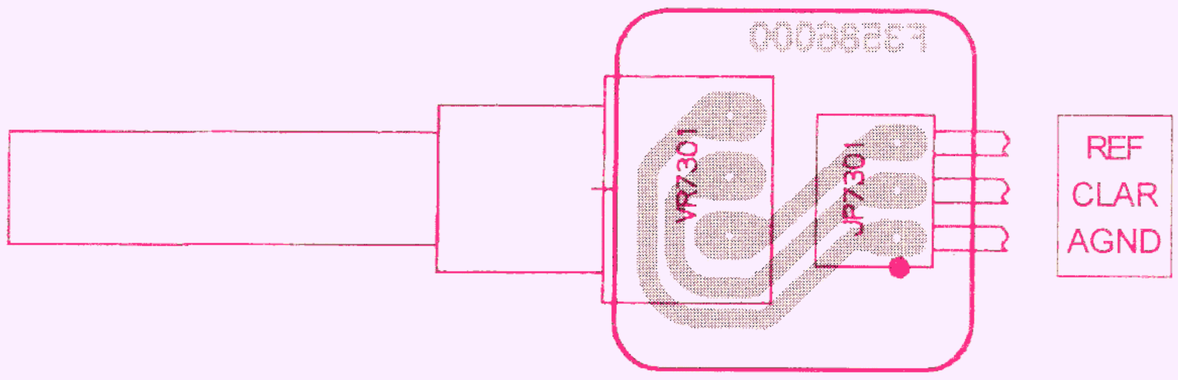


Component Side


Parts List

REF.	DESCRIPTION	VALUE	WV	TOL.	MFGR'S DESIG	YAESU P/N	VERS.	LOT.	LAY ADR
			*** VR -B UNIT ***						
	PCB with Components					CA1495001			
	Printed Circuit Board					F3586000			
JP7301	WIRE ASSY					T9206560			
VR7301	POT.	10KB			RK0971110D62A 10KB	J60800195			

Circuit Diagram

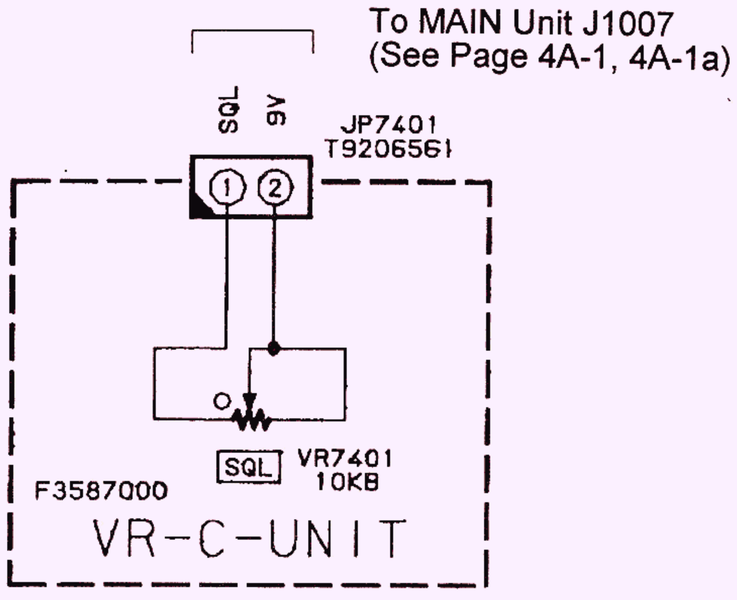

Parts Layout

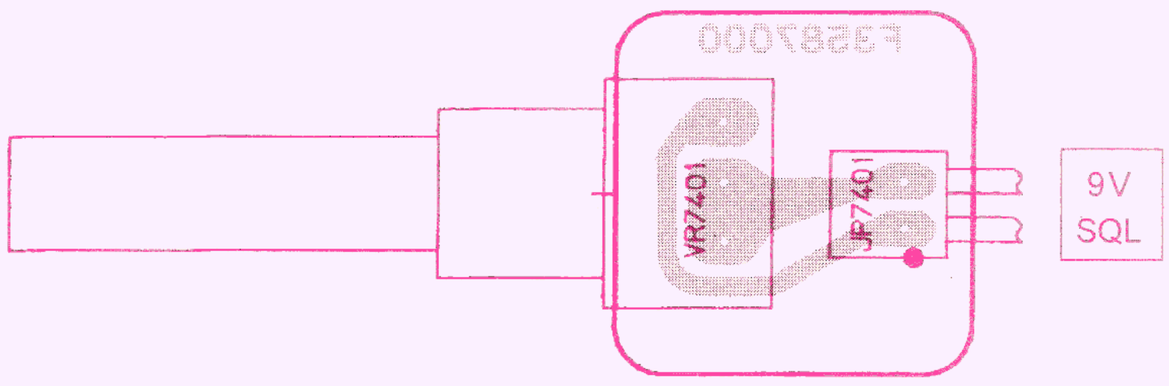


Component Side


Parts List

REF.	DESCRIPTION	VALUE	WV	TOL.	MFGR'S DESIG	YAESU P/N	VERS.	LOT.	LAY ADR
	*** VR-C UNIT ***								
	PCB with Components					CA1496001			
	Printed Circuit Board					F3587000			
JP7401	WIRE ASSY					T9206561			
VR7401	POT.	10KB			RK09711100THA 10KB	J60800196			


Circuit Diagram

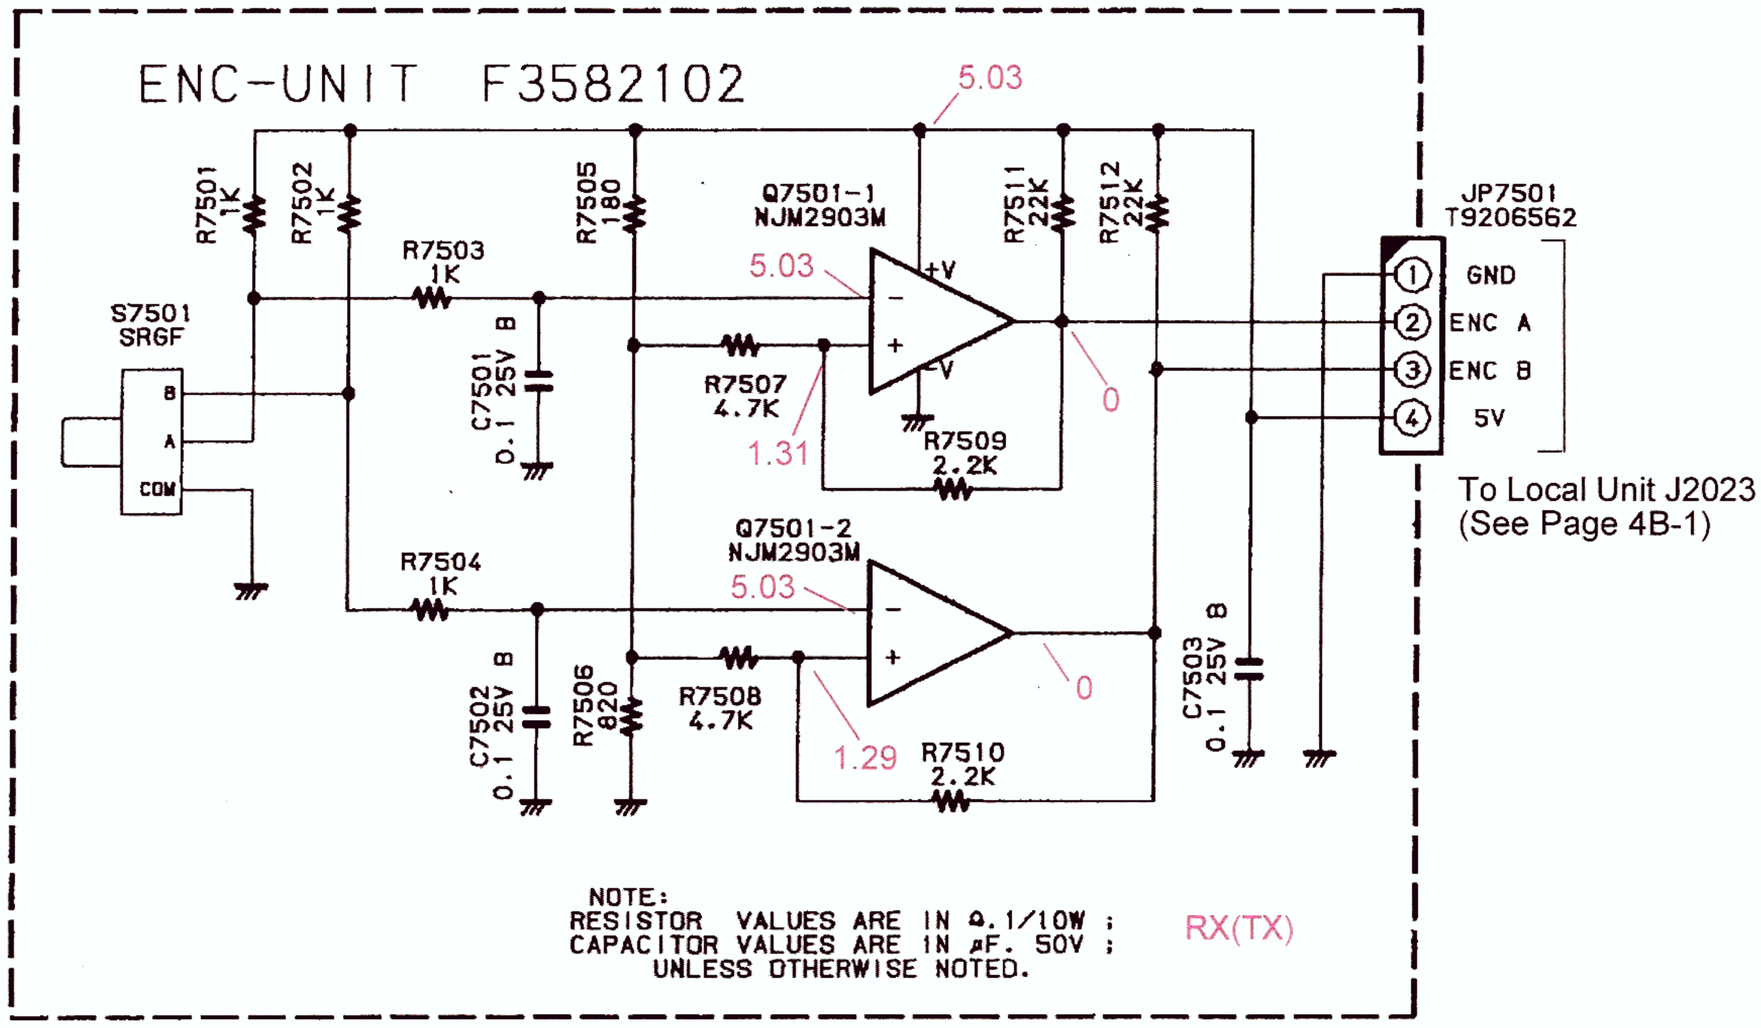


Parts Layout

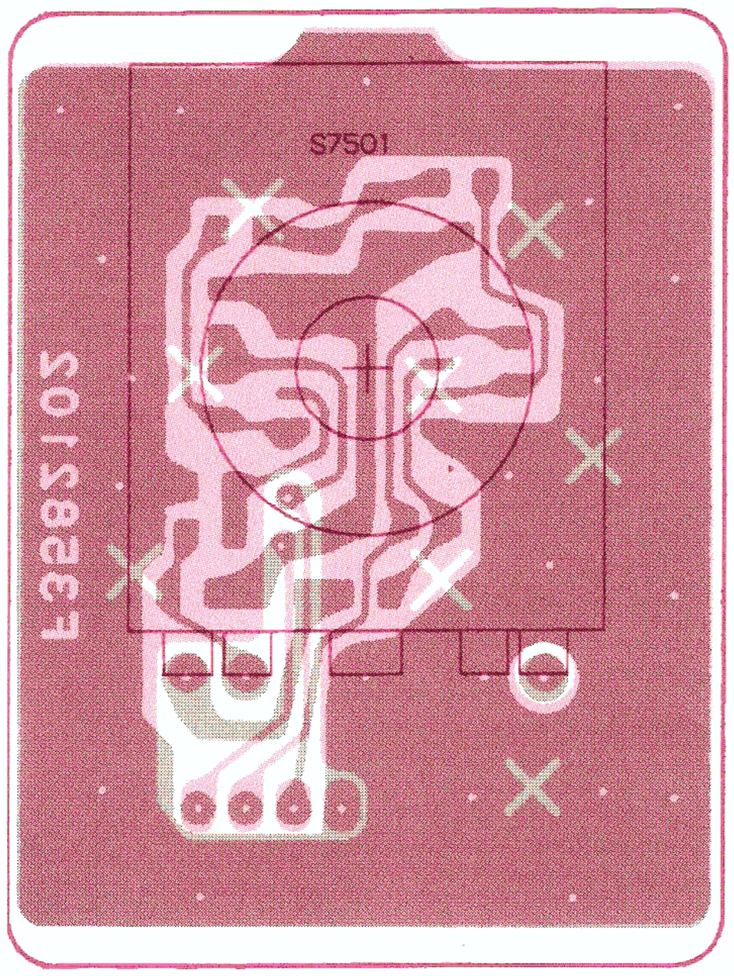


Component Side

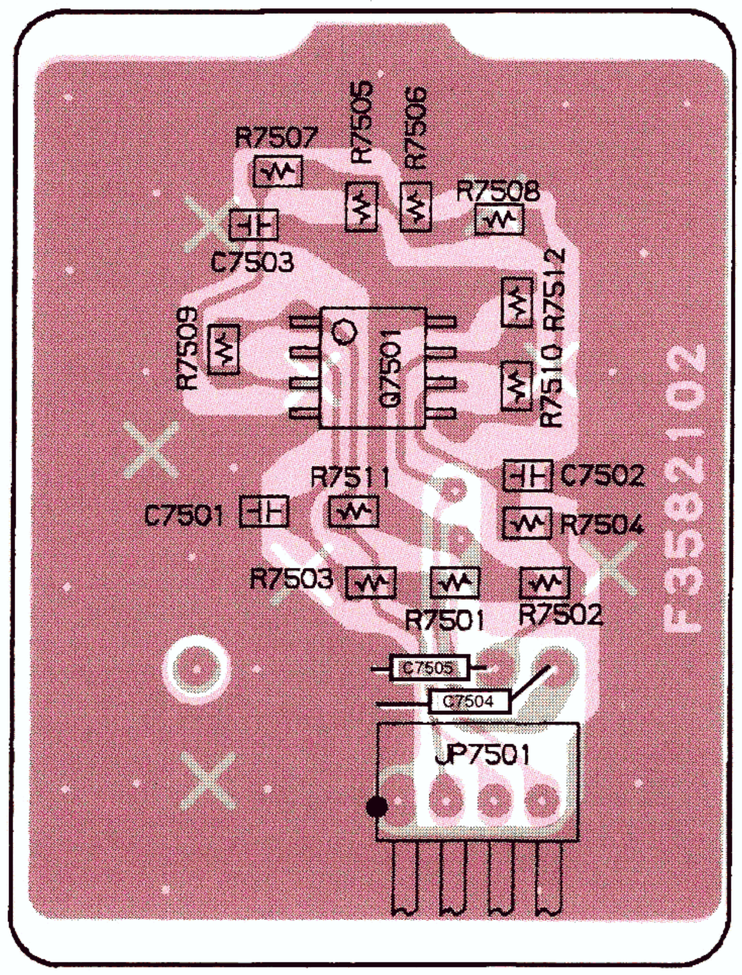

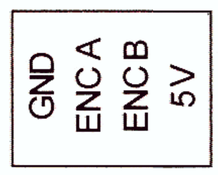


Chip Side

Circuit Diagram

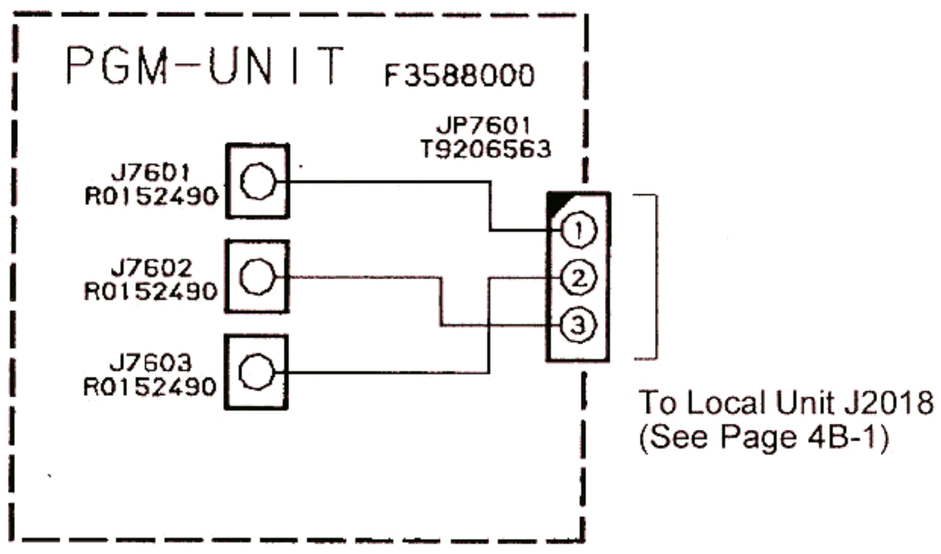

Parts Layout

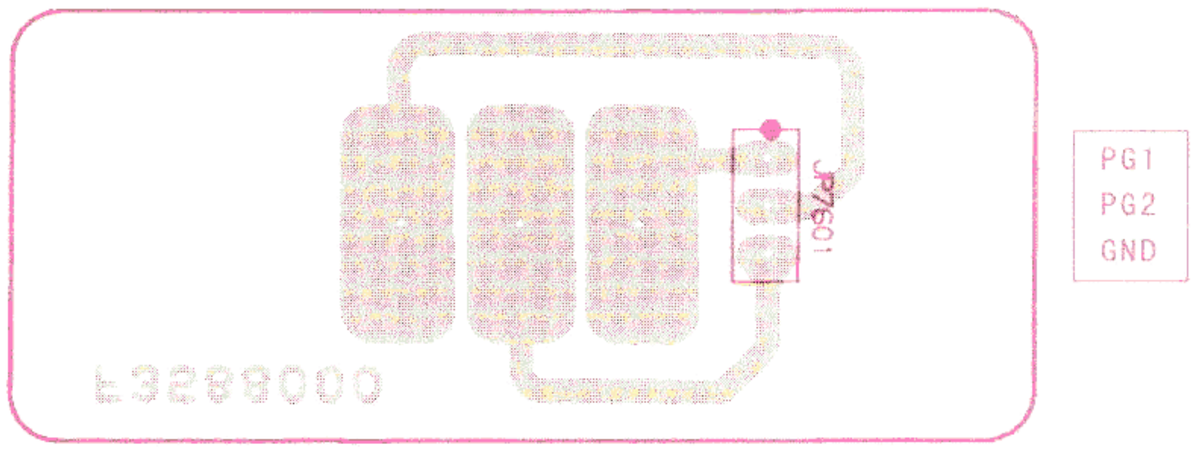


Component Side


Parts List

REF.	DESCRIPTION	VALUE	WV	TOL.	MFGR'S DESIG	YAESU P/N	VERS.	LOT.	LAY ADR
	*** PGM UNIT ***								
	PCB with Components					CA1528001			
	Printed Circuit Board					F3588000			
J 7601	SPRING CONNECTOR					R0152490			
J 7602	SPRING CONNECTOR					R0152490			
J 7603	SPRING CONNECTOR					R0152490			
JP7601	WIRE ASSY A0604					T9206563			


Circuit Diagram

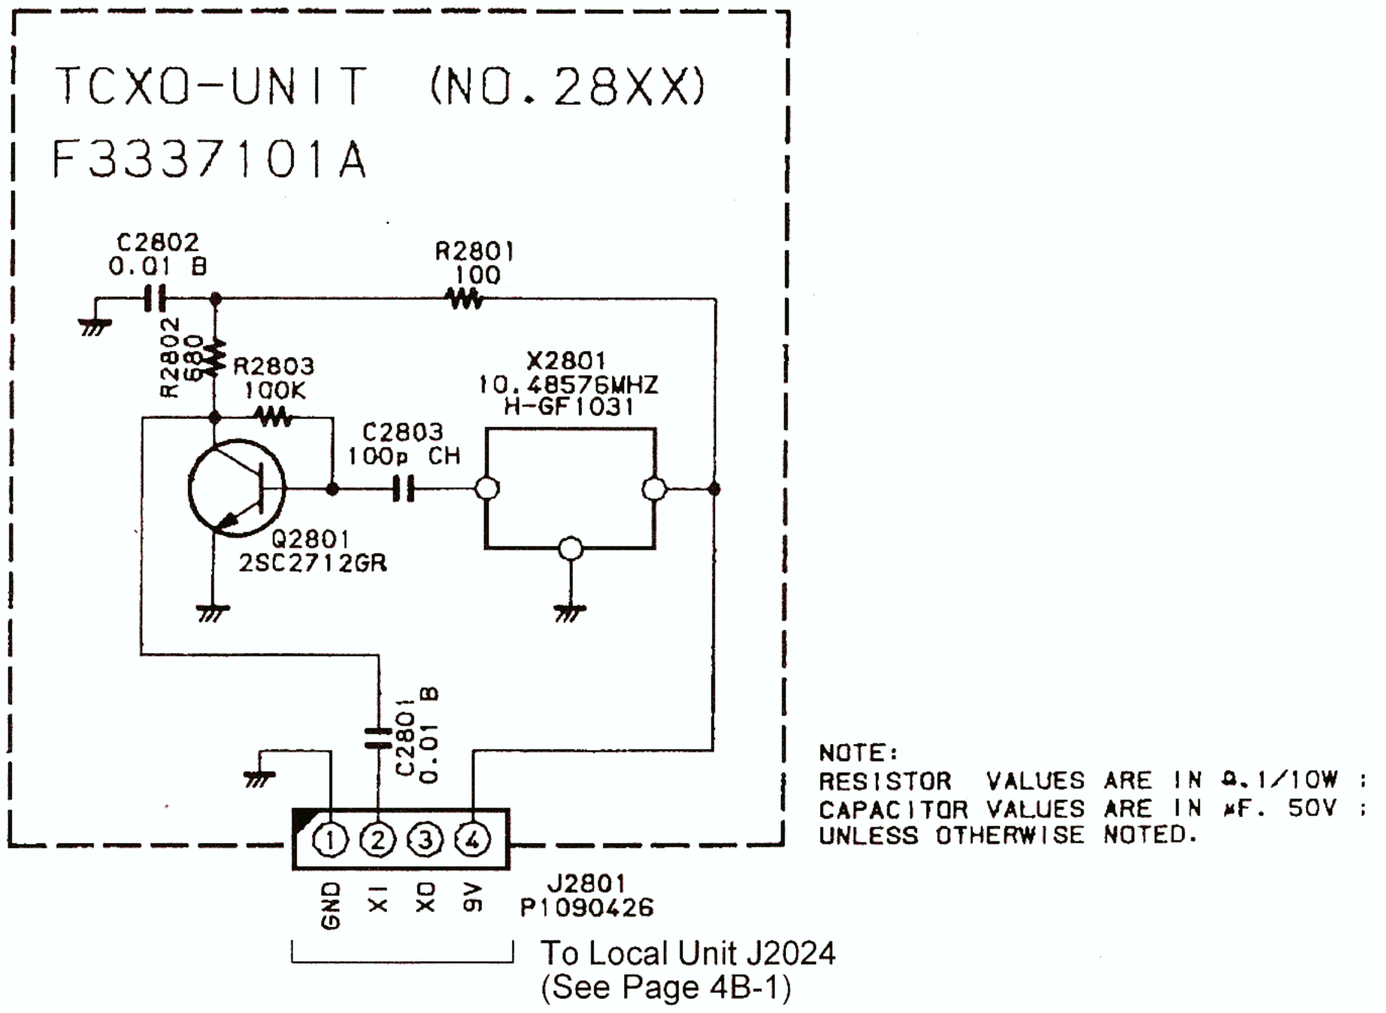

Parts Layout

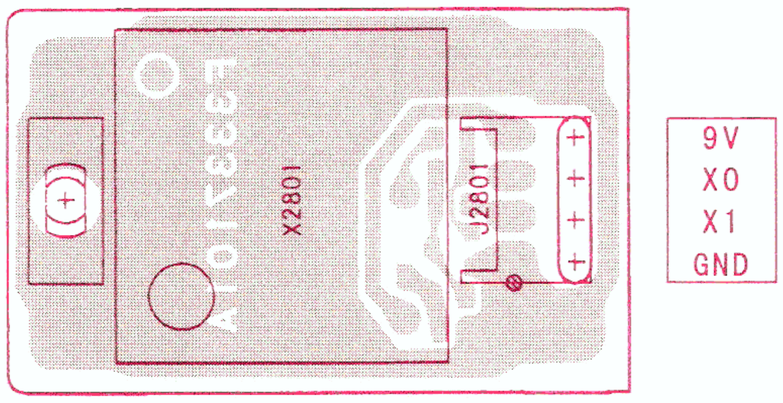


Component Side

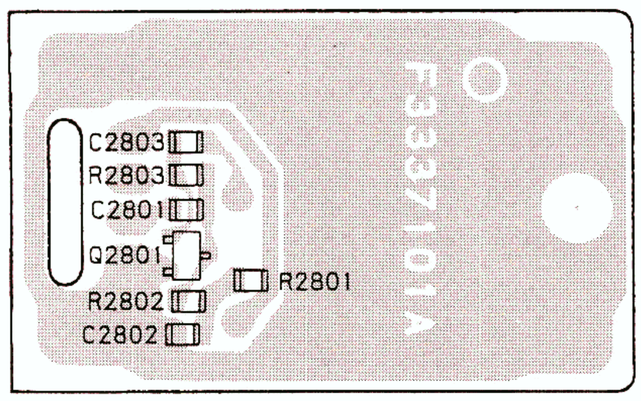


Chip Side


Parts List

REF.	DESCRIPTION	VALUE	WV	TOL.	MFGR'S DESIG	YAESU P/N	VERS.	LOT.	LAY ADR
		*** TCX-4 ***							
	Printed Circuit Board					F3337101A			
C 2801	CHIP CAP.	0.01uF	50V	B	GRM40B103M50PT	K22170817			
C 2802	CHIP CAP.	0.01uF	50V	B	GRM40B103M50PT	K22170817			
C 2803	CHIP CAP.	33pF	50V	CH	GRM40CH330J50PT	K22170223			
J 2801	CONNECTOR				5124-04BHPB	P1090426			
Q 2801	TRANSISTOR				2SC2712GR	G3327127G			
R 2801	CHIP RES.	100	1/10W	5%	RMC1/10T 101J	J24205101			
R 2802	CHIP RES.	1K	1/10W	5%	RMC1/10T 102J	J24205102			
R 2803	CHIP RES.	100K	1/10W	5%	RMC1/10T 104J	J24205104			
X 2801	XTAL	10.48576MHz				GF-1031	H9500140		

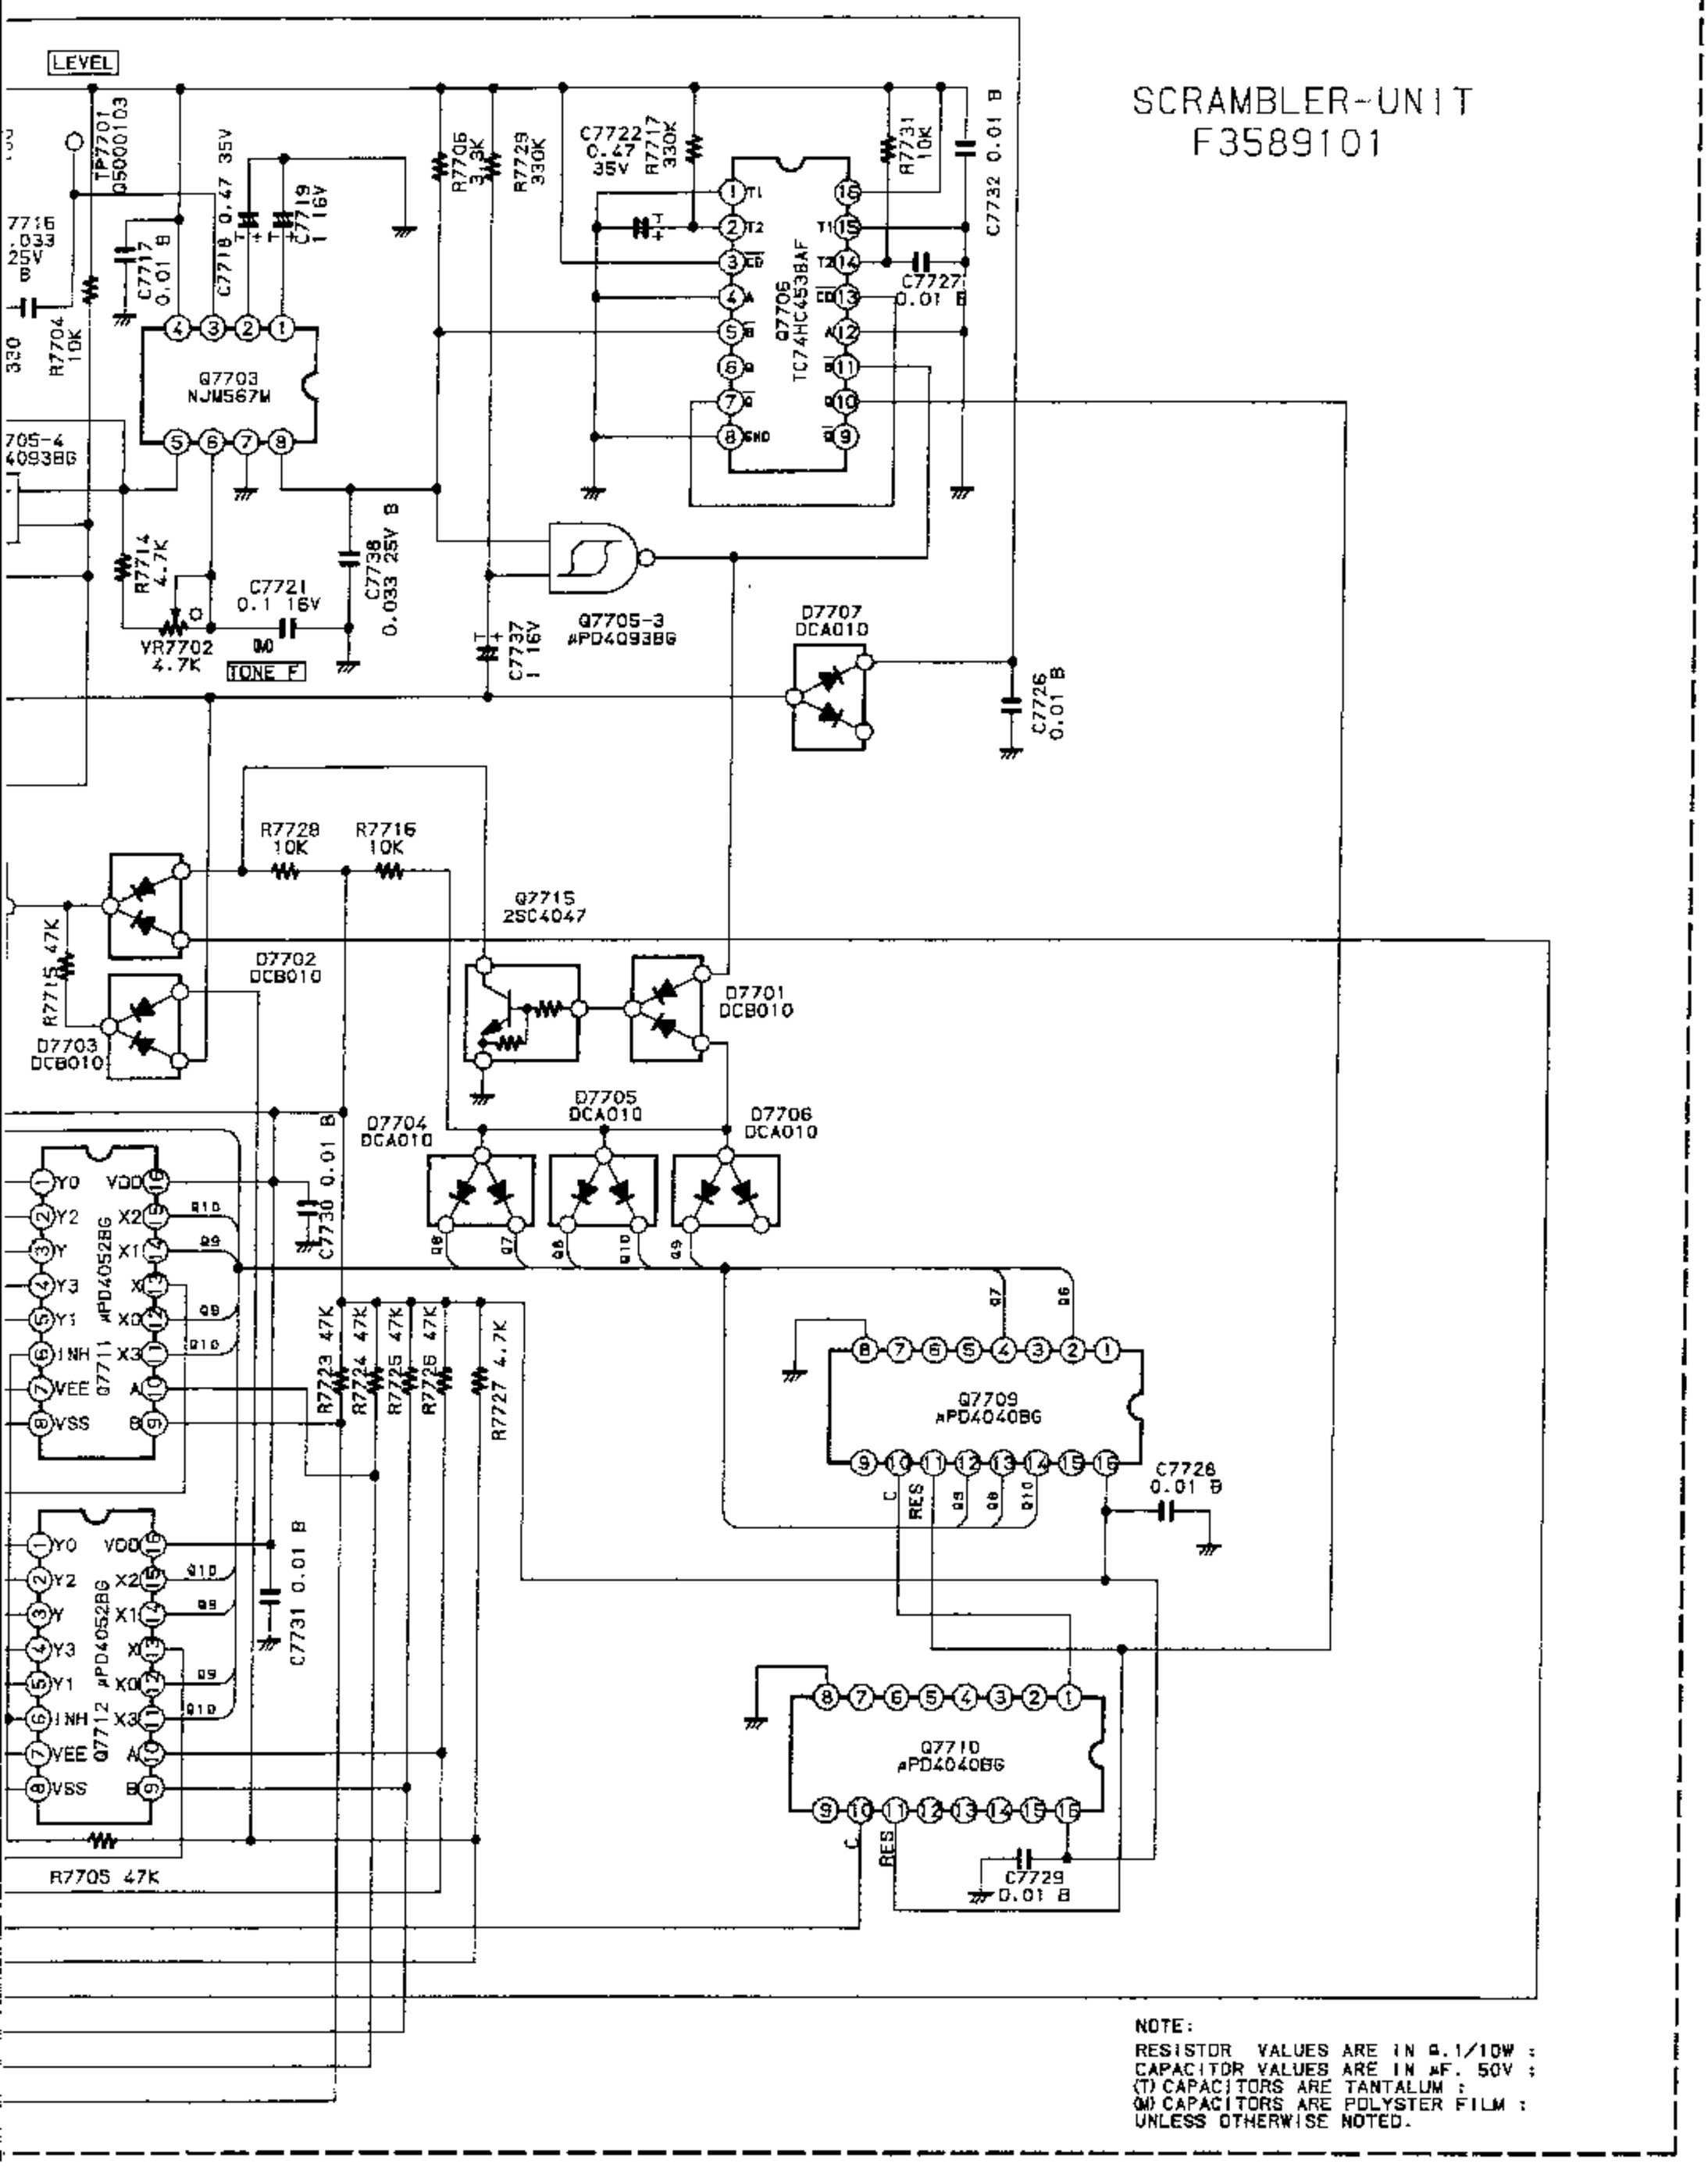

SCRAMBLER-UNIT
F3589101
LEVEL
TP7701
Q5000103
R7704
10K
C7717
0.01 B
C7718 0.47 35V
C7719
1 16V
Q7703
NJM567M
R7706
3.3K
R7729
330K
C7722
0.47
35V
R7717
330K
Q7706
TC74HC4538AF
R7731
10K
C7732 0.01 B
C7727
0.01 B
R7714
4.7K
VR7702
4.7K
C7721
0.1 16V
TONE F
C7738
0.033 25V B
Q7705-3
μPD4093BG
C7737
1 16V
D7707
DCA010
C7726
0.01 B
R7728
10K
R7716
10K
Q7715
2SC4047
R7715 47K
D7702
DCB010
D7703
DCB010
D7701
DCB010
D7705
DCA010
D7704
DCA010
D7706
DCA010
C7730 0.01 B
Q7711 μPD4052BG
Q7712 μPD4052BG
R7723 47K
R7724 47K
R7725 47K
R7726 47K
R7727 4.7K
C7731 0.01 B
R7705 47K
Q7709
μPD4040BG
C7728
0.01 B
Q7710
μPD4040BG
C7729
0.01 B
NOTE:
RESISTOR VALUES ARE IN Ω.1/10W :
CAPACITOR VALUES ARE IN μF. 50V :
(T) CAPACITORS ARE TANTALUM :
(M) CAPACITORS ARE POLYSTER FILM :
UNLESS OTHERWISE NOTED.

Circuit Diagram

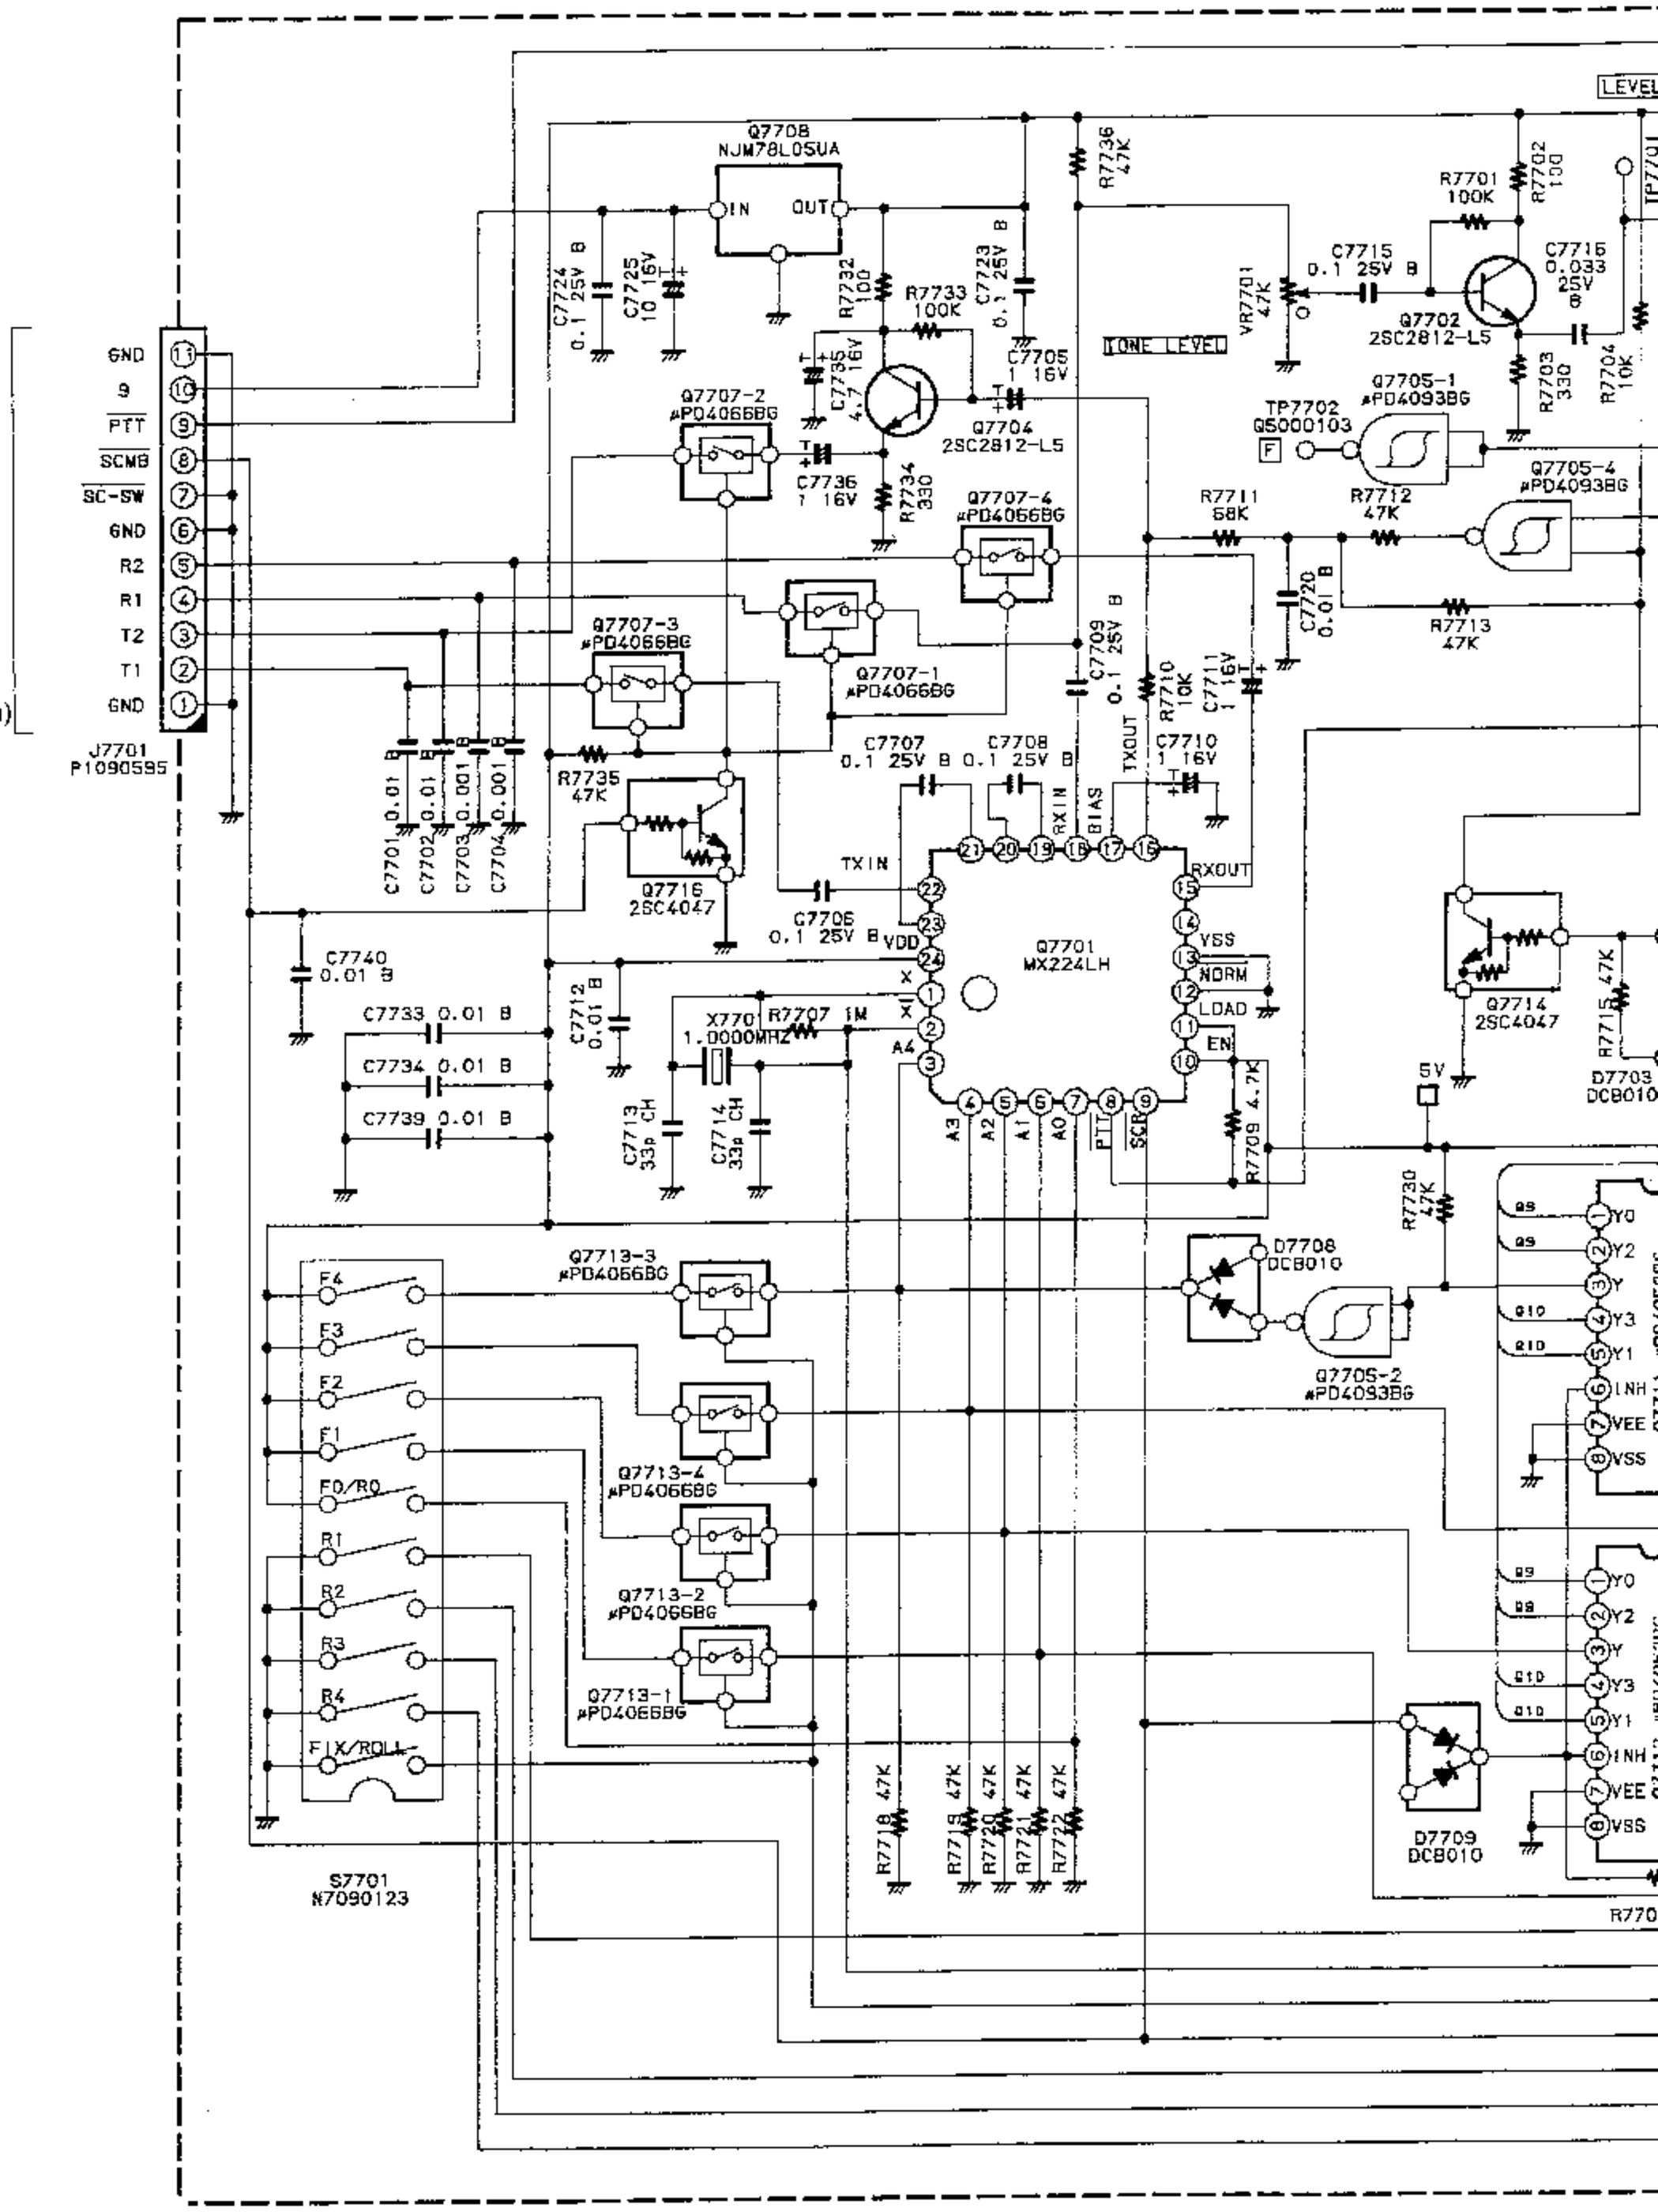


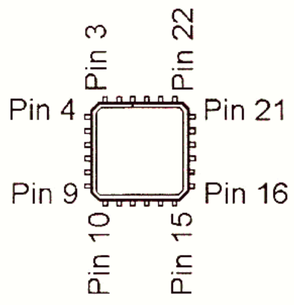


MX224LH
(Q7701)

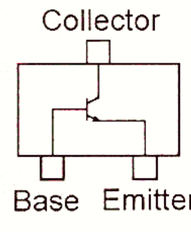


2SC2812 (L5)
(Q7702, 7704)

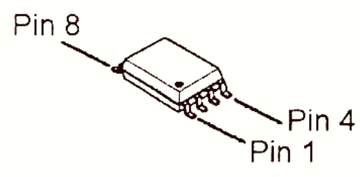


NJM567M
(Q7703)

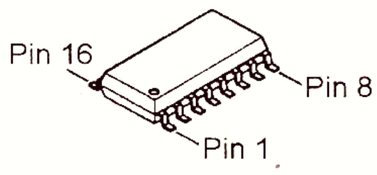


TC74HC4538AF
(Q7706)
µPD4040BG
(Q7709, 7710)

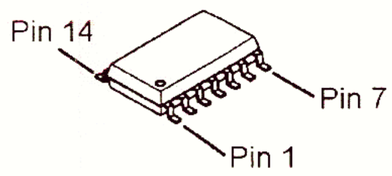


µPD4093BG
(Q7705)
µPD4066BG
(Q7707, 7713)

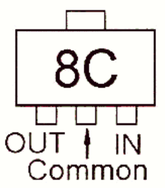


NJM78L05UA (8C)
(Q7708)

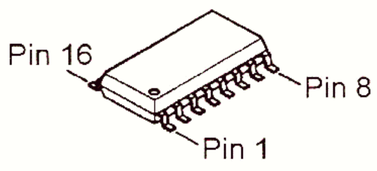


µPD4052BG
(Q7711, 7712)

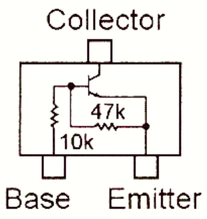

2SC4047 (ZY)
(Q7714, 7715, 7716)

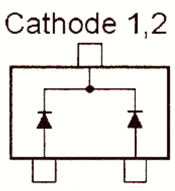


DCB010 (W6)
(D7701, 7702, 7703, 7708, 7709)

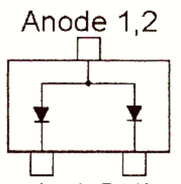


DCA010 (W5)
(D7704, 7705, 7706, 7707)

Parts Layout

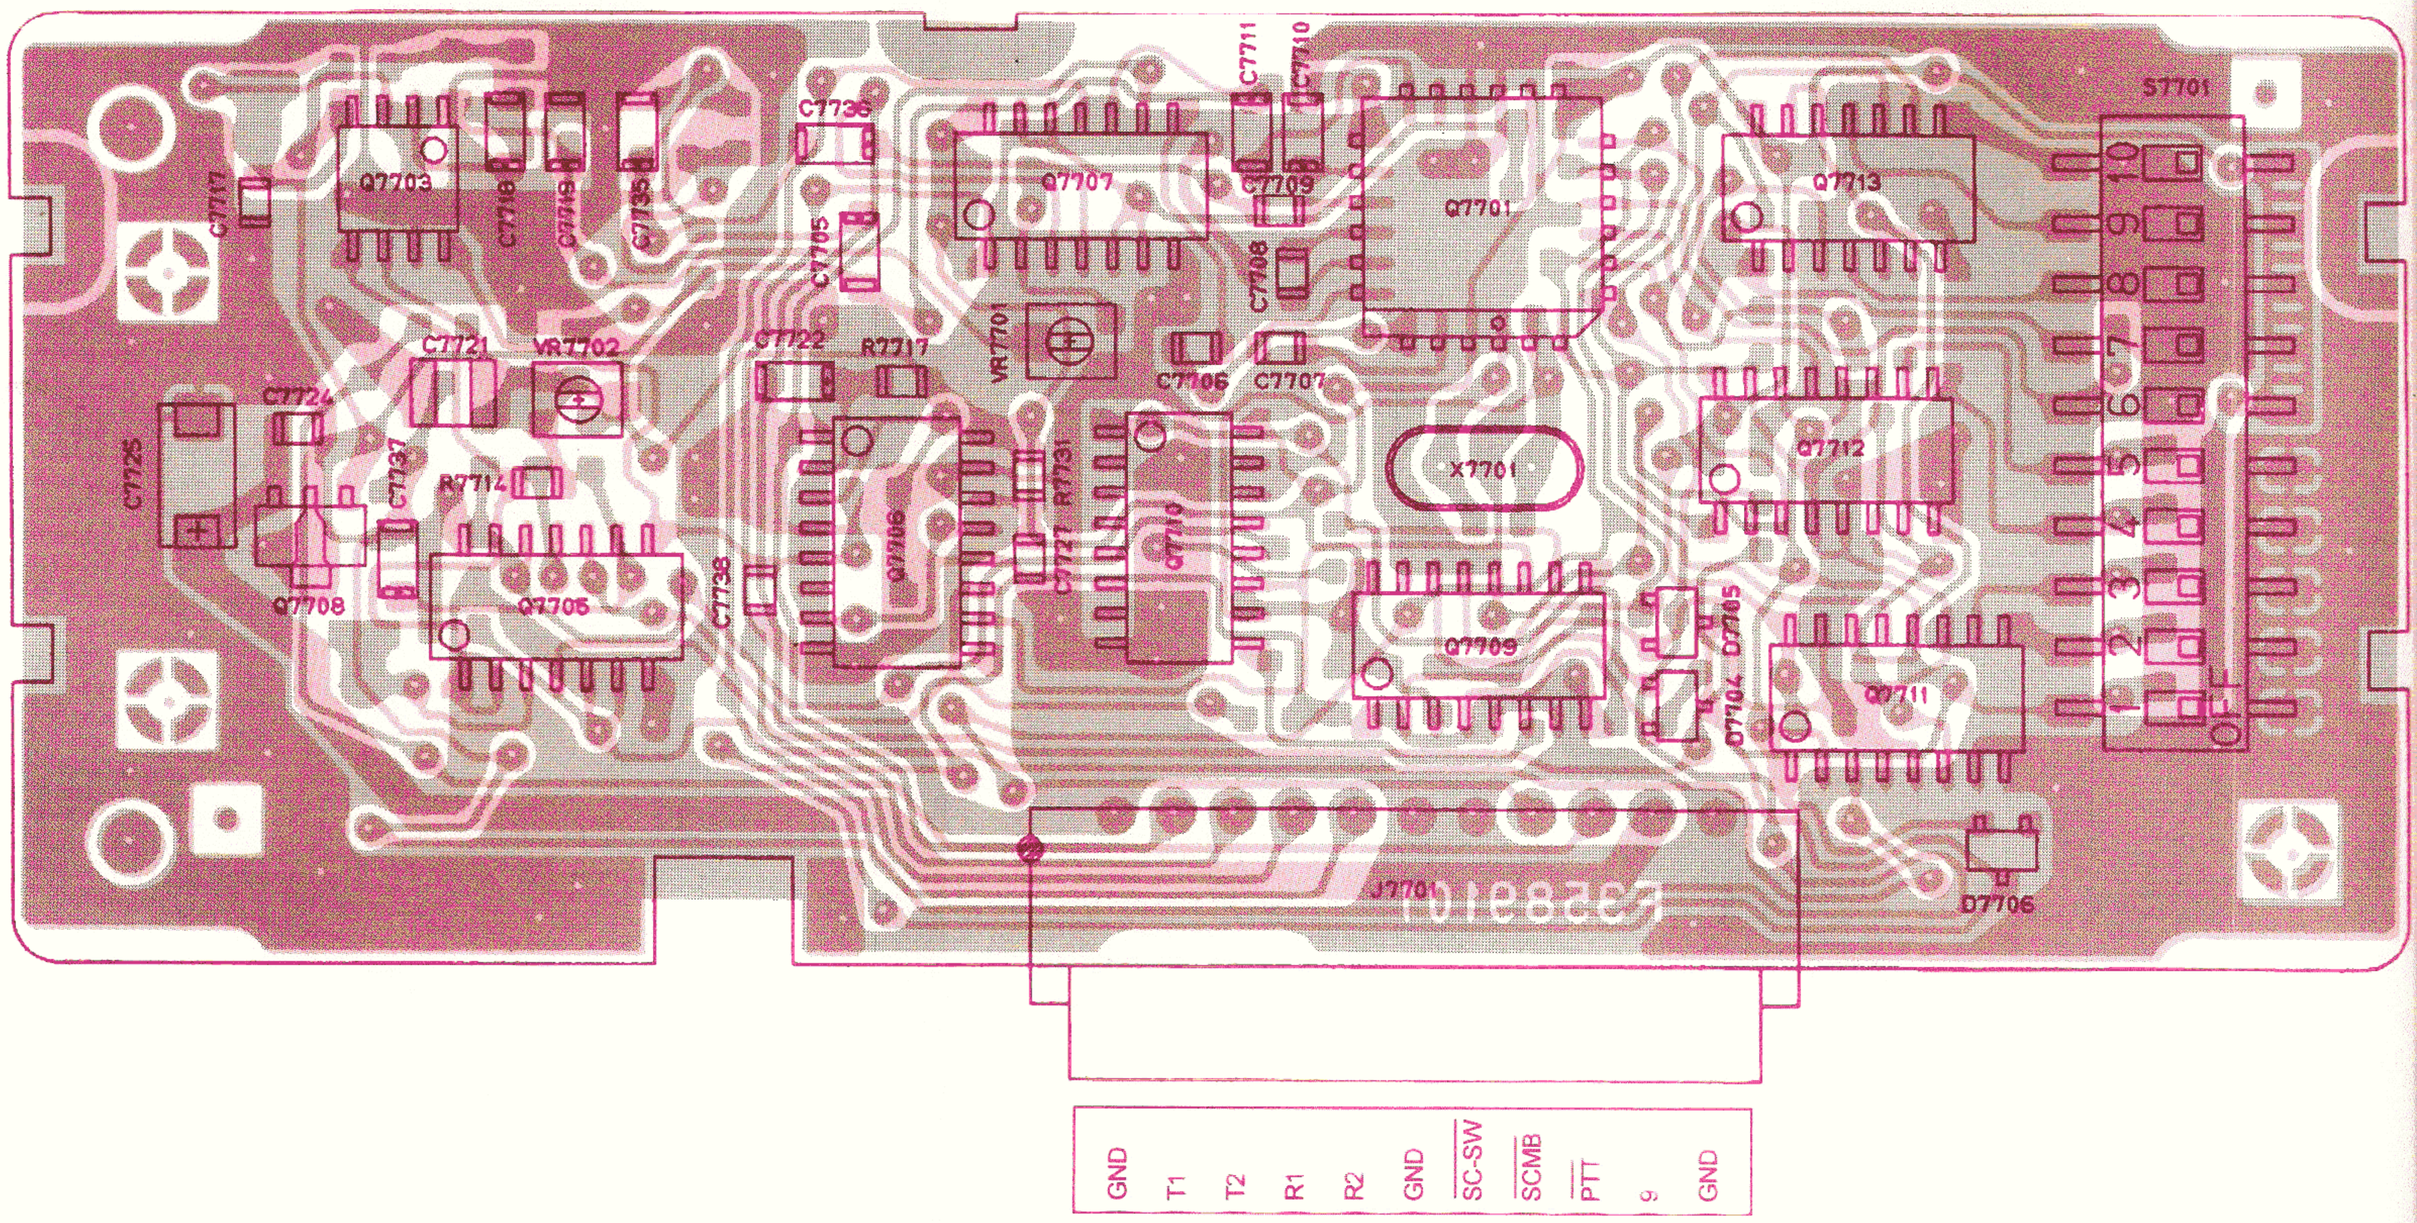

Component Side

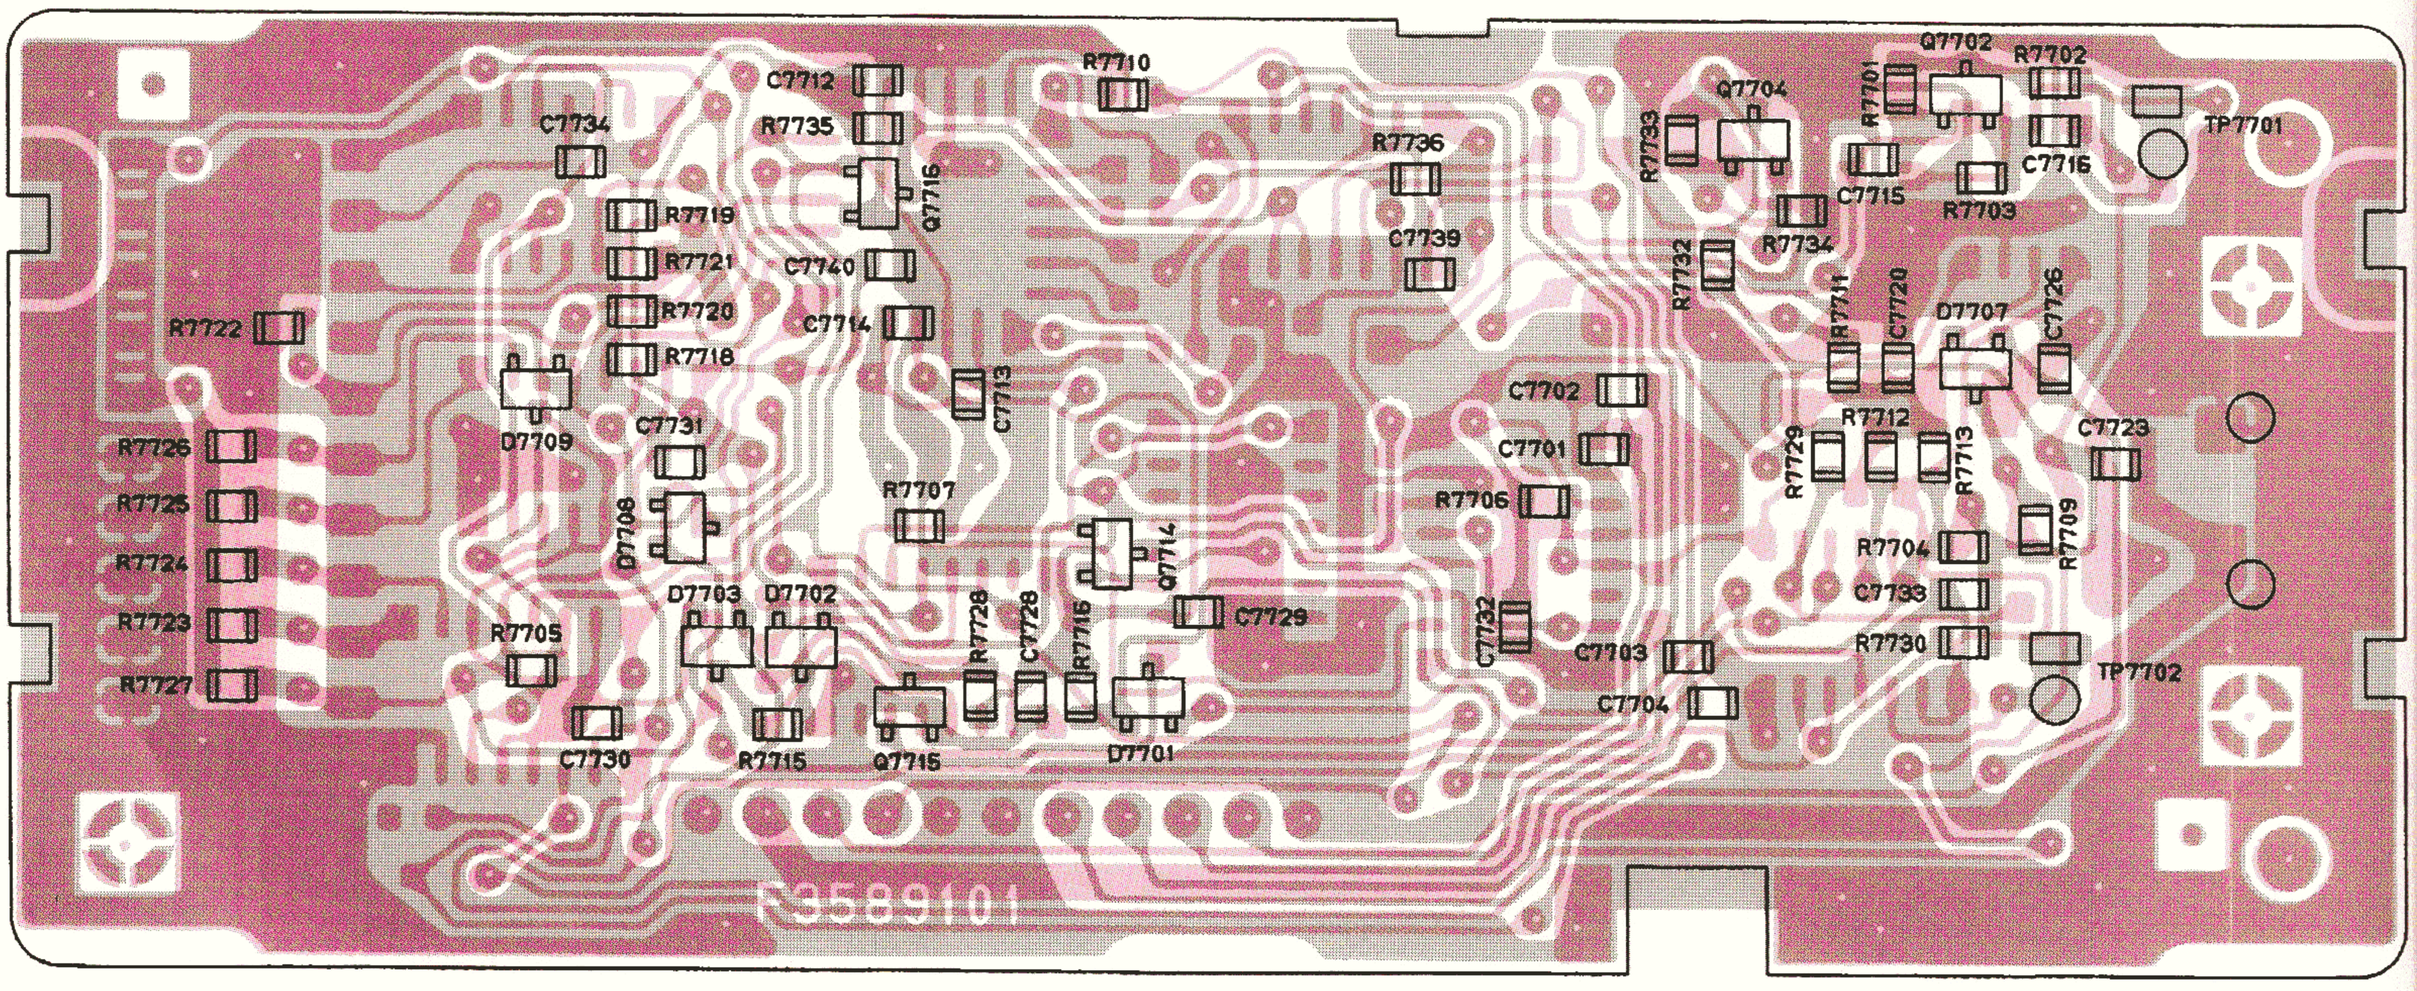

Chip Side